

Concert™ Boiler Control



P.O. Box 3244
 Lancaster PA 17604-3244
 Telephone 717-239-7642
 Fax 877-501-5212
www.ThermalSolutions.com

Instruction and Operation Manual

Form 105975-01; Revision 7
 April 15, 2016

Contents

Introduction

Quick Reference	2
Overview	3

Product Features

Boiler Sequence	5
Protection Features	7
Single Boiler Control	9
Multiple Boiler Control Sequencer	10

Front Panel

General Navigation	13
Status Screens	14

Installation

Quick Setup	16
Terminal Layout	17
Boiler-To-Boiler Network	19
Energy Management Interface	20

Setup & Tuning

Manual Operation	28
Parameter Adjustment	29
Response Tuning	42

Trouble Shooting

General Issues	46
Sensor Status	48
Limit String Status	49
Soft Lockouts (Holds)	50
Hard Lockouts	52
Using Archives	55

Specifications

General	60
Parameter Summary	62

Application

The Concert™ Boiler Control (Control) has been designed for commercial hot water boiler applications.

Intent

This instruction manual includes detailed functional, installation and setup information. The intended users are application engineers, I&O manual and brochure writers, development and specifying engineers and installing contractors.



Figure 1: Control Front Panel (Showing Home Screen)



Figure 2: Control

Introduction

Quick Reference

Application	Single Boiler	Multiple Boilers	Energy Management System (EMS) Boiler Control			Manual Operation
			Single Boiler Setpoint Input	Multiple Boilers Setpoint Input	Modulation Rate Input	
Setpoint						
Temperature Sensor	Supply	Header	Supply	Header	Ignored	Ignored
Setpoint	Operator	Operator	Input J8 (6-7) or Modbus*	Input J8 (6-7) or Modbus*	Ignored	Ignored
“On” and “Off” Point	Operator	Operator	Operator	Operator	Ignored	Ignored
Outdoor Air Reset	Option	Option	Ignored	Ignored	Ignored	Ignored
Domestic Hot Water Priority (DHWP)	Option	Option	Ignored	Ignored	Ignored	Ignored
Warm Weather Shutdown (WWSD)	Option	Option	Option	Option	Option	Ignored
Call For Heat						
Call For Heat	Based on Setpoints	Based on Setpoints	Based on Setpoints	Based on Setpoints	Input (RO) or Modbus	Based on Setpoints
Modulation Rate						
Firing Rate Demand	Internal	From Sequence Master	Internal	From Sequence Master	Input 4-20mA or Modbus*	Ignored
Remote Connection						
External Enable/Disable	Enable/Disable	Enable/Disable	Enable/Disable	Enable/Disable	On/Off	Ignored
Remote Control Input J8 (6-7) or Modbus*	No	No	Remote Setpoint	Remote Setpoint	Remote Modulation	Ignored
Additional Information	Page 9	Page 10	Page 20	Page 20	Page 20	Page 28

Table 1: Quick Reference

* Both Peer-To-Peer Network and Modbus Remote Control may be used at the same time.

Introduction

Overview

Boiler Control

The Concert Boiler Control (Control) contains features and capabilities which help improve heating system operation, and efficiency. By including unique capabilities, the Control can do more, with less field wiring, and fewer aftermarket controls and components – improving the operation of both new and replacement boiler installations.

Advanced Touch Screen Display

Boiler status and setup selections are available from an easy to use, full color, Touch Screen Display. In the event of a fault condition the user is guided by blinking touch buttons to help screens that explain the problem, cause, and corrective action. Operation evaluation and problem-solving is enhanced by historical capability including graphic trends, lockout history records, as well as boiler and circulator cycle counts and run time hours.

Archives

Evaluation, optimization, and troubleshooting are enhanced by the collection of an operational record. Operation history is provided by major variable historical trending, time and day stamped alarms, lockout history, cycles, run hours, and boiler loading profiles. These tools may be used on site or downloaded to a thumb drive for review off site.

Advanced Modulating Control

The Control modulates the boiler input by varying the fan speed. As the fan speed increases, so does the amount of fuel gas drawn into the blower. As a result, a fairly constant air-fuel ratio is maintained across all inputs. The Control determines the input needed by looking at both current and recent differences between the measured temperature and the setpoint temperature. As the measured temperature approaches the setpoint temperature, the fan will slow down and the input will drop. The Control also utilizes boiler return water and flue gas temperatures to adjust fan speed.

Built-in Safety Control

The Control includes safety controls designed to ensure safe and reliable operation. In addition to

flame safety controls the Control includes supply water temperature, differential water temperature, and stack temperature safety limits, as well as stepped modulation responses. Boiler modulation is adjusted when required to help avoid loss of boiler operation due to exceeding limits. Additionally, the Control monitors the safety limits and displays cause of boiler alarm trip and start delay.

Outdoor Air Reset

When selected the active setpoint is automatically adjusted based on outside air temperature, time of day, and length of demand (boost) settings. Outdoor air “reset” setpoint saves fuel by adjusting the water temperature of a heating boiler lower as the outside air temperature increases.

Auxiliary Equipment Control


The Control may be used to sequence the domestic hot water, boiler and system circulators, or fresh air damper. Circulators are automatically run for a 20 second exercise period after not being used for longer than 7 days. Circulator exercise helps prevent pump motor shaft seizing.

Energy Management System (EMS) Interface

The control accepts a 4-20mA dc input from the EMS system for either direct modulation rate or setpoint. A factory configured RS485 Modbus interface is available for Energy Management System (EMS) monitoring or control. Additionally the boiler Multiple Boiler Sequencer Peer-To-Peer Network may be used at the same time the EMS is monitoring and providing setpoint over the Modbus network.

Multiple Boiler Peer-To-Peer Network

The Control includes state-of-the-art modulating lead-lag sequencer for up to eight (8) boilers, capable of auto rotation, outdoor reset, and peer-to-peer communication. The peer-to-peer network is truly “plug and play”. Communication is activated by simply connecting a RJ45 Ethernet cable between boilers. The Control provides precise boiler coordination by sequencing boilers based on both header water temperature and boiler modulation rate. For example, the lead boiler can be configured to start a lag boiler after operating at 50% modulation rate for longer than an adjustable time. The boilers are modulated in “unison” (parallel) modulation rate to ensure even heat distribution.

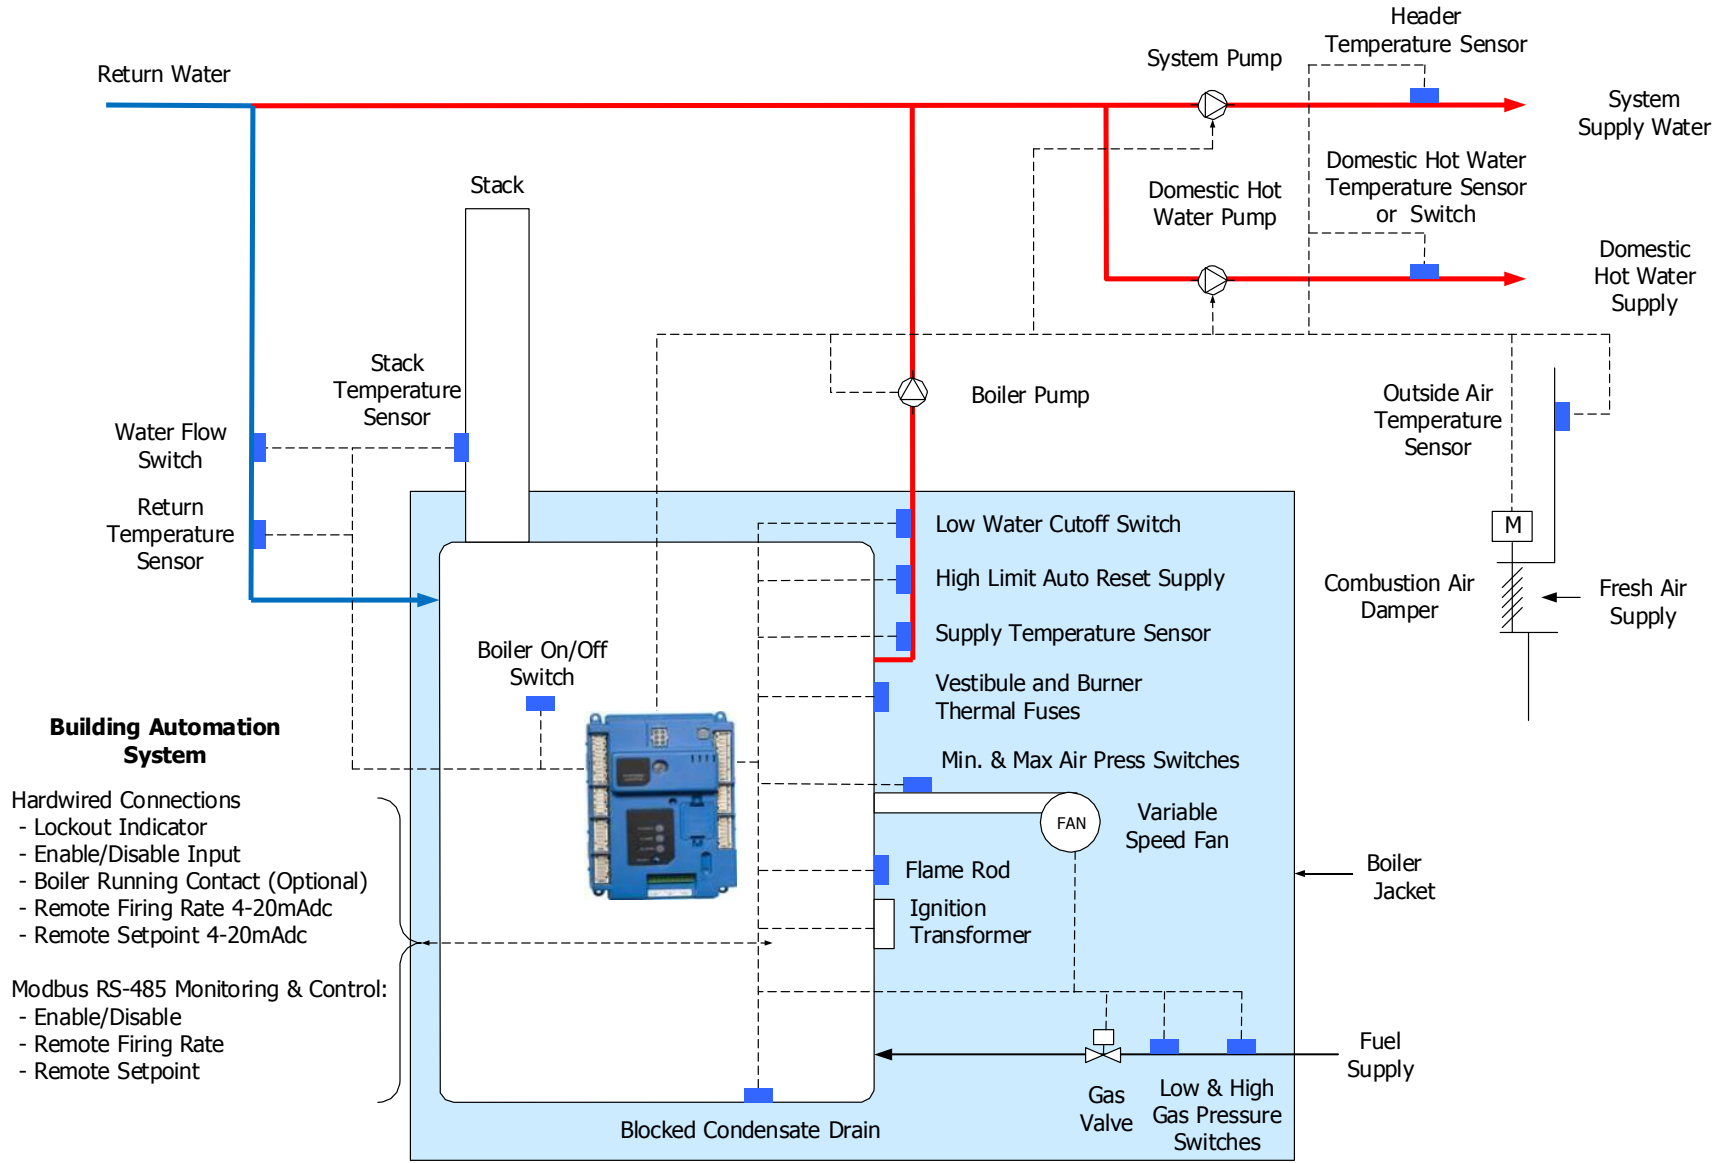

- Building Automation System**
- Hardwired Connections
- Lockout Indicator
 - Enable/Disable Input
 - Boiler Running Contact (Optional)
 - Remote Firing Rate 4-20mAdc
 - Remote Setpoint 4-20mAdc
- Modbus RS-485 Monitoring & Control:
- Enable/Disable
 - Remote Firing Rate
 - Remote Setpoint

Figure 3: Boiler Control

Product Features

Boiler Sequence

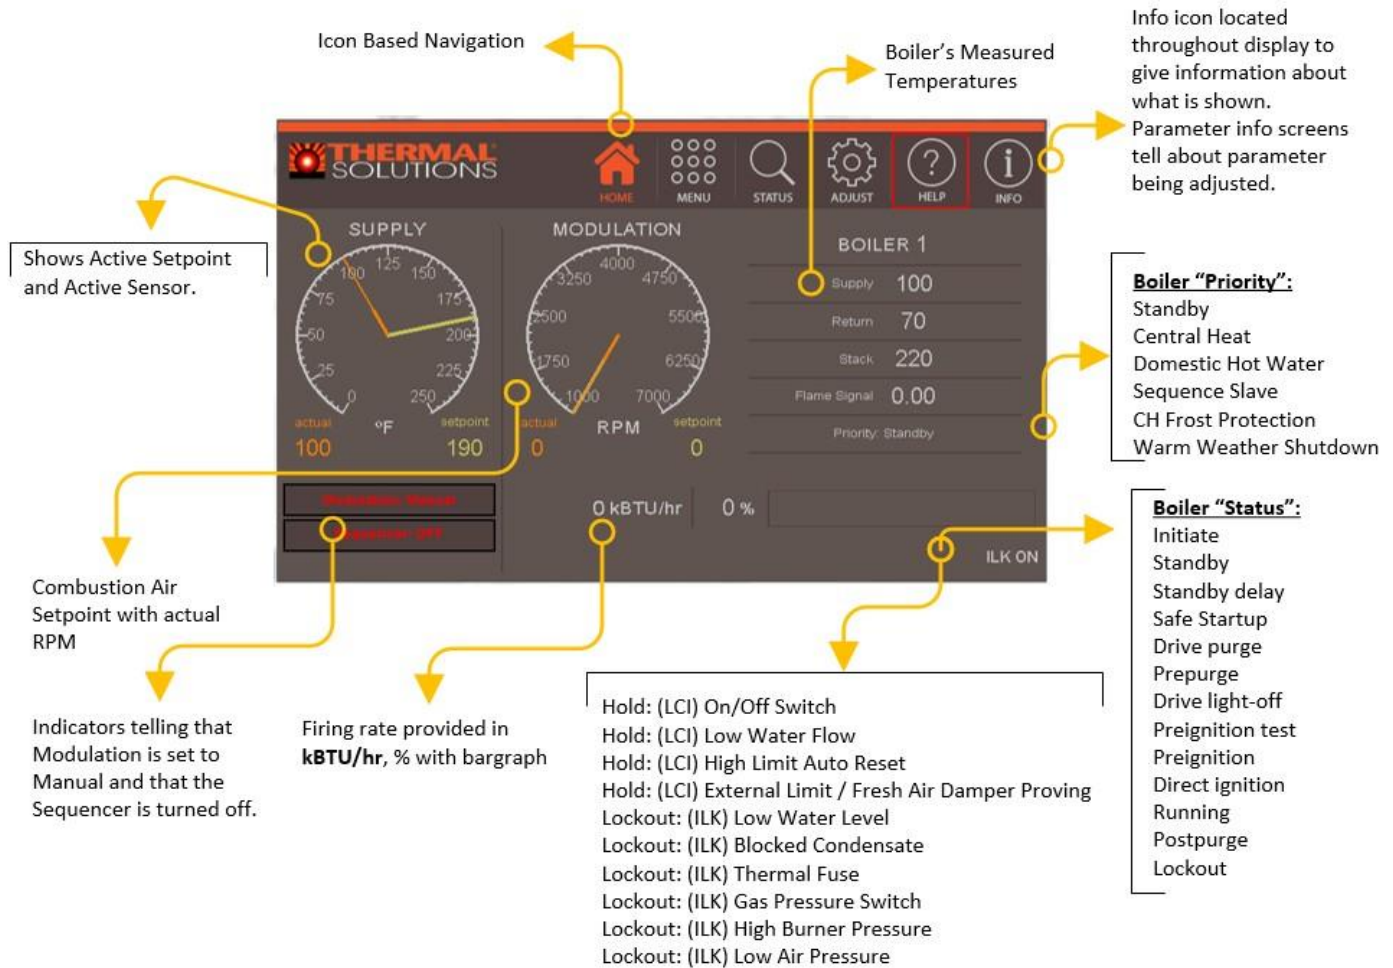


Figure 4: Home Screen Details

Boiler "Priority"

The Control accepts a call for heat (demand) from multiple places and responds according to the "Priority." When more than 1 demand is present the higher priority demand is used to determine active boiler settings. For example, when Domestic Hot Water (DHW) has priority the setpoint, "Diff Above", "Diff Below" and pump settings are taken from DHW selections. Active "Priority" is displayed on the "Home" screen above. Priority Order is shown in Table 2.


Table 2: Order of Priority

Priority	Display	Boiler Responding to:
1st	Sequencer Control	The boiler is connected to the peer- to-peer network. The boiler accepts demand from the Sequencer Master.
2nd	Domestic Hot Water	DHW call for heat is on and selected as the priority demand. DHW is always higher priority than Central Heat. It also has higher priority than the Sequencer Control when DHW priority is "enabled" and "Boiler Piped" IWH is selected.
3rd	Central Heat	Central Heat call for heat is on and there is no DHW demand or DHW priority time has expired.
4th	Frost Protection	Frost Protection is active and there is no other call for heat. Frost protection will be a higher priority than Sequencer Control if the Sequence Master has no active call for heat.
5th	Warm Weather Shutdown (WWSD)	WWSD is active and the boiler will not respond to central heat demands. DHW demand is not blocked by WWSD.

Product Features

Boiler Sequence

Boiler Sequence Status is shown on both the Home screen and the Status Screen. Once limits have been established the boiler start/stop sequence progresses as show in the graph below;

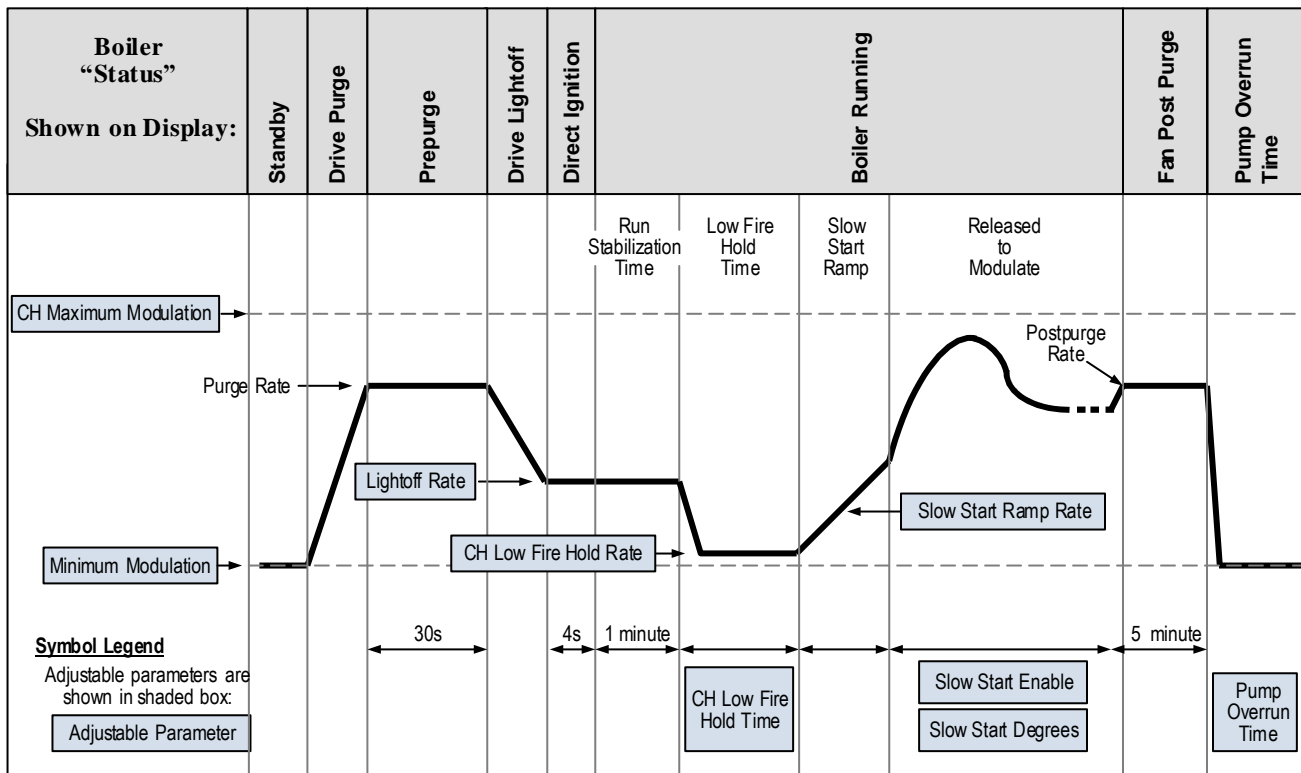

(Note; refer to Parameter Adjustment for additional information.)

Figure 5: Central Heat Start sequence (Typical for Domestic Hot Water)

Table 3: Boiler Sequence

Status:	Description
Standby	Boiler is not firing. Appropriate circulators are “On” if “Priority” is not standby. There is a Central Heat call for heat and the Supply temperature is greater than setpoint minus the “Diff Below”.
Prepurge	When supply temperature drops below setpoint minus the “Diff Below,” burner demand continues with following Status shown: Safe Startup: Flame circuit is tested. Drive purge: The blower is driven to the fan purge speed. Prepurge: After the blower reaches the fan purge speed setting the 30 second combustion chamber purge is conducted.
Direct Ignition	After purge time is complete the following Status is shown: Drive light-off: The blower is driven to light-off rate. Pre-ignition Test: After the blower reaches light-off rate a safety relay test is conducted. Pre-ignition: Spark is energized and it is confirmed that no flame is present. Direct Ignition: Spark and Main fuel valve are energized.
Running	After the flame is proven the sequence continues with run stabilization and, when selected, low fire hold time and slow start ramp. Once the field adjustable low fire hold time and ramp rate is completed normal boiler operation begins, modulation rate depending on temperature and setpoint selections.
Post-purge	When the call for heat ends the main fuel valve is closed and the blower is driven to the fan post-purge speed. After the blower reaches the fan post-purge speed setting the 5 minute second combustion chamber purge is conducted.

Product Features

Boiler Protection Features

Supply Water Temperature High Limit

The Control is equipped with internal operating control and high limit features. The Control monitors a dual element temperature sensor that is mounted in the supply water manifold and provides UL353 and UL1998 internal safety algorithms. If supply water temperature increases above the active setpoint plus diff above, default 180°F (82°C) (maximum setting 190°F (88°C)) the boiler is cycled off. If the temperature exceeds 210°F (99°C), a manual reset hard lockout results. Additionally, the supply temperature is monitored by a L4008A High Limit Aquastat set to recycle the boiler at 195°F with a 5°F differential.

Stepped Modulation

While the boiler is a slave responding to the internal Multiple Boiler Control Peer-Peer Network, an Energy Management System (EMS) demand, or has Header sensor selected as Central Heat Modulation Sensor the Control still monitors supply water temperature to prevent boiler over firing. The boilers maximum modulation is reduced from 100 to 0% if the supply water temperature increases from 190°F (88°C) to 200°F (93°C). If supply water temperature exceeds 200°F (93°C) a forced recycle results.

Sequence Master Stop All Boilers

All boilers are stopped without delay if the Call for Heat input is removed or if the header temperature is higher than 195°F (90.6°C) (field adjustable).

High Differential Temperature Limit

The Control monitors the temperature difference between the return and supply sensors. If this difference exceeds 80°F (45°C) the control begins to reduce the maximum blower modulation. If temperature difference exceeds 90°F (50°C) a forced boiler recycle results. If the temperature difference exceeds 100°F (56°C) the control will shut the unit down. The unit will restart automatically once the temperature difference has decreased and the minimum off time has expired. If the differential temperature exceeds the 100°F limit ten times the boiler manual reset Hard Lockout is set. Additionally, if the supply temperature rises faster than the 4°F (2°C) per second limit, a soft lockout is activated.

Return Higher Than Supply Temperature

The Control monitors the supply and return temperature sensors. If the return water temperature exceeds the supply water

temperature for longer than a limit time delay, the Control shuts down the boiler and delays restart. If the inverted temperature is detected more than five times the boiler manual reset Hard Lockout is set. This condition is the result of incorrectly attaching the supply and return piping.

Stack High Limit

The Control monitors a dual element temperature sensor that is mounted in the boiler vent connector and provides UL353 and UL1998 internal safety algorithms. If the flue temperature exceeds 210°F (99°C), the control begins to reduce the maximum blower modulation. If the flue temperature exceeds 220°F (104°C), a forced boiler recycle results. If the flue temperature exceeds 230°F (110°C), the boiler manual reset Hard Lockout is set.

Ignition Failure

The Control uses an external igniter. The Control monitors ignition using a burner mounted flame sensor. In the event of an ignition failure, the control will recycle. If ignition fails after a single retry, a manual reset Hard Lockout is set.

Central Heating System Frost Protection

When enabled, Frost Protection starts the boiler and system pump and fires the boiler when low outside air and low supply water temperatures are sensed. Outdoor Air setpoint is field adjustable. The Control provides the following control action when frost protection is enabled:

Device	Start Temperatures	Stop Temperatures
Boiler & System Pump	Outside Air < 32°F Supply Water < 45°F	Outside Air > 36°F Supply Water > 50°F
Boiler	Supply Water < 38°F	Supply Water > 50°F

Table 4: Frost Protection

FROST PROTECTION NOTE

The Control helps provide freeze protection for the boiler water. Boiler flue gas condensate drain is not protected from freezing. Since the Control may only cycle the system and boiler circulators individual zones are not protected. It is recommended that the boiler be installed in a location that is not exposed to freezing temperatures.

Product Features

Boiler Sequence

Boiler "Status" Shown on Display:		Temp > Setpoint					CH Enabled & Temp < Setpoint (lead boiler demand active)											
		Standby CH Disabled	Standby DHW Disabled	Standby DHW Enabled	Standby CH Enabled	Frost Protection On	Lockout	LCI Open	Warm Weather Shutdown	Standby	Limit Hold	Drive Purge	Prepurge	Drive Lightoff	Direct Ignition	Boiler Running	Pump Overrun Time	Fan Post Purge
Inputs	ILK OFF	Active																
	LCI OFF	Active																
	Warm Weather Shutdown							Active										
	Frost Protection On					Active												
	CH Enabled				Active		Active											
	DHW Enabled			Active														
Relay Outputs	Blower Output												Active					
	Alarm Relay						Active											
	System Pump			Active						Active								
	DHW Pump			Active														
	Isolation Valve			Lead Boiler Only		Active		Active		Active								
	Boiler Pump					Active		Active		Active								

Notes


- System Pump: Runs when boiler room has heat demand enabled. Is shut off when boiler is in Warm Weather Shutdown (WWSD).
- DHW Pump: Runs when there is a domestic demand.
- Isolation Valve: Opens boiler is a lead boiler and when the boiler has burner demand. Closes when the boiler is locked out or in WWSD.
- Boiler Pump: Runs when boiler has burner demand. Stops when the boiler is locked out or in WWSD.

Product Features

Boiler Protection Features

Limit Devices

The control monitors individual limit devices as shown in Figure 6 below. If any of these limits open the boiler will shut down and an open limit indication is provided. Additionally, the control monitors an air proving switch.

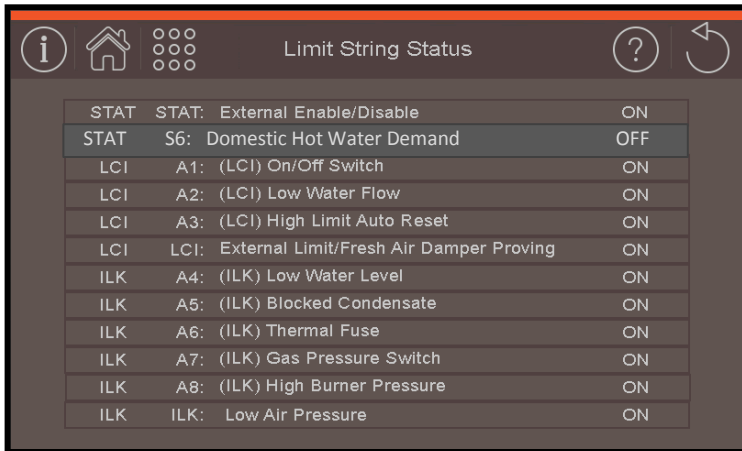

Note
 During the boiler start sequence the control requires the Air Proving Switch, "API" to be "OFF" before the blower starts and in the "ON" position after the blower starts. If the API is not in the required position the start sequence is halted or the boiler is shut down and the "Low Air Pressure" OFF limit indication is provided.

Figure 6: Limit Monitoring Screen Showing Central Heat Demand

Table 5: Limit String

Limit String Type	Description	Action
STAT	Heat Demand	<p>After a Heat demand is received, "ON" the control is enabled to fire to maintain water temperature at setpoint.</p> <ul style="list-style-type: none"> Heat demand may be received from "STAT" terminal for Central Heat demand, "S6" terminal for Domestic Hot Water demand, the Sequence Master, or EMS Modbus Inputs. A Heat Demand input ON initiates pumps and Fresh Air Damper outputs.
LCI	Load Control Input	<p>The boiler will not start if the LCI is OFF, when it is turned OFF during run the boiler shuts down.</p> <ul style="list-style-type: none"> Hold message is shown when LCI limit is OFF and Heat Demand ON. LCI Hold will never cause a manual reset lockout. Boiler may be disabled remotely by wiring an enable contact to the LCI "External Limit" terminals. When the Low Air Pressure Switch (APS) is proven OFF the LCI input turns ON and initiates blower start. When Low APS fails to turn ON, the control enters a manual reset Lockout state.
ILK	Interlock	<p>The boiler will not start if the ILK is OFF. When it is turned OFF during run the boiler enters a manual reset Lockout state.</p> <ul style="list-style-type: none"> The ILK must be ON within 1 minute after the LCI is ON. This time allows the blower to start and the air flow proving switch to turn ON. Failure to close will cause a manual reset lockout ILK OFF Lockout cause the Lockout Alarm contact to turn ON.

Product Features

Single Boiler Control

Control Options

- Modulating Sensors
 1. Supply
 2. Header
 3. Domestic Hot Water
- Modulation Setpoint
 - Outdoor Air Reset
 - Warm Weather Shutdown
 - Frost Protection
 - EMS interface
- Device Control
 - Boiler, System & Domestic pumps
 - Fresh Air Damper

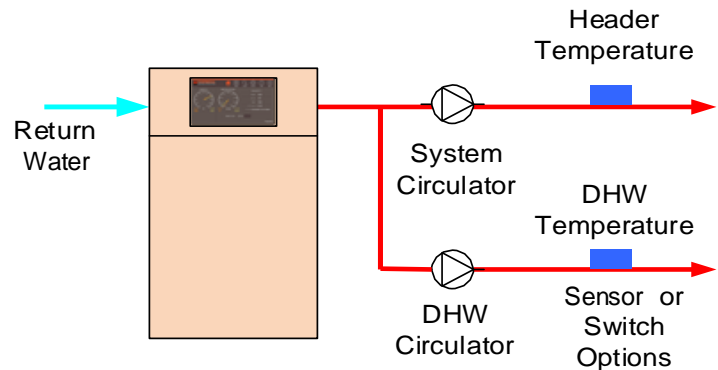


Figure 7: Single Boiler Hydronic Options

Modulation Setpoint

The Control starts and stops the boiler and modulates the boiler input from minimum (MBH) to maximum (MBH) in order to heat water to the active setpoint. The setpoint is determined by the priority (Domestic Hot Water, Central Heat, Frost Protection and Warm Weather Shutdown) and as described in the following paragraphs

Central Heat

User may select the Supply sensor or Header Sensor as the Modulation Sensor. Upon a Central Heat call for heat the setpoint is either the user entered Central Heat Setpoint, or automatically adjusted by Outdoor Air Reset, Energy Management System (EMS), supplied 4-20mAdc, or Modbus setpoint input.

Outdoor Air Reset

When selected the modulation rate setpoint is automatically adjusted based on outside air temperature, time of day input and demand duration (boost) settings. Outdoor air “reset” setpoint saves fuel by adjusting the active setpoint of a heating boiler lower as the outside air temperature increases.

Domestic Hot Water (DHW) Setpoint

User May select the Supply sensor or DHW Sensor as Modulation Sensor. Upon a DHW call for heat the setpoint is either the user

entered DHW setpoint or the time of day input DHW setpoint. The optimal value of this setpoint is established based on the requirements of the indirect water heater.

Domestic Hot Water Priority (DHWP)

Some boilers are used primarily for building space heating, but also provide heat for the domestic hot water users. When the outdoor temperature is warm, the outdoor reset setpoint may drop lower than a desirable domestic hot water temperature. Also, often it is required to quickly recover the indirect water heater. When DHWP is enabled, heating circulators are stopped, the domestic circulator is started and the domestic hot water setpoint is established in response to a domestic hot water demand. Priority protection is provided to allow the heating loop to be serviced again in the event of an excessively long domestic hot water call for heat.

Device Control

The Control may be used to sequence the domestic hot water, boiler and system circulators or fresh air damper.

Selecting This Control Mode

To select single boiler control set the following:

Press Adjust Menu > Sequence Master;
Select Sequence Master = Disabled.

Press Main Menu > EMS Interface > Remote Demand;
Select Modulating Source = Local.

Product Features

Multiple Boiler Control Sequencer

Control Options

- Modulating Sensors
 1. Header
- Modulation Setpoint
 - Outdoor Air Reset
 - Warm Weather Shutdown
 - Frost Protection
 - EMS interface
- Device Control
 - Boiler, System & Domestic pumps
 - Fresh Air Damper

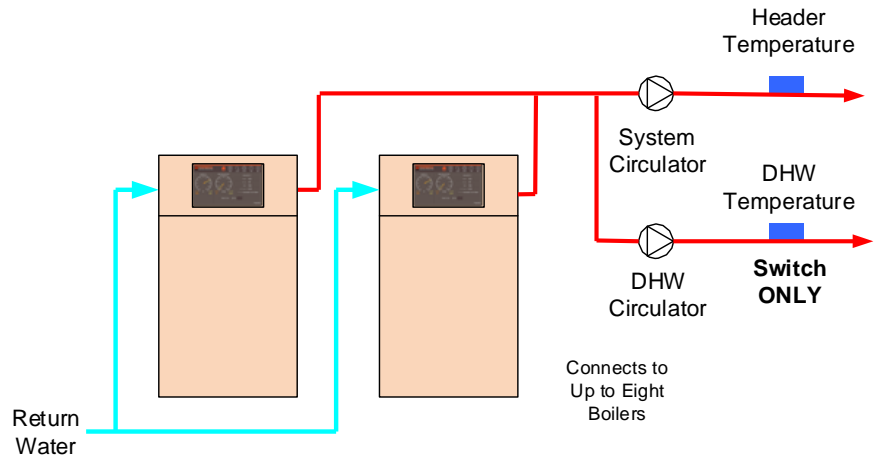


Figure 8: Multiple Boiler Hydronic Options

Sequencer Master

A single Control is parameter selected to be the Sequencer Master. The Sequence Master does not rotate. The call for heat, outdoor and header sensors, and common pumps are wired to the Sequencer Master “enabled” Control.

Lead/Slave Sequencing

The Sequence Master is independent of the “Lead” boiler. One boiler is a “Lead” boiler and the remaining networked boilers are “Slaves”. When demand is increasing, the Lead boiler is the first to start and the Slave boilers are started in sequential order (1, 2, 3,...) until the demand is satisfied. When demand is decreasing, the boilers are stopped in reverse order with the Lead boiler stopped last (... , 3, 2, 1). To equalize the run time the sequencer automatically rotates the Lead boiler after 24 hours of run time.

Customized Sequences

Normally, boilers are started and stopped in numerical order. However, custom sequences may be established to optimize the heat delivery. For example, in order to minimize boiler cycling, a large boiler may be selected to run first during winter months and then selected to run last for the remainder of the year.

DHW Two boiler Start

When the Indirect Water Heater (IWH) parameter is set to “Primary Piped” and the DHW Two Boiler Start parameter is set to “Enabled” two boilers are started without delay in response to a DHW call for heat. This feature allows rapid recovery of large IWH’s and multiple IWH’s.

Shared or Isolated DHW Demand

When the Indirect Water Heater (IWH) parameter is set to “Primary Piped” the Sequence Master sequences all required boilers to satisfy the DHW setpoint (default 180°F (82.2°C)). When “Boiler Piped” is selected only the individual slave boiler, with the wired DHW demand and pump, fires to satisfy the DHW setpoint.

Multiple Demands

The Sequence Master responds to Central Heat, DHW and frost protection demands similar to the stand alone boiler. For example, when selected and DHW priority is active, the sequence master uses DHW setpoint, “Diff Above”, “Diff Below” and pump settings. However, the Sequence Master always uses the Header sensor and does not use the DHW Sensor.

Optimized Boiler Modulation

Boiler firing rate is managed to increase smoothly as boilers are started. For example, when a second boiler is started the initial firing rate is 100%/2 or 50%, when the third boiler is started the firing rate starts at 200%/3 or 66%. After the initial start, the Sequence Master develops a unison firing rate demand based on its setpoint and header temperature.

Selecting This Control Mode

Under Adjust Menu, select Sequence Masterr and then select Sequence Master Enable.

Product Features

Multiple Boiler Control Sequencer (continued)

During low loads, the Sequence Master limits firing rates to a “Base Load Rate” to ensure modulating condensing boiler peak operating efficiency. Lower firing rates boost efficiency by helping increase the amount of flue gas water vapor condensation. The Control maintains a “Base Load Rate” until the last lag boiler is started. At this point, the “Base Load Common Rate” is released to allow boilers to modulate as required to meet heat load.

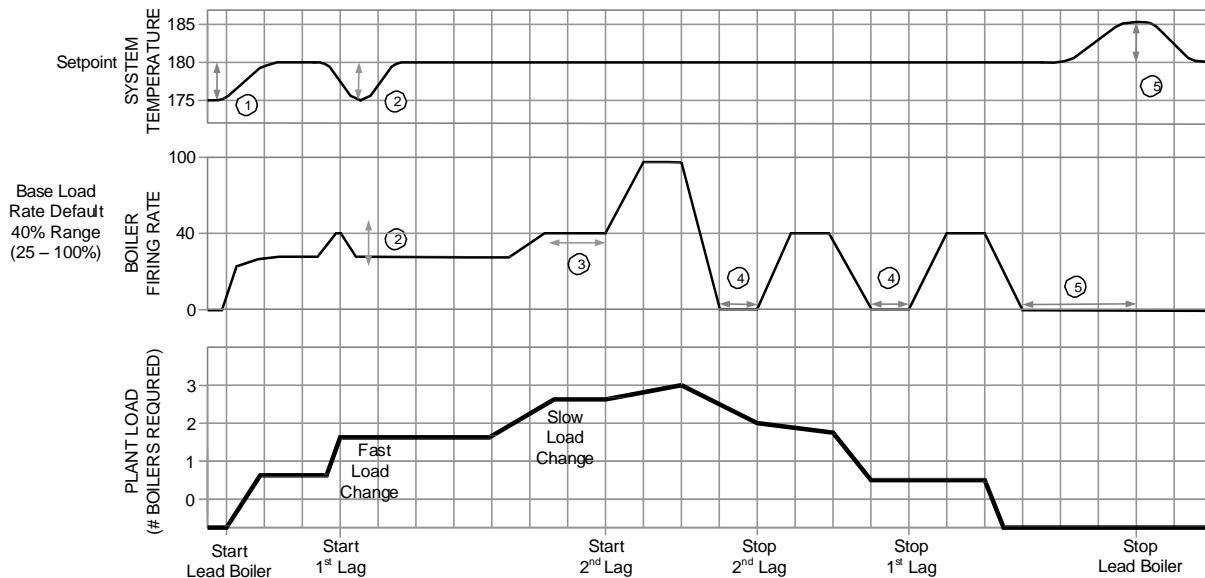


Figure 9: Boiler Start and Stop Peer-To-Peer Network Sequence Diagram
(3 boiler system shown, typical for up to 8 boilers)

Advanced Boiler Sequencing

After there is a Call for Heat input, both header water temperature and boiler firing rate percent are used to start and stop the networked boilers. The control starts and stops boilers when the water temperature is outside the user selected “Difference Above” and “Difference Below” settings. Also, in order to minimize temperature deviations, the control adjusts the number of boilers running based on the firing rate. This combination allows the boilers to anticipate slow load changes before they disrupt water temperature, yet still respond quickly to sudden load changes. These special sequencer features help reduce energy wasting system temperature swings and the resulting unnecessary boiler cycling.

- ① - **Lead Boiler Start**
Water temperature is below the setpoint by more than the “On Point” differential.
- ② - **Temperature Based Lag Boiler Start**
Water temperature is below the setpoint by more than the “Difference Below” parameter for longer than the adjustable time delay (“Boiler Start Delay” parameter).
- ③ - **Modulation % Based Lag Boiler Start**
The boiler modulation rate has been at the maximum firing rate for longer than twenty minutes.
- ④ - **Lag Boiler Stop**
The boiler modulation rate has been at minimum fire for longer than twenty minutes. Additionally, lag boilers are stopped when water temperature is above the setpoint by more than the “Difference Above” parameter for longer than the “Boiler Stop Delay” parameter.
- ⑤ - **Lead Boiler Stop**
The last boiler remains on line until the water temperature is above the setpoint more than the “Difference Above” for longer than the time delay.

Product Features

Multiple Boiler Control Sequencer (continued)

Improved Availability - The following features help improve the heat availability:

Backup Header Sensor

In the event of a header sensor failure the lead boiler's supply sensor is used by the Sequence Master to control firing rate. This feature allows continued coordinated sequencer control even after a header sensor failure.

Slave Boiler Rate Adjustment

Each slave boiler continues to monitor supply, return and flue gas temperatures and modifies the Sequence Master's firing rate demand to help avoid individual boiler faults, minimize boiler cycling and provide heat to the building efficiently.

Slave Boiler Status Monitoring

The Sequence Master monitors slave boiler lockout status and automatically skips over disabled boilers when starting a new slave boiler.

“Stand Alone” Operation Upon Master Failure

Individual boilers are configured to continue to operate in the event the Sequence Master Control is powered down, disabled or Boiler-to-boiler communication is lost. The following are design considerations for backup “Stand Alone” operation;

- **Enable/Disable**
Upon loss of the Sequence Master each boiler will automatically begin local control. This means it will operate only if it has a call for heat. For this reason slave boilers should have their “External Enable/Disable” J8 terminal 1 to 3 jumpered. In the event of loss of Sequence Master the slave boiler will have demand to run.
- **Modulation**
Once running the Slave boiler will use the selected central heat modulation sensor and setpoint to produce heat for the building. Optionally, slave boilers may have a separate header sensor wired and select the “Central Heat Modulation Sensor” parameter as Header Sensor”. This will allow continued header water temperature control.
- **Pumping**
Consideration must be given to how the system pump is powered. If the Sequence Master enabled boiler is powered down, how will the system pump be operated? It may be required to wire the system pump to multiple boilers.

Once the Sequence Master is restored to operation the individual boilers automatically resume their position as sequencer slaves.

Front Panel

General Navigation

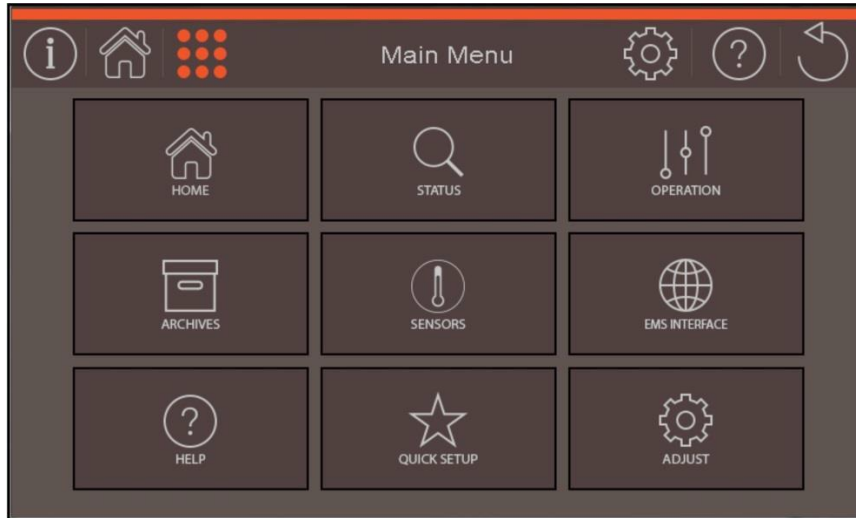


Figure 10: Main Menu

Main Menu

The Main Menu provides access to all display functions. It is accessible from the Home Screen. The following major user interface areas are accessed from the Main Menu:

STATUS

Provide a “walk” through boiler operation. These screens provide an overview of boiler and networked boiler operation. The status screens include “Load Profile” for Central Heat and Domestic Demands. These profiles allow the user to review the Run Hour (%) versus Load (%). The “Load Profile” along with run hours and cycles provides a complete picture of boiler status.

OPERATION

The operation screens allow the user to take manual or automatic control of the unit. These screens are intended to allow a technician to set firing rate to support combustion testing and provide trending and parameter adjusting to support fine tuning the boilers response to load changes. Operation screens may be used to speed up or slow down the boilers response to fast or slow system load changes.

ARCHIVES

The Archives collect the history of how the boiler has operated and provides tools to review and improve system operation;

- A historical trend – Up to four (4) months of data is collected and may be viewed on screen or saved to a Thumb Drive.

- Lockout History – provides data on up to 15 manual reset Lockouts. Data collected includes cause of boiler trip, run hour and status when lockout occurred.
- Cycle & Run Time History – collects the usual summary of cycles and hours of boiler and pump operation. All cycles and run hours other than the controller quantities may be reset to aid in identifying improvements made.
- Alarm History – limit string faults, holds, lockouts and other alarms are recorded with time and date stamp.
- Thumb Drive Operation – these screens provide ability to save or load parameters as well as alarm and trend data.

SENSORS

Status and details are provided on all sensors connected to the Control.

EMS INTERFACE

EMS setup options and status is provided.

HELP

Active alarms and corrective actions are provided.

QUICK SETUP

Commonly required parameters are presented for quick review and adjustment.

ADJUST

Each adjustable parameter is presented for adjustment. Proper login is required.

Front Panel Status Screens

Boiler Status screens are the primary boiler monitoring screens. The user may simply “walk” through boiler operation by repeatedly selecting the right or left “arrow” symbol. These screens are accessed by selecting the “status” button from the “Home” or “Menu” screens.

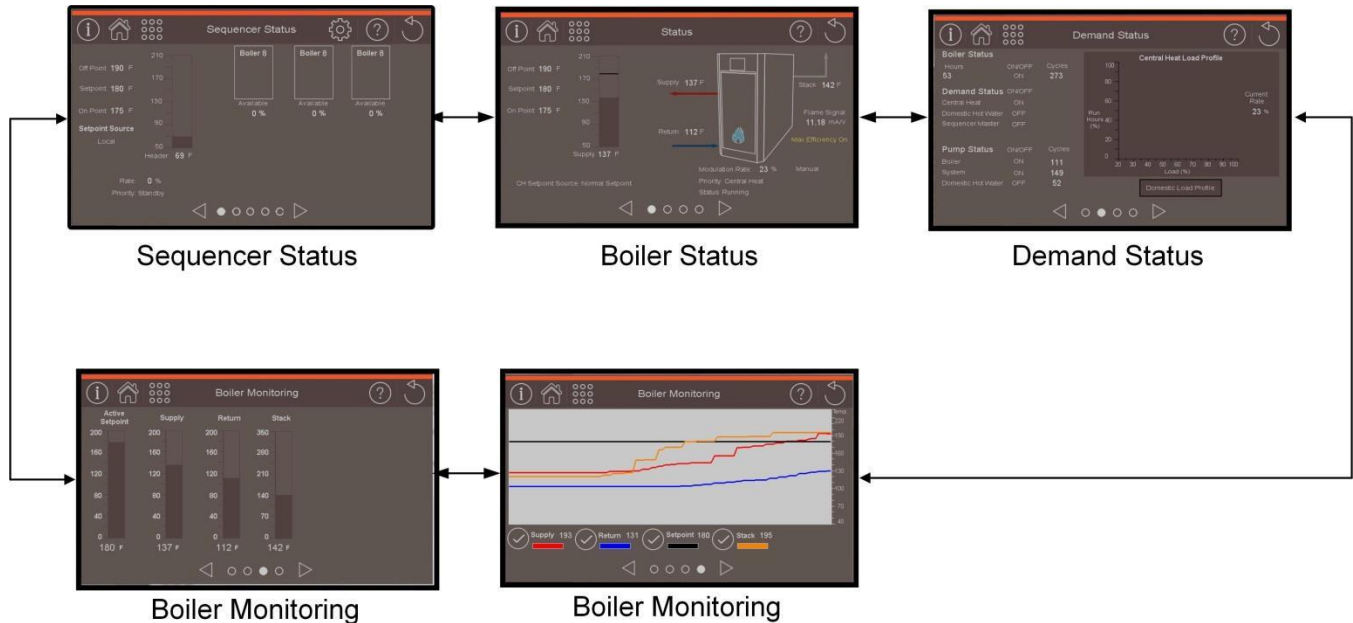


Figure 11: Status Screen Navigation

Sequencer Status

This screen only appears when the Sequencer Master is enabled. It shows data involved with the network including active setpoint and sensor, the network priority, and the setpoint source.

This status screen also displays all boilers in the boiler to boiler network. For each boiler, the status screen will tell it's assigned boiler number, current status, firing rate, and whether it is the current Lead boiler.

Boiler Status

This screen gives an overview of the current status of the boiler. The active setpoint and sensor which the boiler is currently modulating based on are displayed using a bar graph & numeric values.

Also displayed are all current sensors installed in the boiler. These sensors will display red if there is an issue with any of them.

Additional information shown on this page includes current firing rate, boiler priority, current status, and setpoint source.

Demand Status

This page gives the demand status of the Central Heat, Domestic Hot Water, and Sequencer (Lead Lag). Along with this status, the boiler run hours, on/off status, and cycles are also shown.

Pump information is also included on this page including on/off status and cycles. Frost Protection status and Exercise will also appear when used.

Additionally, the Load Profiles are on this page, which give historic data on the modulation of the boiler. This graph shows the percent of the total run hours the boiler spends modulating at each rate (%).

Boiler Monitoring

This is an overview of all sensors installed on the boiler represented as bar graphs. Numeric values are also provided for accurate readings.

Front Panel

Status Screens

The status screen shows data relevant to current boiler operation. All installed sensors are shown on this page as well as current modulation %, setpoint, active sensor, and much more. A detailed screen map is shown below.

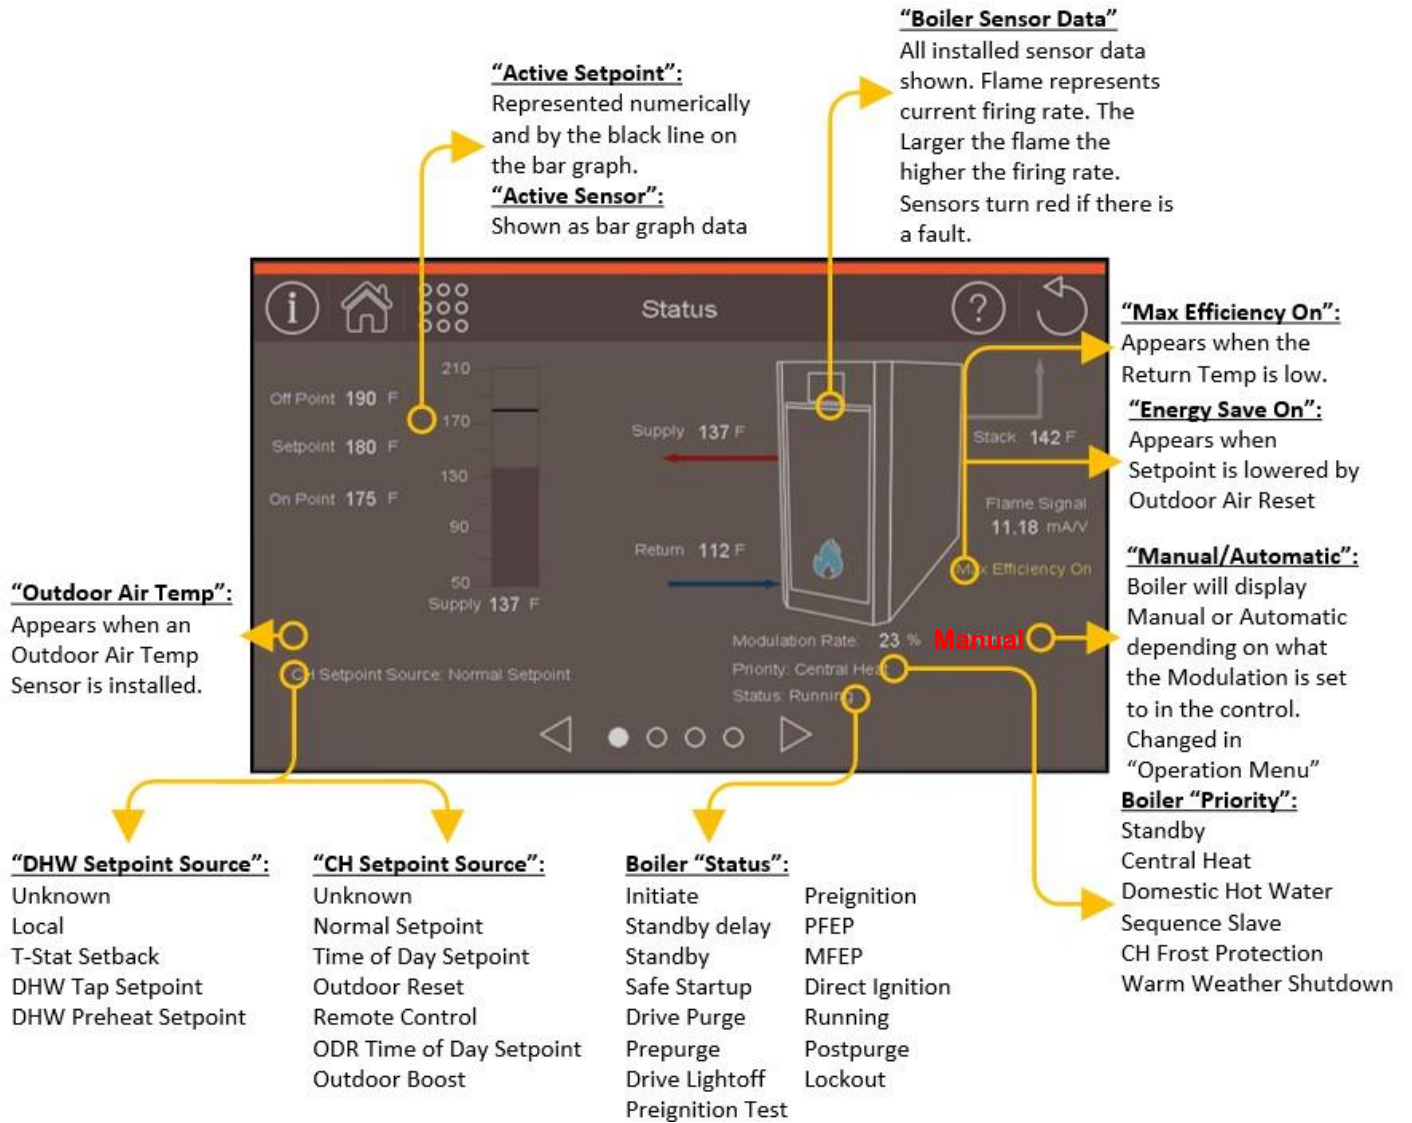


Figure 12: Status Screen Detail

Installation

Quick Setup

The Quick Setup Menu is accessed from the Main Menu Screen. The Quick Setup menu allows the user to review and adjust the most commonly adjusted parameters, such as Setpoints and pump output settings, from one location. Refer to Parameter Adjustment section for additional information.

Setpoints

Factory Setting	Range / Choices	Parameter and Description
180	50 to 190 (°F)	Central Heat Setpoint
10	3 to 29 (°F)	Central Difference Above
5	3 to 29 (°F)	Central Difference Below
180	50 to 190 (°F)	Domestic Hot Water Setpoint
10	3 to 29 (°F)	Domestic Difference Above
5	3 to 29 (°F)	Domestic Difference Below
32	-50 to 50 (°F)	CH Frost Protection Setpoint
70	20 to 100 (°F)	Warm Weather Shutdown Setpoint
195	50 to 195 (°F)	Stop All Boilers

Comfort

Factory Setting	Range / Choices	Parameter and Description
30 (°F)	-50 to 32 (°F)	Minimum <u>Outdoor</u> Temperature
70 (°F)	35 to 100 (°F)	Maximum <u>Outdoor</u> Temperature
110 (°F)	70 to 180 (°F)	Low <u>Water</u> Temperature
130 (°F)	50 to 185 (°F)	Minimum Boiler Water Temperature

Response

Factory Setting	Range / Choices	Parameter and Description
3	1 to 5	Central Heat Response Speed
0	0 to 30 Minutes	Central Heat Low Fire Hold Time
3	1 to 5	Domestic Heat Response Speed
0	0 to 30 Minutes	Domestic Heat Low Fire Hold Time

Hydronic System

Factory Setting	Range / Choices	Parameter and Description
Boiler Pump Any Demand	Never Any Demand CH, OFF DHW Demand	Boiler Pump
System Pump Any Demand	System Pump: Never System Pump: Any Demand System Pump: Central Heat, No Priority System Pump: Central Heat, Optional Priority Fresh Air Damper	Spare Output J4, 6-7
DHW Pump Primary Loop Piped IWH	DHW Pump: Never DHW Pump: Primary Loop Piped IWH DHW Pump: Boiler Piped IWH Fresh Air Damper	Spare Output J4, 6-7

Installation

Terminal Layout


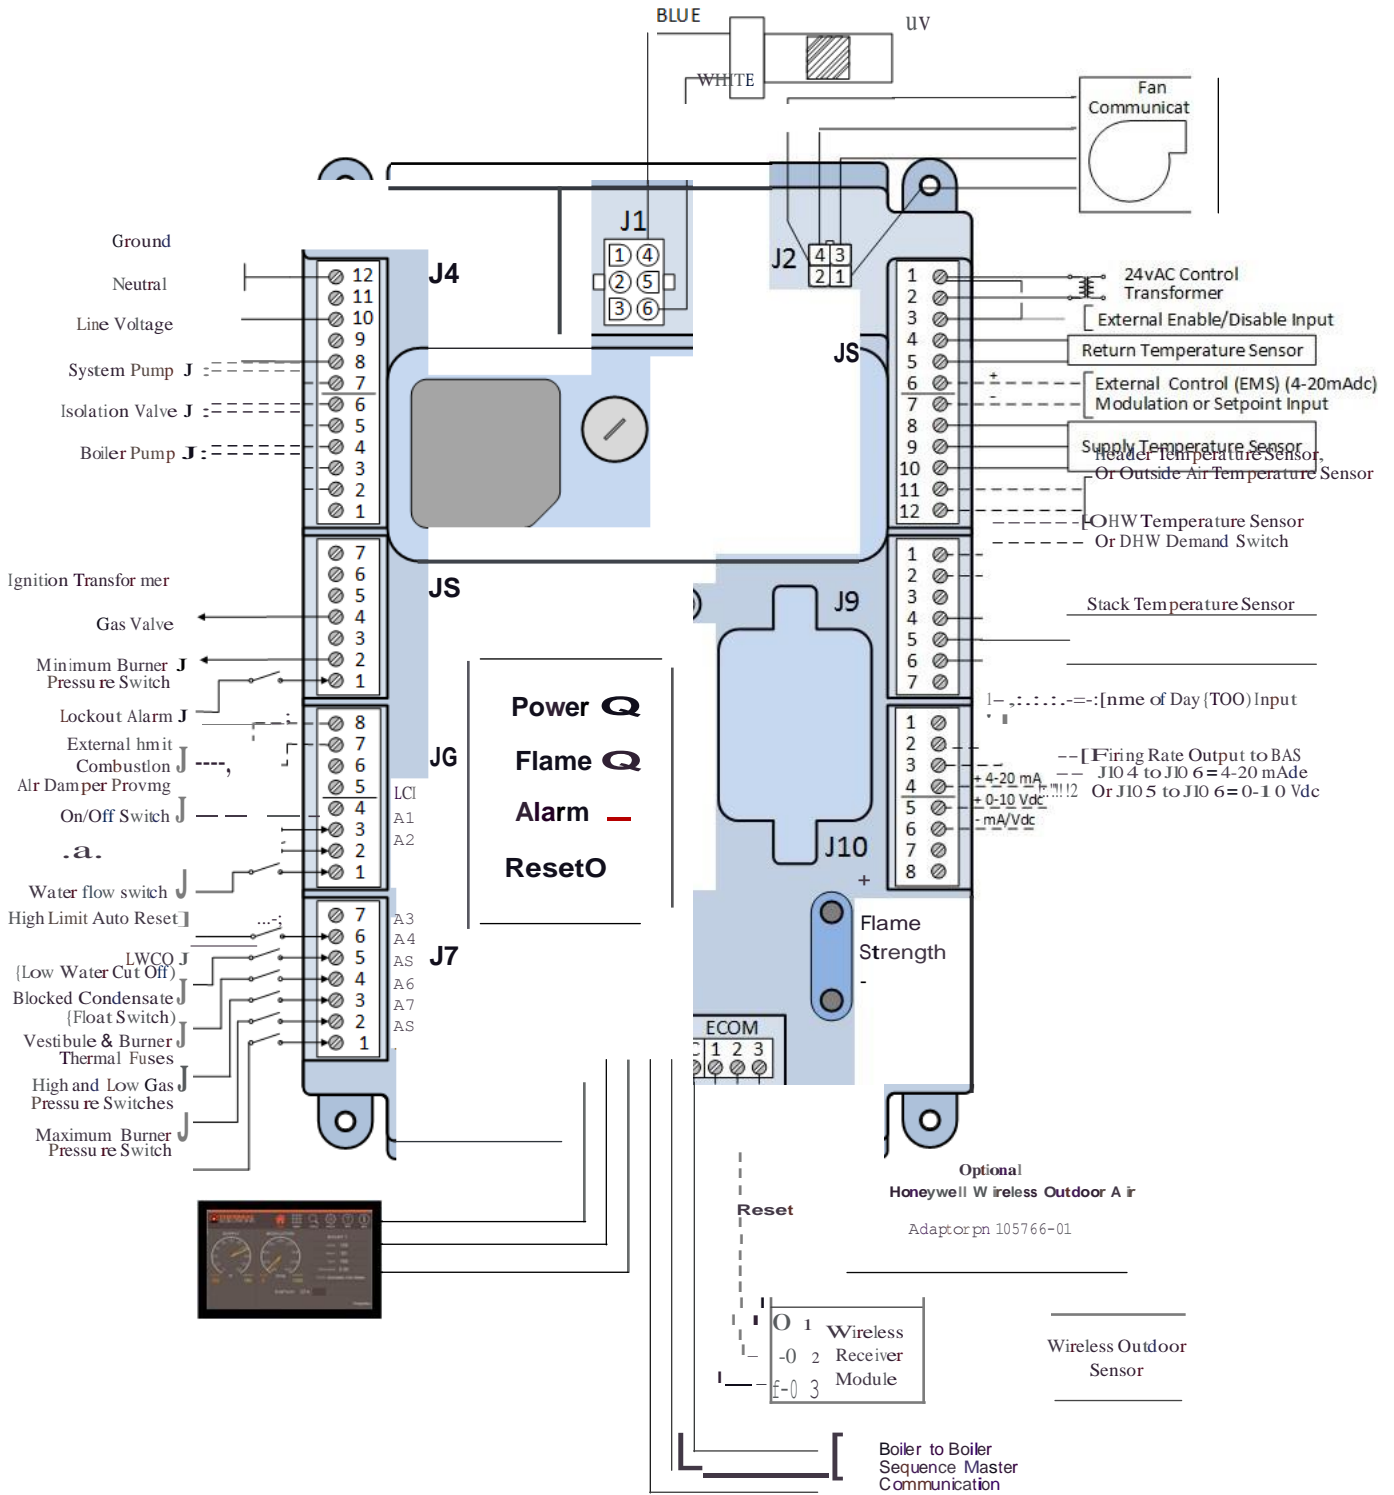


Figure 13: Control Terminal Layout and wiring notes

Installation

Terminal Layout

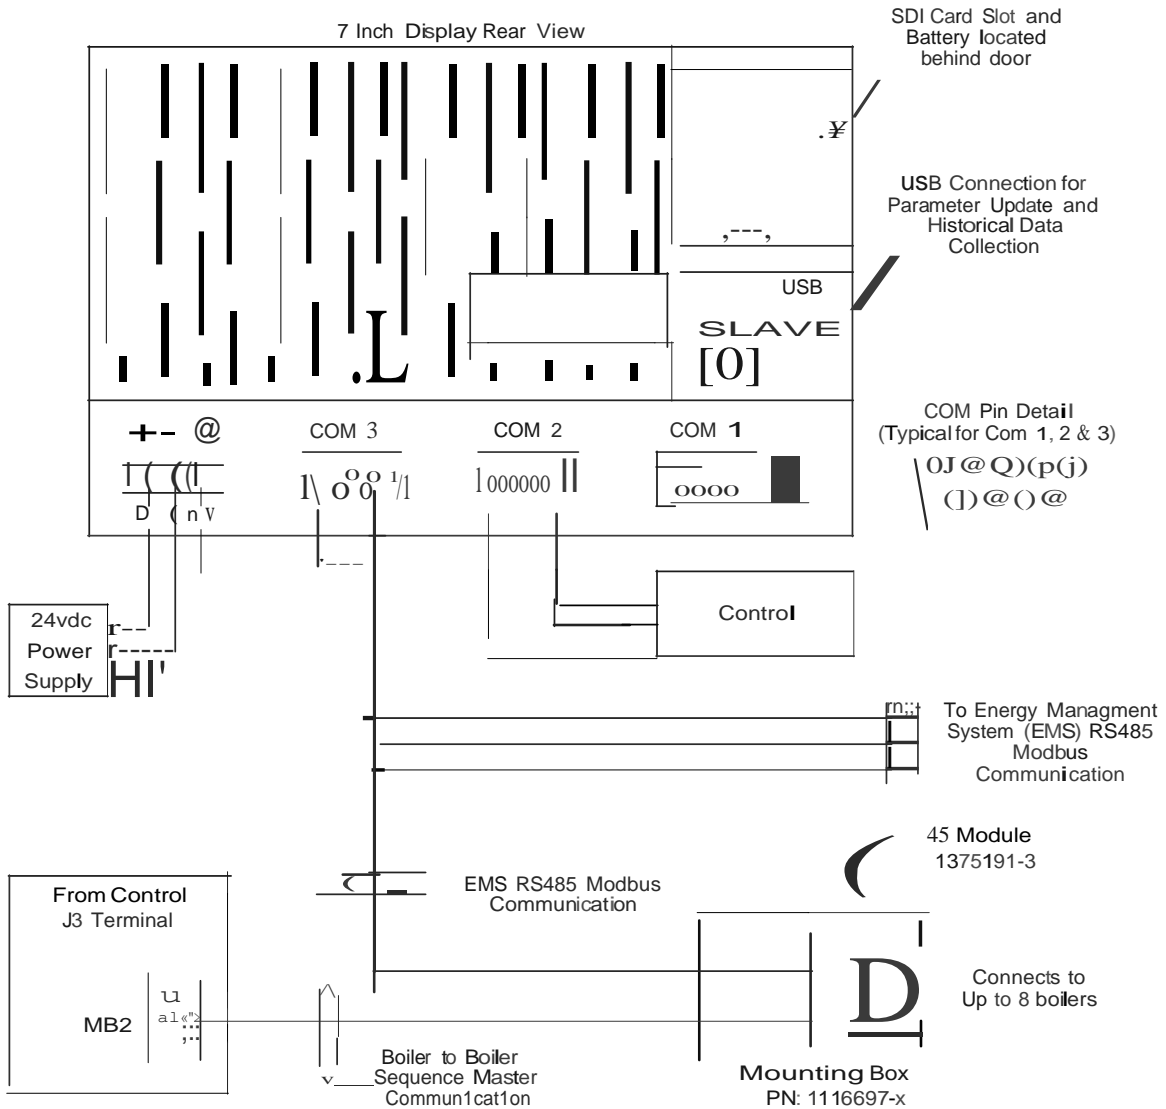

Note
 The Sequence Master communicates to all networked boilers using the MB2 Connection on each boiler. Separately the Display COM 3 port on each boiler is used to communicate RS485 Modbus to the Energy Management System (EMS).
 These communications are electrically separate from each other and make the connection between boilers using a common RJ45 Module and Ethernet Cable.

Note – Display to EMS wiring ;

Function	COM 3 Terminal	RJ45 Module Terminal
RS485 (+)	Pin 1	A Green/White
RS485 (-)	Pin 6	A Orange/White
Ground	Pin 5	A Green

Note – Control to Peer-to-peer wiring ;

Function	J3 Terminal	RJ45 Module Terminal
RS485 (+)	MB2 A	Brown
RS485 (-)	MB2 B	White/Brown
Ground	MB2 C	A Green

NOTE: Use AWG22 Gauge wire between display and RJ45

Figure 14: Display Terminal Layout and wiring notes

Installation

Boiler-To-Boiler Network

The Boiler-To-Boiler Network allows the Control's Internal Sequence Master to communicate boiler information, including modulation rate and on/off commands, using a standard Ethernet cable.

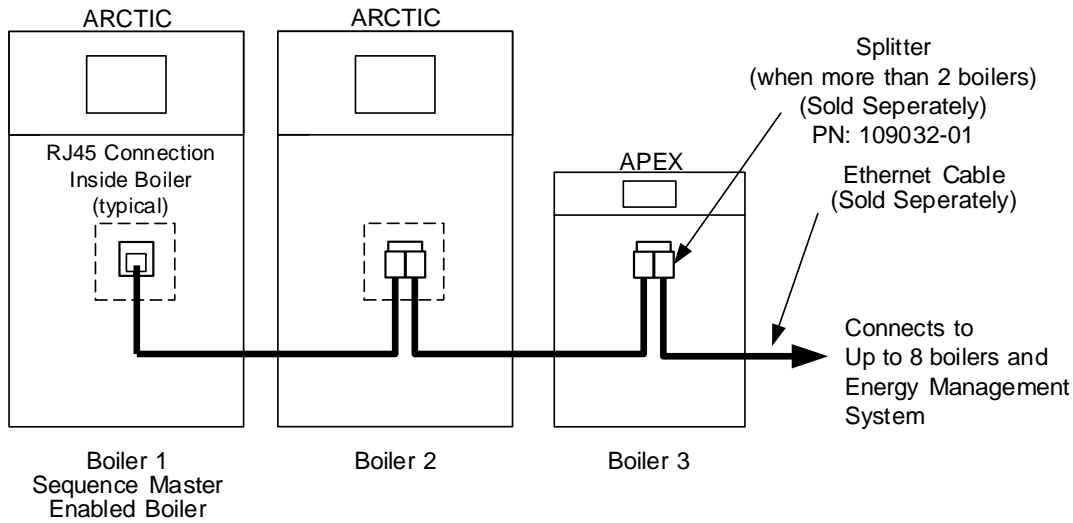


Figure 15: Communication Network Connections

Table 6: Sequence Master Setup Procedure

Step	Description	Comments
1	Install and wire the Header Sensor	Wire a header sensor to Control J8 terminals 11 &12 of the Sequence Master Enabled Boiler. NOTE This step cannot be skipped. The Sequence Master cannot be enabled unless a Header Sensor is installed.
2	Install Ethernet Cables between boilers	Use standard Ethernet type cables to make connection between boilers. When more than two boilers are connected an RJ45 splitter may be used to connect the boilers. Refer to Figure 15.
4	Set Unique Boiler Addresses	Assign all boilers a unique Boiler Address using any number from 1 through 8. (Found in Main Menu > Adjust > Sequence Slave) NOTE When two boiler's addresses are the same undesirable simultaneous operation occurs.
5	Enable 1 Boiler Master	Enable only one Control's Sequencer Master. (Found in Main Menu > Adjust > Sequence Master) WARNING When more than one Sequencer Master is enable erratic behavior will result.
9	Confirm Communication	Power down all boilers and power up Sequence Master Enabled boiler first. From the Sequence Master Enabled Control's Home Screen "press" the Status button. The Sequencer display shows the boiler address of the communicating boilers. If a boiler is not shown, check Ethernet cable connections and confirm all boilers have unique addresses.

Installation

External Sensors

Header Sensor (P/N 101935-01 or 103104-01)

A header sensor must be installed and wired to the Master Sequencer “enabled” Control. The header sensor is installed on the common system piping and provides blended temperature information to the Sequence Master. Refer to boiler manual’s piping diagram for installation location and Figure 15a or 15b for installation detail.

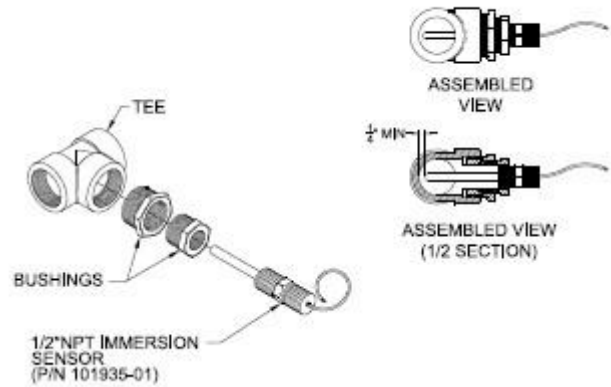


Figure 15a, Direct Immersion Type Header Sensor Installation Detail

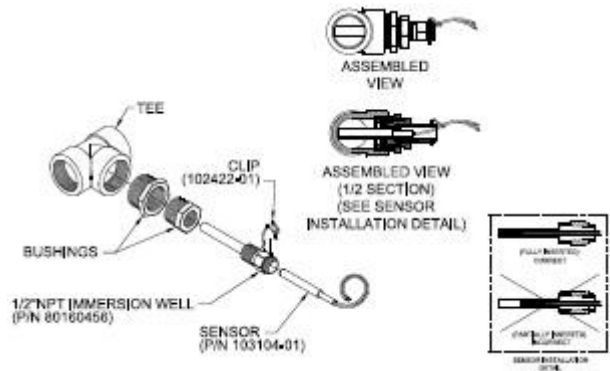


Figure 15b, Thermowell type Header Sensor Installation Detail

Installation

Energy Management Interface

The control system has a full featured ability to interface with an Energy Management System (EMS). The control system allows remote control and monitoring via RS485 Modbus or through direct wiring.



Figure 16:
Remote Demand Setup Screens

(From Display “Press” Menu > EMS Interface > Remote Demand to access)

Factory Setting	Range / Choices	Parameter and Description
Local	Local, 4-20mA, Modbus	Modulation Source The boiler can modulate (vary boiler heat input) based on local or remote (4-20mA or Modbus) signals. Modulation begins after the start sequence finishes and the boiler is released to modulate. Modulation Source has the following selections: Local Local setpoint and control is used to create firing rate. 4-20mA Input wired to J8 terminals 6 and 7 is used as modulation rate. Modbus Modbus signal is used as modulation rate.
Local	Local, 4-20mA, Modbus	Central Heat & Lead Lag Setpoint Source The setpoint may be based on local (customer entered value or outdoor reset) or remote (4-20mA or Modbus) signals. Setpoint Source has the following selections: Local User entered CH Setpoint or Reset Curve provides the setpoint. 4-20mA Input wired to J8 terminals 6 and 7 is used as setpoint. Modbus Modbus signal is used as setpoint.
Local	Local, Modbus	CH Demand Switch The Central Heat demand (Central Heat Enable/Disable) can be directly wired to the Control or provide by the Modbus interface. Local Central Heat demand is present when a contact closure is received between J8 terminals 1 and 3 . Modbus Modbus signal provides demand.
Local	Local, Modbus	LL Demand Switch The Lead Lag Master’s demand (Central Heat Enable/Disable) can be directly wired to the Control or provide by the Modbus interface. Local Lead Lag demand is present when a contact closure is received between J8 terminals 1 and 3 . Modbus Modbus signal provides demand.
130 F	50 – 185 F	Central Heat 4-20mAdc Setup, 4 mA Water Temperature Sets the Central Heat Temperature Setpoint corresponding to 4 mA.
180 F	50 – 185 F	Central Heat 4-20mAdc Setup 20 mA Water Temperature Sets the Central Heat Temperature Setpoint corresponding to 20mA.
1	Disable PWM to 4-20mA PWM to 0-10V LL Rate to 4-20mA LL Rate to 0-10V	Analog Rate Tracking – allows external system to monitor firing rate. Disable No signal is sent to terminals PWM to 4-20mA Firing rate provided using 4-20mA signal PWM to 0-10V Firing rate provided using 0-10V signal LL Rate to 4-20mA Sequence Master demand is provided using 4-20mA signal LL Rate to 0-10V Sequence Master demand is provided using 0-10V signal

Installation

Energy Management Interface

Remote Demand Setup Screens Continued:

Factory Setting	Range / Choices	Parameter and Description
0.1	0 - 10	Analog Input Hysteresis This parameter adjusts the amount of hysteresis applied remote control input when modulation source is set to 4-20mA. A zero value disables this feature.
10	0 - 10	Analog output hysteresis This parameter adjusts the amount of hysteresis applied to the PID output when a non-PWM modulation is selected. The value determines how much the PID is required to change in a new direction before the output will change. A zero value disables this feature.

Connecting a EMS Modbus Interface

Table 7: Energy Management System Interface Procedure

Step	Description	Comments
1	Install Ethernet Cables between boilers	Use standard Ethernet type cables to make connection between boilers. When more than two boilers are connected an RJ45 splitter may be used to connect the boilers. Refer to Figure 15. NOTE The same Ethernet cable that connects the Boiler-To-Boiler Sequence Master also connects the EMS Modbus signals. Refer to Figure 14 for detail.
2	Enable EMS Communication	Communication must be enabled. Go to Modbus menu (Press Menu > EMS Interface > Modbus Setup) and “Press” EMS Enable/Disable to Enable.
3	Set Unique Modbus Addresses “ Comm HMI Station ”	The EMS Modbus address may be independent to the Boiler number or boiler address. Go to Modbus menu (Press Menu > EMS Interface > Modbus Setup) and select EMS Modbus Parameters. Follow on screen instructions. NOTE Each boiler must have a unique Comm HMI Station address.
4	Adjust Communication Parameters	Communication Parameters are adjustable. Go to Modbus menu (Press Menu > EMS Interface > Modbus Setup) and select EMS Modbus Parameters. Follow on screen instructions. NOTE Baud Rate and Parity must match the EMS settings for communication to be established.
9	Confirm Communication	The display provides a list of all EMS signals. Go to Modbus menu (Press Menu > EMS Interface) and select Points List. Use the list to verify signals sent and received from the EMS.

Installation

Energy Management Interface

The following Parameters are adjustable within the System menu of the display. Access System menu by going to the Main Menu > EMS Interface > Modbus Setup. Select EMS Modbus Parameters for directions on how to edit EMS Parameters. **READ ALL DIRECTIONS** before entering the System Menu.

Display Communication Port Setup;

COM Port:	Com 1	Com 2	Com 3
Com Port Configure For	Not Used	Control	EMS
Port Type	Not Used	Modbus Master	Modbus Slave
Special Notes	n/a	Caution Do not change any of these settings. Loss of communication to control could result.	Note This is the port to adjust settings to suit the EMS System
Comm HMI Station This is Modbus Slave Address.	n/a	0 (not used)	1
COM Mode	n/a	RS 485	RS 485
Baud Rate	n/a	38400	38400
Stop Rate	n/a	1 bit	1 bit
Data Bits	n/a	8 bit	8 bit
Parity	n/a	None	None
Comm Delay	n/a	10 ms	10 ms
Comm Timeout	n/a	1000 ms	1000 ms
Comm Retry Times	n/a	2	2
PLC Default Station This is address Modbus Master is reading.	n/a	1	1 (not used)
Baud Rate Fine Tuning	n/a	0	0

Installation

Energy Management Interface

Table 8: Modbus Signal List

The following is the list of available Modbus signals;

Register addresses start at 0 (zero) based on the Modbus-IDA protocol specification. For more traditional addressing scheme (starting at 40001) a value of 40001 should be added to the decimal address for each register.

Modbus Register	Protocol Name	Description	Read (R)/ Write (W)
Enable / Disable			
577	Central Heat Enable/Disable	Central Heat Enable/Disable 0 = Disable 1 = Enable When this register is not written every “Modbus Command Time Out” parameter seconds (default 30 seconds), CH Modbus Stat is reverted to 0, no demand.	W
563	LLCH Modbus Stat	LL CH Modbus STAT 0 = no demand 1 = demand When this register is not written every “Modbus Command Time Out” parameter seconds (default 30 seconds), CH Modbus Stat is reverted to 0, no demand.	W
203	Burner on/off	Burner On/Off burner. 1 = on 0 = off	R
6	Demand source	0 = Unknown 1 = No source demand 2 = Central heat 3 = Domestic hot water 4 = Lead Lag slave 5 = Lead Lag master 6 = Central heat frost protection 7 = Domestic hot water frost protection 8 = No demand due to burner switch turned off 9 = Domestic hot water storage 11 = Warm weather shutdown	R
66	CH heat demand	0=Off, 1=On	R
83	DHW heat demand	0=Off, 1=On	R
123	Low Temperature Loop heat demand	0=Off, 1=On	R
Setpoints			
10,579	CH Modbus Setpoint	Use this register to change the boiler setpoint. When this register is not written every “Modbus Command Time Out” parameter seconds (default 30 seconds), setpoint reverts to local setpoint valid range 60 F to 190 F	W
10,562	CH Sequencer Modbus Setpoint	Use this register to change the multiple boiler Sequencer setpoint. When this register is not written every “Modbus Command Time Out” parameter seconds (default 30 seconds), setpoint reverts to local setpoint valid range 60 F to 190 F	W

Installation

Energy Management Interface

Table 8: Modbus Signal List (continued)

Modbus Register	Protocol Name	Description	Read (R)/ Write (W)
10,211	CH setpoint	Status of local setpoint	R
10,453	DHW setpoint	Status of local setpoint	R
10,546	Lead Lag setpoint	Status of local setpoint	R
10,212	CH TOD setpoint	Status of local setpoint	R
10,065	CH setpoint source	0=Unknown, 1=Normal setpoint, 2=TOD setpoint, 3=Outdoor reset, 4=Remote control (4-20mA), 7=Outdoor reset time of day	R
10,016	Active CH setpoint	-40 F (-40°C) to 266 F (130°C) Setpoint determined by CH setpoint source (register 65).	R
10,081	DHW setpoint source	0=Unknown, 1=Normal setpoint, 2=TOD setpoint, 5=DHW tap setpoint, 6=DHW preheat setpoint	R
10,017	Active DHW setpoint	-40 F (-40°C) to 266 F (130°C) Setpoint determined by DHW setpoint source (register 81).	R
10,162	Lead Lag master setpoint source	0=Unknown, 1=CH setpoint, 2=CH TOD setpoint, 3=Outdoor reset, 4=Remote control (4-20mA), 5=DHW setpoint, 6=DHW TOD setpoint, 7=Outdoor reset time of day, 8=Mix setpoint	R
10,018	Active LL setpoint	-40 F (-40°C) to 266 F (130°C) Setpoint determined by LL setpoint source (register 162).	R
10,643	Low Temperature setpoint	Setpoint entered on the local user interface. valid range 79 F (26.1 C) to 191 F (88.3 C)	R
10,121	Low Temperature setpoint source	0=Unknown, 1=Normal setpoint, 2=TOD setpoint, 3=Outdoor reset, 4=Remote control, 7=Outdoor reset time of day, 9=Outdoor boost	R
10,024	Active Low Temperature setpoint	-40 F (-40°C) to 266 F (130°C) Setpoint determined by Low Temp setpoint source (register 121).	R
Temperature Sensors			
10,007	Supply sensor	-40 F (-40°C) to 266 F (130°C)	R
10,011	Return sensor	-40 F (-40°C) to 266 F (130°C)	R
10,013	Header sensor	-40 F (-40°C) to 266 F (130°C)	R
10,014	Stack sensor	-40 F (-40°C) to 266 F (130°C)	R
10,170	Outdoor sensor	-40 F (-40°C) to 266 F (130°C)	R
15	4 - 20 mA remote control input	mA value for S2 (J8-6) parameter selectable as (remote set point) & (remote modulation)	R

Installation

Energy Management Interface

Table 8: Modbus Signal List (continued)

Modbus Register	Protocol Name	Description	Read (R)/ Write (W)
10,817	Outdoor Temperature	Building Automation may send the controller the outdoor air temperature. Use this register to change the outdoor temperature. When this register is not written every “Modbus Command Time Out” parameter seconds (default 30 seconds), temperature is set to bad data quality and outdoor air reset is set back to local setpoint. valid range -40 F to 302 F	W
Burner			
581	CH Modbus Rate	Use this register to drive individual boiler firing rates. This register is used when firing rate control is performed by an external building automation system. Firing rate reverts to local control when register is not written every “Modbus Command Time Out” parameter seconds (default 30 seconds), Range is 0 to 200 % provides 0-100% firing rate.	W
8	Fan Speed Measured	Speed of the combustion air blower in rpm	R
9	Fan Speed Commanded	Speed of the combustion air blower in rpm	R
10	Flame signal	0.01V or 0.01µA precision (0.00-50.00V)	R
33	Burner control state	<ul style="list-style-type: none"> 0 Initiate 1 Standby Delay 2 Standby 3 Safe Startup 4 Prepurge - Drive to Purge Rate 5 Prepurge – Measured Purge Time 6 Prepurge – Drive to Lightoff Rate 7 Preignition Test 8 Preignition Time 9 Pilot Flame Establishing Period 10 Main Flame Establishing Period 11 Direct Burner Ignition 12 Run 13 Postpurge 14 Lockout 	R

Installation

Energy Management Interface

Table 8: Modbus Signal List (continued)

Modbus Register	Protocol Name	Description	Read (R)/ Write (W)
Trouble Shooting			
10,034	Lockout code	Reasons for burner lockout 0 No lockout, 4 Supply high limit 5 DHW high limit 6 Stack High limit 12 Flame detected out of sequence 18 Lightoff rate proving failed 19 Purge rate proving failed 20 Invalid Safety Parameters 21 Invalid Modulation Parameter 22 Safety data verification needed 23 24VAC voltage low/high 24 Fuel Valve Error 25 Hardware Fault 26 Internal Fault 27 Ignition Failure	R
10,040	Hold code	Reason for burner hold 0 None 1 Anti short cycle 2 Boiler Safety Limit Open 3 Boiler Safety Limit Open, (ILK Off) 7 Return sensor fault 8 Supply sensor fault 9 DHW sensor fault 10 Stack sensor fault 11 Ignition failure 13 Flame rod shorted to ground 14 Delta T inlet/outlet high 15 Return temp higher than supply 16 Supply temp has risen too quickly 17 Fan speed not proved 23 24VAC voltage low/high 25 Hardware Fault 27 Ignition Failure	R
Statistics			
763	Modbus command timeout	This parameter sets the amount of time the control will wait for input from the Building Automation System (BAS). If the BAS does not write to the following register within the “Modbus Command timeout” seconds the following inputs are considered invalid: CH Modbus Stat, CH Modbus Setpoint, CH Sequencer Modbus Setpoint CH Modbus Rate range 30 – 120, Default 30 seconds Other R/W registers should only be written when a value is needed to be changed. Only the above listed registers are stored in non-volatile registers.	R/W

Installation

Energy Management Interface

Table 8: Modbus Signal List (continued)

Modbus Register	Protocol Name	Description	Read (R)/ Write (W)
Pump Status			
96	CH pump status	See Table 9	R
100	DHW pump status	See Table 9	R
108	Boiler pump status	See Table 9	R
128-129	Burner cycle count	0-999,999 (U32)	R/W
130-131	Burner run time	Hours (U32)	R/W
132-133	System pump cycle count	0-999,999 (U32)	R/W
134-135	DHW pump cycle count	0-999,999 (U32)	R/W
400,138-400,139	Boiler pump cycle count	0-999,999 (U32)	R/W

Status	Description
92	Forced On from manual pump control
93	Forced On due to Outlet high limit is active
94	Forced On from burner demand
95	Forced On due to Lead Lag slave has demand
96	Forced Off from local DHW priority service
97	Forced Off from Lead Lag DHW priority service
98	Forced Off from Central Heat anti-condensation
99	Forced Off from DHW anti-condensation
100	Forced Off due to DHW high limit is active
101	Forced Off from EnviraCOM DHW priority service
102	On due to local CH frost protection is active
103	On due to Lead Lag CH frost protection is active
104	On due to local DHW frost protection is active
105	On due to Lead Lag DHW frost protection is active
106	On from local Central Heat demand
107	On from Lead Lag Central Heat demand
108	On from local DHW demand
109	On from Lead Lag DHW demand

Status	Description
110	On from local Mix demand
111	On from Lead Lag Mix demand
112	On from local Central Heat service
113	On from Lead Lag Central Heat service
114	On from local DHW service
115	On from Lead Lag DHW service
116	On from local Mix service
117	On from Lead Lag Mix service
118	On from Lead Lag auxiliary pump X
119	On from Lead Lag auxiliary pump Y
120	On from Lead Lag auxiliary pump Z
121	On, but inhibited by pump start delay
122	On from pump override
123	Off, not needed
124	On from burner demand
125	On from exercise
126	On from local Lead Lag service
127	On from local Lead Lag pump demand

Table 9: Pump Status Codes

Setup & Tuning

Manual Operation

The Firing rate may be adjusted manually using the Operation screen. The user may select Low or High speeds, or adjust firing rate anywhere between low and high;

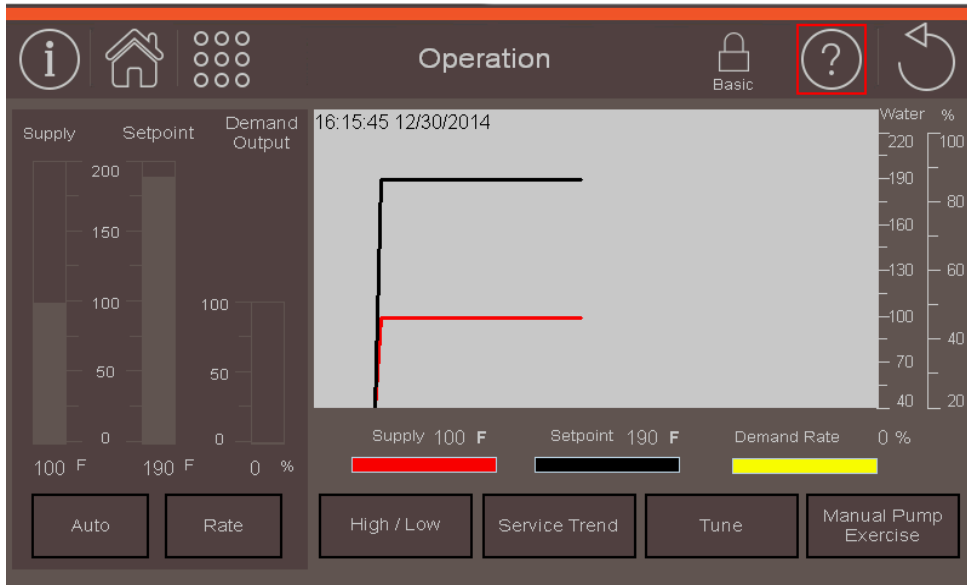


Figure 17: Operating Screens

Bar Graph & Trend

Active Sensor, Active Setpoint & Modulation

Auto/Manual

After selecting Manual Mode the User may adjust modulation manually. Menu also allows for switching of units from % (default) to RPM.

Rate

Select Manual modulation to enable user adjustment of firing rate. The factory default is Automatic mode.

High/Low

After selecting Manual Mode the High or Low buttons drives firing rate to High and Low fire position for combustion testing.

Service Trend

Service Trend screen shows; boiler temps, firing rate & demand statuses.

Tune

Tune screen allows for adjustment of parameters related to the rate of boiler response. This includes PID settings, Ramp rates and more. For more details on the Tune Screen see Tune Screen in Adjustable Parameters Section.

Manual Pump Exercise

Allows the pumps to be set to either ON or Automatic. When ON is selected pump will run. When Automatic is selected, pump will follow settings assigned in Pump Adjust Menu.

NOTE:

Manual control mode locks firing rate to a fixed speed. The control stays in manual even through a power cycle. Select Automatic when commissioning is complete.

Setup & Tuning

Parameter Adjustment

Login to Adjust Parameters


Control operation may be tailored to suit the application by adjusting parameters. To adjust parameters select the ADJUST icon located throughout the display.



Press ADJUST icon to review and adjust all parameters.

Parameters are password protected to discourage unauthorized or accidental changes to settings. User login is required to adjust these settings. Parameters are locked and login requirement is shown when the padlock icon is not green

- Press the Lock icon to access password screen.
- Use keypad to enter Password.
- Press Enter Key when complete.

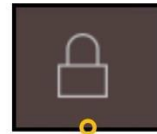

Login is Required
Select Icon to enter password.



Select dark gray box and Enter Password
Factory = 86
Supervisor = 76

Login is Complete
Parameters may be adjusted

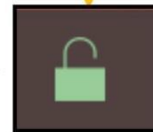


Figure 18: Security System

Adjusting Parameters

Editing parameters is accomplished as follows:

Use the key pad to edit the value of the parameter.

Press the enter key to confirm newly edited value. The value modified with the increase and decrease buttons is not accepted unless this button is also pressed.

Press the checkmark to confirm newly edited value. The value modified with the increase and decrease buttons is not accepted unless this button is also pressed.

Press the Up/Down arrows to edit a value. While editing a value it will blink until it has been accepted or cancelled. A value is also cancelled by leaving the screen without accepting the value

Press the X button to cancel newly edited value and go back to the original

Figure 19: Adjusting Parameters

Setup & Tuning

Parameter Adjustment

From the ADJUST menu select the following buttons to view and adjust parameters.

Press **System** to adjust the following parameters.

Factory Setting	Range / Choices	Parameter and Description									
Fahrenheit	Fahrenheit Celsius	Temperature Units The Temperature Units parameter determines whether temperature is represented in units of Fahrenheit or Celsius degrees.									
Not Installed	Not Installed, Wired, Modbus, Wireless	Outdoor Sensor Source Not Installed Outdoor Sensor is not connected to the boiler, the sensor is not monitored for faults. Wired Outdoor Sensor thermistor is installed directly on the boiler terminal strip. Modbus Outdoor temperature is retrieved through the Modbus connection from another boiler or Energy Management System. Wireless Wireless outdoor sensor is installed. Honeywell Wireless Outdoor Air Reset Adaptor part number 105766-01 is a wireless outdoor air sensor. The package includes a Wireless Receiver Module and Wireless Outdoor Sensor. The sensor communicates wirelessly to the receiver module. The receiver module is wired to the Control EnviraCOM terminals. Refer to wiring section for more information.									
0 degrees	-50 to 50 degrees	Outdoor Sensor Calibration Outdoor sensor calibration allows a single point adjustment of the outdoor sensor reading. This adjustment is a correction offset added to or subtracted from the outdoor temperature sensor reading. It is recommended to make any calibration when outdoor air temperature is at or near the most common operating point. For example, when necessary, calibrate the sensor when outdoor air is halfway between Minimum and a Maximum Outdoor Temperature parameter value is recommended.									
1 Min	0 to 20 Min	Anti-Short Cycle Time Anti-short cycle is a tool that helps prevent excessive cycling resulting from a fast cycling enable-disable input (STAT terminal). It provides a minimum delay time before the next burner cycle. DHW demand is serviced immediately, without any delay.									
Enabled	Enable/Disable	CH Frost Protection Disable Frost Protection is not used. Enable Boiler and system circulators start and boiler fires when low outside air, supply and return temperatures are sensed as follows: <table border="1" data-bbox="505 1459 1511 1675"> <thead> <tr> <th>Device</th> <th>Start Temperatures</th> <th>Stop Temperatures</th> </tr> </thead> <tbody> <tr> <td>Boiler Pump System Pump</td> <td>Outside Air < 32°F Supply Water < 45°F</td> <td>Outside Air > 36°F Supply Water > 50°F</td> </tr> <tr> <td>Boiler</td> <td>Supply Water < 38°F</td> <td>Supply Water > 50°F</td> </tr> </tbody> </table>	Device	Start Temperatures	Stop Temperatures	Boiler Pump System Pump	Outside Air < 32°F Supply Water < 45°F	Outside Air > 36°F Supply Water > 50°F	Boiler	Supply Water < 38°F	Supply Water > 50°F
Device	Start Temperatures	Stop Temperatures									
Boiler Pump System Pump	Outside Air < 32°F Supply Water < 45°F	Outside Air > 36°F Supply Water > 50°F									
Boiler	Supply Water < 38°F	Supply Water > 50°F									
32 (°F)	-50 to 50 (°F)	CH Frost Protection Setpoint Outdoor Temperature at which pumps are started for frost protection.									

Setup & Tuning

Parameter Adjustment

System Menu Continued

Factory Setting	Range / Choices	Parameter and Description
76	9 Character Maximum	<p>Supervisor Password Allows for custom password to be set. Must be 9 characters or less. Only allows adjustment of supervisor password (supervisor default: 76). Cannot change Factory password.</p> <ul style="list-style-type: none"> • Must enter current installer password. • Must enter new password and press enter. • Must re-enter new password and press enter. <p style="text-align: center;">NOTE: Can be reset to supervisor default 76 if accessed with the Factory level password (86).</p>
Disabled	Enable/Disable	<p>Warm Weather Shutdown Enable Disable Warm Weather Shutdown (WWSD) is not used. Enable A central heat boiler start is prevented if the outside temperature is greater than the WWSD setpoint. WWSD is initiated as soon as outside air temperature is above WWSD Setpoint. The control does not require call for heat to be satisfied before entering WWSD. The boiler will still start in response to a Domestic Hot Water call for heat.</p>
70°F	20 to 100 (°F)	<p>Warm Weather Shutdown Setpoint The Warm Weather Shutdown (WWSD) Setpoint used to shutdown the boiler when enabled by the “WWSD Enable” parameter.</p>
xx/xx/xxxx	NA	<p>System Date Date used by display Alarm History screen. A battery is provided to maintain the system date and time while the display is powered down.</p>
xx:xx:xx	NA	<p>System Time Time used by display Alarm History screen. A battery is provided to maintain the system date and time while the display is powered down.</p>
Enabled	Enable/Disable	<p>Auto Jump to Home Page Enable After 15 minutes of no use, the display will automatically return to the Home Page. Disable Display will not change screens to Home Page after 15 minutes.</p>

Setup & Tuning

Parameter Adjustment

WARNING

Asphyxiation Hazard. Boiler type is factory set and must match the boiler model. Only change the boiler type setting if you are installing a new or replacement Control. The boiler type setting determines minimum and maximum blower speeds. Incorrect boiler type can cause hazardous burner conditions and improper operation that may result in PROPERTY LOSS, PHYSICAL INJURY OR DEATH.

Modulation Menu

Factory Setting	Range / Choices	Parameter and Description
Model dependent	See Table 10	<p>Boiler Model Boiler Size Setup To verify the boiler size selection, a qualified technician should do the following:</p> <ol style="list-style-type: none"> 1. Check boiler's label for actual boiler size. 2. Set "Boiler Model" to match actual boiler size. 3. Select "Confirm". <p>The Boiler Model parameter changes <u>multiple boiler type related parameter</u> settings. This parameter is intended to allow a user to set the parameters in a spare part Control to a particular boiler model.</p> <p>Save Modulation Settings This function stores the current modulation settings for future spare part setup operation.</p>
See Table 10	Minimum to Maximum Modulation	<p>Central Heat Max Modulation Speed This parameter defines the highest modulation rate the Control will go to during a central heat call for heat. If the rated input of the installed radiation is less than the maximum output of the boiler, change the Central Heat Maximum Modulation (fan speed) setting to limit the boiler output accordingly.</p>
100%	Minimum to Maximum Modulation"	<p>Domestic Hot Water (DHW) Max Modulation Speed This parameter defines the highest modulation rate the Control will go to during a Domestic Hot Water call for heat. If the rated input of the indirect water heater is less than the maximum output of the boiler, change the DHW Maximum Modulation (fan speed) setting to limit the boiler output accordingly.</p>
See Table 10	Minimum + 100 to Maximum - 100	<p>Minimum Modulation Speed This parameter is the lowest modulation rate the Control will go to during any call for heat.</p>
See Table 10	minimum to 1300rpm	<p>Lightoff Rate This is the blower speed during ignition and flame stabilization periods.</p>

Table 10: Example Parameters Changed by Boiler Model Selection:

Control Repair Part	Boiler Model				
	Arctic 1000	Arctic 1500	Arctic 2000	Arctic 2500	Arctic 3000
Max Power KBTU	1000	1500	2000	2500	3000
CH Maximum Modulation Rate (RPM)	5650	4500	4000	4100	4300
Minimum Modulation Rate (RPM)	1200	1100	1000	1000	1000
Light-off Rate (RPM)	1300	1200	1100	1200	1200
PWM Frequency	3	2	2	2	2

NOTE: Maximum Modulation Rates are designed for 100% nameplate rate at 0°F (-18°C) combustion air. Contact factory before attempting to increase the Maximum Modulation Rate

Setup & Tuning

Parameter Adjustment

Press **Pumps** to adjust the following parameters.

Factory Setting	Range / Choices	Parameter and Description
System Pump: Any Demand	System Pump: - Never, - Any Demand, - Central Heat No Priority, - Central Heat, Optional Priority - DHW Pump	Contact A: System Pump Activates the system pump output according to selected function. Never: Pump is disabled and not shown on status screen. Any Demand: Pump Runs during any call for heat. Central Heat, No Priority: Pump Runs during central heat and frost protection call for heat. Pump <u>does not start</u> for a DHW call for heat and continues to run during Domestic Hot Water Priority. Central heat, Optional Priority: Pump Runs during central heat and frost protection call for heat. Pump <u>does not start</u> for a DHW call for heat and will be <u>forced off</u> if there is a DHW call for heat and Domestic Hot Water Priority is active. DHW Pump: Pump Runs during domestic hot water call for heat. Domestic Hot Water Priority enable/disable does not affect pump operation.
Any Demand	Never Any Demand	Contact C: Boiler Pump Activates the Boiler Pump, Combustion Air Damper and/or Standby Loss Damper output according to selected function: Never: Output is disabled and not shown on status screen Any Demand: Output activated for any burner demand.
DHW Pump: Primary Loop Piped (IWH)	Isolation Valve: - Never, - Isolation Valve - DHW Pump	Contact B: Isolation Valve Activates the Isolation Valve or Domestic pump output according to selected function. Never: Pump is disabled and not shown on status screen. Isolation Valve: Output activated for any burner demand or when boiler is lead boiler. DHW Pump: Pump Runs during domestic hot water call for heat. Domestic Hot Water Priority enable/disable does not affect pump operation.

Setup & Tuning

Parameter Adjustment

Press **Pumps** to adjust the following parameters.

Factory Setting	Range / Choices	Parameter and Description
0 Min	0 to 60 Min	Overrun Time: System Pump Time that pump runs after demand is satisfied. Used to dissipate heat within the system.
0 Min	0 to 60 Min	Overrun Time: Isolation Valve Time that pump runs after demand is satisfied. Used to dissipate heat within the system.
1 Min	10 seconds to 60 Min	Overrun Time: Boiler Pump (Combustion Air Damper and Standby Loss Damper) Time that pump runs after demand is satisfied. Used to dissipate heat within the system.
7 Days	0 to 40 Days	Pump Exercise Interval The number of days the pump is inactive before the pump will be activated for the Pump Exercise Time.
20 Sec	0 to 10 Min	Pump Exercise Time The amount of time the pump runs for exercise. This feature helps prevent pump seizing due to inactivity periods.

Setup & Tuning

Parameter Adjustment

Press **Service Contacts** to adjust the following parameters.

This information may be entered from a USB thumb drive or from the screen. Refer to Using Archives section for thumb drive instructions.

Factory Setting	Parameter and Description
Enter name Enter address line 1 Enter address line 2 Enter phone number Enter email	Contractor Select the line of information to edit. Use key pad to input data and press ENT to enter data into Contractor Info.
Enter name Enter address line 1 Enter address line 2 Enter phone number Enter email	Service Company Select the line of information to edit. Use key pad to input data and press ENT to enter data into Service Company Info.
Enter name Enter address line 1 Enter address line 2 Enter phone number Enter email	Sales Representative Select the line of information to edit. Use key pad to input data and press ENT to enter data into Sales Representative Info.

Setup & Tuning

Parameter Adjustment

Slower Response ← → Faster Response

	Gain (P)	Integral (I) Repeats/Minute				
		0.5	1.0	2.0	3	4
Faster Response ↑	103	17	35.0	70	105.0	140
	89	15	30.0	60	90.0	120
	74	12	25.0	50	75.0	100
	59	10	20.0	40	60.0	80
	44	8	15.0	30	45.0	60
	30	5	10.0	20	30.0	40
	26	5	9.0	18	27.0	36
	22	4	7.5	15	22.5	30
	19	3	6.5	13	19.5	26
	15	3	5.0	10	15.0	20
	11	2	4.0	8	12.0	16
	9	2	3.0	6	9.0	12
	7	1	2.5	5	7.5	10
Slower Response ↓	6	1	2.0	4	6.0	8

CH and DHW Response Speed Settings

5: P=59, I=40
 4: P=45, I=60
 3: P=44, I=45
 2: P=30, I=30
 1: P=30, I=20

Sequence Master Response Speed Settings

5: P=30, I=10
 4: P=29, I=9
 3: P=22, I=7
 2: P=19, I=6
 1: P=15, I=5

Table 11: Response Speed Adjustment Guidelines

Press Central Heat to adjust the following parameters.

Factory Setting	Range / Choices	Parameter and Description
180	50 to 190 (°F)	Central Heat Setpoint Target temperature for the central heat priority. Value also used by the outdoor air reset function.
170 (°F)	50 to 190 (°F)	Central Heat Time of Day (TOD) Setback Setpoint The TOD setpoint is used when a time of day timer relay is wired to the Time Of Day Controller Input. When setback is “on” the time of day setback setpoint shifts the reset curve to save energy while building is in a reduced room temperature mode. The reset curve is shifted by the difference between the High Boiler Water Temperature and the TOD Setback Setpoint. Any time of day timer may be used to provide the input to the control TOD input. When connected, it allows boiler water setback cost savings.
10 (°F)	3 to 29 (°F)	Central Heat Difference Above The boiler stops when the water temperature rises ‘Difference Above’ degrees above the setpoint.
5 (°F)	3 to 29 (°F)	Central Heat Heat Diff Below The boiler starts when the water temperature drops ‘Difference Below’ degrees below the setpoint.
3	1 to 5	Central Heat Response Speed This parameter adjusts the Central Heat temperature controller Proportion Integral Derivative (PID) values. Higher values cause a larger firing rate change for each degree of temperature change. If set too high firing rate “overshoots” required value, increases to high fire causing the temperature to exceed the “Difference Above” setpoint and cycle the boiler unnecessarily. Lower values cause a smaller firing rate change for each degree of temperature change. If set too low, the firing rate response will be sluggish and temperature will wander away from setpoint. Refer to Table 11 for PID values used by these selections.

Setup & Tuning

Parameter Adjustment

Factory Setting	Range / Choices	Parameter and Description
Outlet Sensor	Outlet Sensor Header Sensor	Central Heat Modulation Sensor Heat Demand may respond to the boiler's Supply Temperature or Header Temperature sensors. When Header Sensor is selected the boiler is fired in response to the sensor wired to Header Sensor terminal J8 terminals 11 and 12. NOTE: Outdoor air sensor cannot be selected to use the same terminal.
0 Min	0 to 30 Min	Central Heat Low Fire Hold Time "Low Fire Hold Time" is the number of seconds the control will wait at low fire modulation rate before being released to modulate. After ignition and flame stabilization periods the firing rate is held at low fire for "Low Fire Hold Time". This delay allows heat to travel out to the system and provide system feedback prior to the control modulating firing rate.
1200 RPM	1200 to 1300 RPM	Central Heat Low Fire Hold Rate "Low Fire Hold Rate" is the modulation rate the boiler will fire at for the duration of the "Low Fire Hold Time" before being released to modulate. After ignition and flame stabilization periods the firing rate is held at "Low Fire Hold Rate" for "Low Fire Hold Time". This delay allows heat to travel out to the system and provide system feedback prior to the control modulating firing rate.

Press **Domestic Hot Water** to adjust the following parameters.

Factory Setting	Range / Choices	Parameter and Description
0 Min	0 to 90 Min	Domestic Hot Water Priority Time When Priority Time is greater than zero and Domestic Hot Water (DHW) heat demand is "on" the DHW demand will take "Priority" over space heating demand. When the System and Boiler pumps are configured as "Central Heat (off DHW priority)" or "Central Heat, Optional Priority" then they will be forced "off" during Priority Time. Priority Time provides "Priority Protection" time for the event of a failed or excessive long DHW demand. "Priority Time" is the time that the priority of the boiler will shift away from Central Heat to satisfy a Domestic Hot Water call for heat.
180	50 to 190 (°F)	Domestic Hot Water Setpoint The Domestic Hot Water (DHW) Setpoint parameter is used to create a boiler water temperature setpoint that is used when DHW heat demand is "on". When the DHW heat demand is not "on" (the contact is open or <u>not wired</u>) this setpoint is ignored
170 (°F)	50 to 190 (°F)	Domestic Hot Water Time of Day (TOD) Setback Setpoint The TOD setpoint is used when a time of day timer relay is wired to the Time Of Day Controller Input. When setback is "on" the time of day setback setpoint shifts the DHW setpoint to lower the DHW temperature and to save energy while building is in a reduced room temperature mode.
10 (°F)	3 to 29 (°F)	Domestic Hot Water Difference Above The boiler stops when the water temperature rises 'Difference Above' degrees above the setpoint.
5 (°F)	3 to 29 (°F)	Domestic Hot Water Diff Below The boiler starts when the water temperature drops 'Difference Below' degrees below the setpoint.

Setup & Tuning

Parameter Adjustment

Factory Setting	Range / Choices	Parameter and Description
3	1 to 5	<p>Domestic Hot Water Response Speed This parameter adjusts the Domestic Hot Water temperature controller Proportion Integral Derivative (PID) values. Higher values cause a larger firing rate change for each degree of temperature change. If set too high firing rate “overshoots” required value, increases to high fire causing the temperature to exceed the “Difference Above” setpoint and cycle the boiler unnecessarily. Lower values cause a smaller firing rate change for each degree of temperature change. If set too low, the firing rate response will be sluggish and temperature will wander away from setpoint. Refer to Table 11 for PID values used by these selections.</p>
0 Min	0 to 30 Min	<p>Domestic Hot Water Low Fire Hold Time “Low Fire Hold Time” is the number of minutes the control will wait at low fire modulation rate before being released to modulate. After ignition and flame stabilization periods the firing rate is held at low fire for “Low Fire Hold Time”. This delay allows heat to travel out to the system and provide system feedback prior to the control modulating firing rate.</p>
1200 RPM	1200 to 1300 RPM	<p>Domestic Hot Water Low Fire Hold Rate “Low Fire Hold Rate” is the modulation rate the boiler will fire at for the duration of the “Low Fire Hold Time” before being released to modulate. After ignition and flame stabilization periods the firing rate is held at “Low Fire Hold Rate” for “Low Fire Hold Time”. This delay allows heat to travel out to the system and provide system feedback prior to the control modulating firing rate.</p>
<p>Demand: DHW Switch Modulation: Outlet Sensor</p> <p>Demand: DHW Sensor Modulation: DHW Sensor</p>		<p>Domestic Hot Water Demand/Modulation Domestic Hot Water Demand may respond to the boiler’s DHW Switch or DHW Sensor.</p> <p>When “DHW Switch/Outlet Sensor” is selected the boiler responds to a domestic hot water demand when a DHW Switch is sensed at J9 terminal 1 & 2 and is fired in response to the Outlet Sensor.</p> <p>When “DHW Sensor/DHW Sensor” is selected the boiler responds to a domestic hot water demand when the DHW Sensor, temperature measured at J9 terminal 1 & 2 is below the “DHW Setpoint” less “Difference Below” and is fired in response to the DHW Sensor.</p>

Press Outdoor Reset to adjust the following parameters.

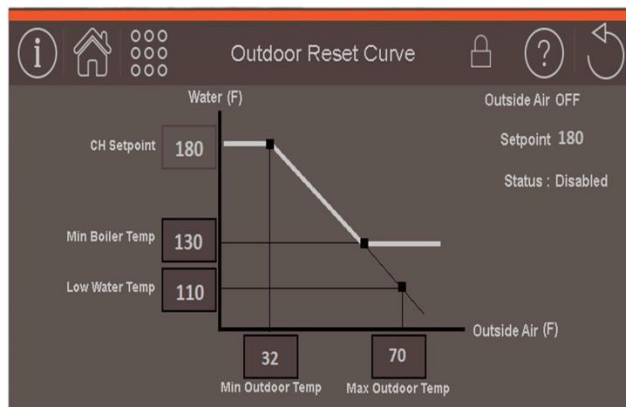


Figure 20:
Reset Curve

Setup & Tuning

Parameter Adjustment

Factory Setting	Range / Choices	Parameter and Description
Disabled	Enable Disable	<p>Outdoor Reset Enable If an outdoor sensor is installed and Outdoor Reset is Enabled, the boiler will automatically adjust the heating set point temperature based on the outdoor reset curve in (see Figure 20). The maximum set point is defined by the Central Heat Setpoint (default 180 F) when the outdoor temperature is Min Outdoor Temp (default 32 F) or below. The minimum set point temperature shown is 130°F when the outdoor temperature is 50°F or above. As the outdoor temperature falls the supply water target temperature increases.</p> <p>Disable <u>Do Not</u> Calculate setpoint based on outdoor temperature Enable Calculate the temperature setpoint based on outdoor temperature using a reset curve defined by Low Outdoor Temp, High Outdoor Temp, Low Boiler Water Temp, Min Boiler Temp and Central Heat Setpoint and Boost Time parameters.</p>
30 (°F)	-50 to 32 (°F)	<p>Minimum Outdoor Temperature The Low Outdoor Temperature parameter is also called “Outdoor Design Temperature”. This parameter is the outdoor temperature used in the heat loss calculation. It is typically set to the coldest outdoor temperature.</p>
70 (°F)	35 to 100 (°F)	<p>Maximum Outdoor Temperature The High Outdoor Temperature parameter is the outdoor temperature at which the Low Boiler Water Temperature is supplied. This parameter is typically set to the desired building temperature.</p>
110 (°F)	70 to 180 (°F)	<p>Low Water Temperature The Low Boiler Water Temperature parameter is the operating setpoint when the High Outdoor Temperature is measured. If the occupied space feels cool during warm outdoor conditions, the Low Boiler Water Temperature parameter should be increased.</p>
130 (°F)	50 to 185 (°F)	<p>Minimum Boiler Water Temperature The Minimum Boiler Temperature parameter sets a low limit for the Reset setpoint. Set this parameter to the lowest supply water temperature that will provide enough heat for the type radiation used to function properly. Always consider the type of radiation when adjusting this parameter.</p>
0 Min	0 to 30 Min	<p>Boost Time When the Central Heat Setpoint is decreased by Outdoor Reset settings, the Boost Time parameter is used to increase the operating setpoint when the space heat demand is not satisfied after the Boost Time setting is exceeded. When heat demand has been “on” continuously for longer than the Boost Time parameter the operating setpoint is increased by 10°F (5.6°C). The highest operating setpoint from Boost Time is current Central Heat Setpoint minus the Central Heat “Diff Above” setting. A setting of 0 seconds disables this feature.</p>
187 (°F)	50 to 190 (°F)	<p>Central Heat Outdoor Air Maximum Off Point Maximum value the setpoint can reach due to boost function. Should be set to match Central Heat Setpoint.</p>
187 (°F)	50 to 190 (°F)	<p>Lead Lag Outdoor Air Maximum Off Point Maximum value the setpoint can reach due to boost function. Should be set to match Central Heat Setpoint.</p>

Setup & Tuning

Parameter Adjustment

Press **Master Sequencer** to adjust the following parameters.

Factory Setting	Range / Choices	Parameter and Description
Disabled	Enable Disable	<p>Master Enable/Disable The Sequencer Master Enable/Disable is used to “turn on” the Multiple Boiler Lead-Lag Control.</p> <p style="text-align: center;">WARNING: Enable ONLY one Sequence Master in the boiler to boiler network.</p>
Boiler Piped	Boiler Piped Primary Piped	<p>Indirect Water Heater (IWH) Boiler Piped Sequencer to respond to an Isolated DHW demand that is piped to a single boiler. The individual boiler goes on “Leave” from the Sequencer Master and goes to DHW Service.</p> <p>Primary Piped The Sequence Master responds to the DHW Call For Heat. This allows one or more boilers to provide heat to the IWH.</p>
Disabled	Enable Disable	<p>DHW Two Boiler Start The Sequencer to immediately start two boilers for a DHW call for heat. Used when DHW is the largest demand. Only relevant when “Primary Piped IWH” is selected.</p>
3 Min	0.5 to 20 Min	<p>Boiler Start Delay Slave boiler time delay after header temperature has dropped below the setpoint minus “Difference below”. Longer time delay will prevent nuisance starts due to short temperature swings.</p>
1 Min	0.5 to 5 Min	<p>Boiler Stop Delay Slave boiler time delay after header temperature has risen above the setpoint plus “Difference Above” setpoint. Longer time delay will prevent nuisance stops due to short temperature swings.</p>
195 (°F)	50 to 195 (°F)	<p>Stop All Boilers Setpoint When this temperature is reached all Networked boilers are stopped at once without any stop boiler time delays. This setpoint allows the Sequencer to respond to rapid load increases.</p>
40%	25 to 100 %	<p>Base Load Common Rate To maximize condensing boiler efficiency, the firing rate is limited to an adjustable value. Boilers are kept at or below this firing rate as long as the boilers can handle the load. After last available boiler has started, the modulation rate limit is released up to 100%.</p>
24 Hours	8 to 48 Hours	<p>Lead Rotation Time Time boilers will act as the lead before switching the lead to another boiler in the boiler to boiler network.</p>
3	1 to 5	<p>Response Speed This parameter adjusts the Central Heat temperature controller Proportion Integral Derivative (PID) values. Higher values cause a larger firing rate change for each degree of temperature change. If set too high firing rate “overshoots” required value, increases to high fire causing the temperature to exceed the “Difference Above” setpoint and cycle the boiler unnecessarily. Lower values cause a smaller firing rate change for each degree of temperature change. If set too low, the firing rate response will be sluggish and temperature will wander away from setpoint. Refer to Table 11 for PID values used by these selections.</p>

Setup & Tuning

Parameter Adjustment


Press **Slave Sequencer** to adjust the following parameters.


Factory Setting	Range / Choices	Parameter and Description
None	1 to 8	Boiler Address Each boiler must be given a unique address. When "Normal" slave selection order is used, the boiler address is used by the Sequence Master as the boiler start order.
Normal	First Normal Last	Slave Selection Order "Use Boiler First"; Places the Slave in the lead permanently. "Use Boiler Last"; Places the slave last in the firing order.


Press **Limits** to adjust the following parameters.

Factory Setting	Range / Choices	Parameter and Description
20 (°F)	(Stepped Modulation Recycle Offset + 6) to 30	Stepped Modulation Start Offset Stepped Modulation is provided to help the boiler continue to supply heat when temperatures are beginning to approach Limits. This feature helps avoid manual reset and soft lockouts by reducing the firing rate when the temperature is "Stepped Modulation Start Offset" degrees below the Limit setting. For example, when the setting is 20 F the maximum modulation rate will begin to be reduced when stack temperature is 20 F below the Stack Limit and will be at minimum modulation when stack temperature is 10 F below the limit. Supply Temperature (High Limit 210 F)(see Note below), Differential Temperature (Differential Temperature Limit 100 F), Stack Temperature (Stack Limit 230 F), Note: This feature is not active for Supply temperature when it is the modulation sensor. For example, this feature is active when Header Sensor is selected as modulation sensor, when a boiler is a slave, when a boiler is responding to a remote modulation demand (4-20mAdc or Modbus).
10 (°F)	10 to (Stepped Modulation Start Offset – 6)	Stepped Modulation Recycle Offset This feature helps avoid manual reset and soft lockouts by recycling the boiler when the temperature is "Stepped Modulation Recycle Offset" degrees below the Limit setting. For example, when the setting is 10 F the boiler will recycle. Applicable to the following measurements. Supply Temperature (High Limit 210 F)(see Note below), Differential Temperature (Differential Temperature Limit 100 F), Stack Temperature (Stack Limit 230 F), Note: This feature is not active for Supply temperature when it is the modulation sensor. For example, this feature is active when Header Sensor is selected as modulation sensor, when a boiler is a slave, when a boiler is responding to a remote modulation demand (4-20mAdc or Modbus).
210 (°F)	60 to 210 (°F)	Preferred Supply High Limit Adjustable high limit for the supply temperature. Only adjustable to a number below the maximum High Limit in the control.
230 (°F)	150 to 230 (°F)	Preferred Stack High Limit Adjustable high limit for the stack temperature. Only adjustable to a number below the maximum Stack Limit in the control.

 Setup & Tuning

Press  to access the following menus.

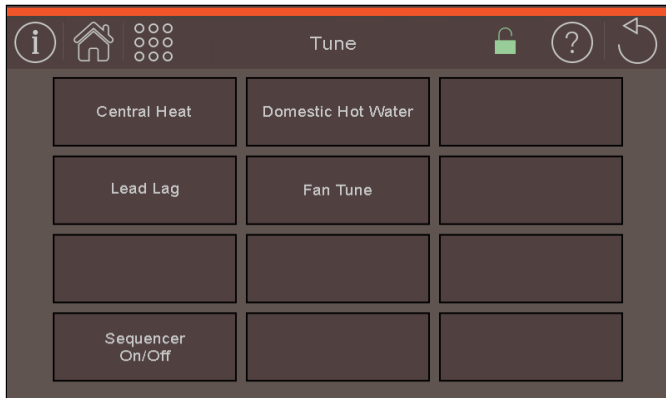

 Press  within the Tune menu to adjust the following parameters

Factory Setting	Range / Choices	Parameter and Description
3	1 to 5	<p>Response Speed</p> <p>This parameter adjusts the Central Heat temperature controller Proportion Integral Derivative (PID) values. Higher values cause a larger firing rate change for each degree of temperature change. If set too high firing rate “overshoots” required value, increases to high fire causing the temperature to exceed the “Difference Above” setpoint and cycle the boiler unnecessarily. Lower values cause a smaller firing rate change for each degree of temperature change. If set too low, the firing rate response will be sluggish and temperature will wander away from setpoint. Refer to Table 11 for PID values used by these selections.</p>
44	0 to 400	<p>Proportional Rate</p> <p>Proportional Gain value for Central Heat control modes. A larger gain value results in tighter, more active, PID control. Gain is the primary PID modulation rate tuning adjustment and provides the immediate modulation rate response. Pick a gain based on the desired initial response. The burner modulation rate can oscillate if the Proportional Gain is too large.</p>
45	0 to 400	<p>Integral Rate</p> <p>Integral gain value For Central Heat control Modes. A larger value makes the Integral ramp in less time (i.e., faster). Integral is a secondary PID modulation rate tuning adjustment that ramps the output over time (typically minutes). Based on the selected Local PID P, select the corresponding (from above table) Integral value. Repeats per minute between 0.5 and 2.0 are typical. The burner modulation rate can oscillate if the Integral time is too large.</p>
0 min	0 to 30 min	<p>Central Heat Low Fire Hold Time</p> <p>“Low Fire Hold Time” is the number of seconds the control will wait at low fire modulation rate before being released to modulate. After ignition and flame stabilization periods the firing rate is held at low fire for “Low Fire Hold Time”. This delay allows heat to travel out to the system and provide system feedback prior to the control modulating firing rate.</p>
1200 RPM	1200 to 1300 RPM	<p>Central Heat Low Fire Hold Rate</p> <p>“Low Fire Hold Rate” is the modulation rate the boiler will fire at for the duration of the “Low Fire Hold Time” before being released to modulate. After ignition and flame stabilization periods the firing rate is held at “Low Fire Hold Rate” for “Low Fire Hold Time”. This delay allows heat to travel out to the system and provide system feedback prior to the control modulating firing rate.</p>

Setup & Tuning

Press **Domestic Hot Water Tuning** within the Tune menu to adjust the following parameters

Factory Setting	Range / Choices	Parameter and Description
3	1 to 5	<p>Response Speed This parameter adjusts the Domestic Hot Water temperature controller Proportion Integral Derivative (PID) values. Higher values cause a larger firing rate change for each degree of temperature change. If set too high firing rate “overshoots” required value, increases to high fire causing the temperature to exceed the “Diff Above” setpoint and cycle the boiler unnecessarily. Lower values cause a smaller firing rate change for each degree of temperature change. If set too low, the firing rate response will be sluggish and temperature will wander away from setpoint.</p>
44	0 to 400	<p>Proportional Rate Proportional Gain value for Domestic Hot Water control modes. A larger gain value results in tighter, more active, PID control. Gain is the primary PID modulation rate tuning adjustment and provides the immediate modulation rate response. Pick a gain based on the desired initial response. The burner modulation rate can oscillate if the Proportional Gain is too large.</p>
45	0 to 400	<p>Integral Rate Integral gain value For Domestic Hot Water control Modes. A larger value makes the Integral ramp in less time (i.e., faster). Integral is a secondary PID modulation rate tuning adjustment that ramps the output over time (typically minutes). Based on the selected Local PID P, select the corresponding (from above table) Integral value. Repeats per minute between 0.5 and 2.0 are typical. The burner modulation rate can oscillate if the Integral time is too large.</p>
0 min	0 to 30 min	<p>Domestic Hot Water Low Fire Hold Time “Low Fire Hold Time” is the number of minutes the control will wait at low fire modulation rate before being released to modulate. After ignition and flame stabilization periods the firing rate is held at low fire for “Low Fire Hold Time”. This delay allows heat to travel out to the system and provide system feedback prior to the control modulating firing rate.</p>
1200 RPM	1200 to 1300 RPM	<p>Domestic Hot Water Low Fire Hold Rate “Low Fire Hold Rate” is the modulation rate the boiler will fire at for the duration of the “Low Fire Hold Time” before being released to modulate. After ignition and flame stabilization periods the firing rate is held at “Low Fire Hold Rate” for “Low Fire Hold Time”. This delay allows heat to travel out to the system and provide system feedback prior to the control modulating firing rate.</p>

Setup & Tuning

Press **Lead-Lag Tuning** within the Tune menu to adjust the following parameters

Factory Setting	Range / Choices	Parameter and Description
3	1 to 5	<p>Response Speed</p> <p>This parameter adjusts the Sequence Master temperature controller Proportion Integral Derivative (PID) values. Higher values cause a larger firing rate change for each degree of temperature change. If set too high firing rate “overshoots” required value, increases to high fire causing the temperature to exceed the “Diff Above” setpoint and cycle the boiler unnecessarily. Lower values cause a smaller firing rate change for each degree of temperature change. If set too low, the firing rate response will be sluggish and temperature will wander away from setpoint.</p>
22	0 to 400	<p>Proportional Rate</p> <p>Proportional Gain value for Sequencer control modes. A larger gain value results in tighter, more active, PID control. Gain is the primary PID modulation rate tuning adjustment and provides the immediate modulation rate response. Pick a gain based on the desired initial response. The burner modulation rate can oscillate if the Proportional Gain is too large.</p>
7	0 to 400	<p>Integral Rate</p> <p>Integral gain value For Sequencer control Modes. A larger value makes the Integral ramp in less time (i.e., faster). Integral is a secondary PID modulation rate tuning adjustment that ramps the output over time (typically minutes). Based on the selected Local PID P, select the corresponding (from above table) Integral value. Repeats per minute between 0.5 and 2.0 are typical. The burner modulation rate can oscillate if the Integral time is too large.</p>

Setup & Tuning

Press

Fan Tuning

within the Tune menu to adjust the following parameters

Factory Setting	Range / Choices	Parameter and Description
500 rpm/sec.	0 to 12000	Fan Speed-Up Ramp Whenever the burner is firing it will be commanded to increase its RPM no faster than the rate provided by this parameter. This is a maximum speed limit.
500 rpm/sec.	0 to 12000	Fan Speed-Down Ramp Whenever the burner is firing it will be commanded to decrease its RPM no faster than the rate provided by this parameter.
15	1 to 100	Fan Gain Up This is the gain for speeding up the fan.
8	1 to 100	Fan Gain Down This is the gain for slowing down the fan.
Disabled	Enable Disable	CH Slow Start Enable/Disable This parameter enables or disables the slow start limit function for Central Heat and Sequence Master demand sources. It uses the CH Low Fire Hold Rate parameter as the starting point for the slow start.
Disabled	Enable Disable	DHW Slow Start Enable/Disable This parameter enables or disables the slow start limit function for DHW demand source. It uses the DHW Low Fire Hold Rate parameter as the starting point for the slow start.
20 degrees	0 to 180	Slow Start Degrees If slow start limiting is enabled and the supply temperature is less than the temperature provided by subtracting this number of degrees from the setpoint, then slow start rate limiting is effective. Whenever the supply temperature is above this value, slow start limiting has no effect.
200 %/min.	0 to 1000	Slow Start Ramp When slow start limiting is in effect, the modulation rate will increase no more than the amount per minute given by this parameter. Although provided as a per-minute value, the Control will calculate and apply this as a stepped function using step duration of 10 seconds.

Trouble- Shooting

General Issues

WARNING

Electrical Shock Hazard. Turn off power to boiler before working on wiring. This boiler must only be serviced by skilled and experienced service technician.

Troubleshooting when “Help” icon



NOT flashing;

Indication	Condition	Possible Cause
Boiler not responding to call for heat, “Status” and “Priority” show “Standby”.	Demand Not Detected	Boiler is not seeing Enable/Disable of Domestic Demand Input. Check wiring loose connection, miswiring. If Domestic Demand is expected check that DHW Demand/ Modulation is selected properly.
Boiler not responding to a call for heat, “Status” shows “Standby” and “Priority” shows Central Heat or Domestic Hot Water.	Pumps Running and Boiler is not Running	Boiler is not firing, temperature is greater than setpoint. Select display Help icon and review Limit String Status.
Boiler Running but System or Boiler Circulator is not running	Pumps Not Running	<ul style="list-style-type: none"> • Check wiring for loose connection, miswiring. • When there is a Domestic Hot Water Heat Request the System or Boiler pumps will be forced “off” when there “Run Pump for” parameter is set to “Central heat, off DHW demand” or “Central Heat, Optional Priority”. This has been set to allow all of the heat to be provided for fast indirect water heater recovery. After “priority protection” time or the end of the Domestic Hot Water Heat Request the system and boiler pumps will be free to run.
Display Completely Dark Fan off, LWCO lights off, no green power light on Control	No 120Vac Power at Boiler	<ul style="list-style-type: none"> • Check breaker and wiring between breaker and boiler. • Blown high voltage fuse or breaker tripped.
Display Completely Dark, Fan running	No 24Vac Power to Control No 24 Vdc to Display	<ul style="list-style-type: none"> • Loose 120Vac connection wiring between boiler J-Box and transformer or 24 Vdc power supply. • Loose 24 Vac wiring connection between transformer and Control. • Blown low voltage fuse or transformer blown. • Bad transformer or bad 24 Vdc power supply.
Blinking Green power light on Control	Control Fault	The green light is connected to internal power supply. The power supply is repeatedly starting and stopping (not normal) making the light flash. The microprocessors are not running. Try disconnecting all terminals except 24VAC to power the Control. The green light should be steady. If it is not, then the control is defective. If steady, start plugging in all the connectors while watching the green light. When faulty wiring reconnected, green light will begin to flash.

Trouble- Shooting

General Issues (continued)

Faults are investigated by selecting the “Help” button from the “Home” screen. When a fault is active the “Help” button flashes red. Continue selecting the flashing buttons to be directed to the Fault cause.

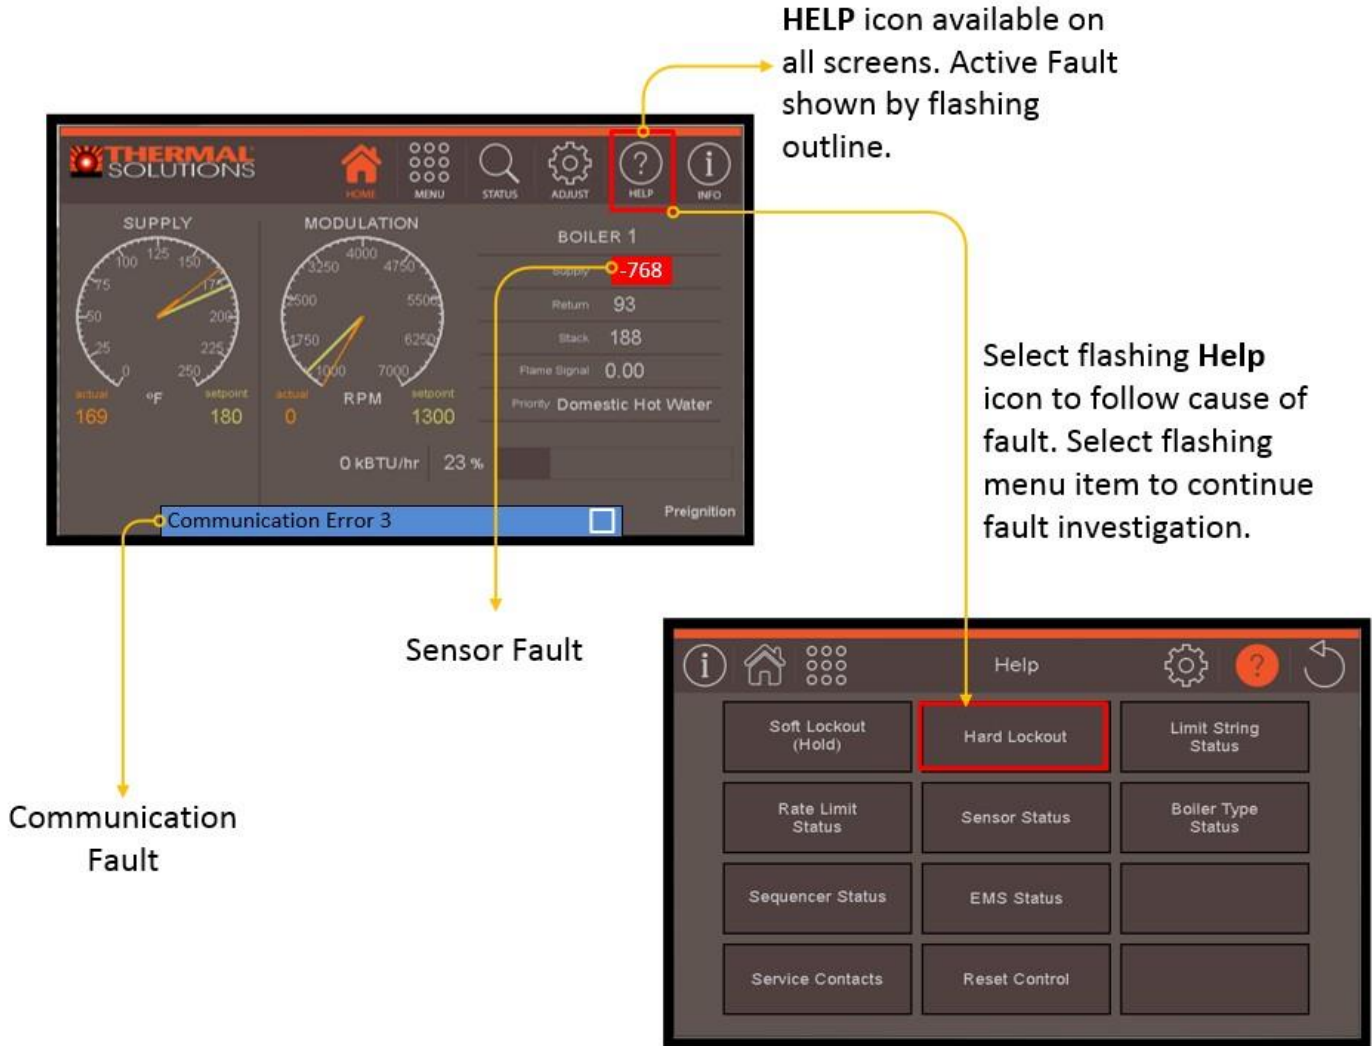

 
 

 



Figure 21: General Alarms

Indication	Condition	Possible Cause
Blank Screen with “Reading” shown	Display lost communication with control	Failure to establish Communication upon display boot-up once you establish communication, reboot display to read controller and setup display properly.
Communication Error 2	Communication Fault	The display write attempt has failed. Possible causes are that the password level is too low for the parameter being changed, the controller is un-configured, or has a memory failure. Lockout 20 Safety Data Verification will be displayed if control is not configured or has had a memory loss. In this case replace control.
Communication Error 3	Communication Fault	Display has lost communication with controller. - Loose or defective display harness - Defective Display - Defective Control - Incorrect Communication Parameters (See page 22)

Trouble- Shooting

General Issues (continued)

Flashing Red Outline	Condition	Possible Cause
	Rate Limit Status	<p>The following messages appear when the firing rate is limited or reduced to help avoid unnecessary cycling or lockout. Refer to Soft and Hard Lockout sections for potential corrective action.</p> <ul style="list-style-type: none"> - High Stack Temperature Rate Limit (Temp > 210 F) - High Supply Temperature Rate Limit (Temp > 190 F) - High Differential Temperature Rate Limit (Delta T > 80 F) - Minimum Modulate (normal start/stop sequence) - Forced Modulation (normal start/stop sequence) - Burner Control Rate (normal start/stop sequence) - Manual Firing Rate (User selection) - Low Fire Hold (user selection)
	Boiler Size Fault	<p style="text-align: center;">WARNING!</p> <p>Boiler size setting may not match actual boiler size.</p> <p>The Boiler size setting determines min, max and light-off blower speeds. Incorrect boiler size can cause hazardous burner conditions and improper operation that may result in PROPERTY LOSS, PHYSICAL INJURY, OR DEATH.</p>
	Sequencer Fault	<p>This alarm is active if the slave boiler has lost communication with the Sequence Master. Check the following:</p> <ul style="list-style-type: none"> - RJ 45 peer-to-peer network disconnected - Sequencer Master was Enabled and then Disabled - Master's Boiler has been powered down. - To clear fault restore communication or cycle power
	EMS Status	<p>This alarm is active if there is a fault with the Energy Management System (EMS) interface. Signals received from the EMS are listed with selection status and present value.</p>
	Service Contact	<p>The user is given the contact information of the responsible installing contractor, service company, representative and manufacturer. Refer to page 35 for data entry instructions</p>
	Reset Control	<p>When the lockout condition has been cleared, manual reset hard Lockouts maybe reset here or on the top of the control.</p>

Trouble- Shooting

Sensors Status

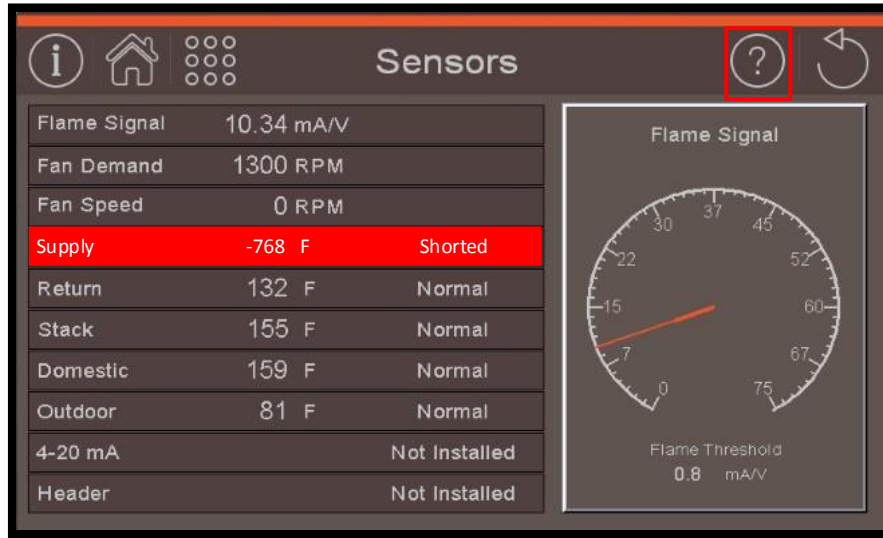


Figure 22: Sensor Screen shown with Shorted Supply Sensor

The sensor status screen is selected from the **MAIN** or **HELP** menus. A failed sensor is shown with a red background. By selecting on the individual sensors a larger display “gauge” with applicable limits is provided. When a sensor fails “opened” or “shorted” the value is changed to reverse video (background red and value black) and shows “024” or “768” respectively to indicate that there is a fault with the sensor.

Each Sensor is provided with the following diagnostic information:


Indication	Possible Cause
Not Installed	The sensor has not been selected. As shown in Figure 22 above, the Header sensor has not been selected. Refer to the Parameter Adjustment section for additional information.
Open	Check sensor wiring. Sensor open will show if the sensor has not yet been wired to the boiler or if a wire is loose.
Shorted	Check sensor wiring. Sensor terminals are connected to each other or the sensor has failed.
Outside low range Outside high range	Sensor input is out of range. Sensor is defective or is being subjected to electrical noise.
Not reliable	Sensor is unreliable. Sensor is defective or is being subjected to electrical noise.

Trouble- Shooting

Limit String

The Limit String Status screen shows the safety limit status. A contact icon, either “ON” or “OFF”, graphically represents each safety limit. The “ON” contact icon with normal text; the “OFF” contact icon is shown in red. “ON” means that the contact is closed and there is no issue. An “OFF” limit means the contact is open and the limit is not “made”.

Limit String Status screen (Figure 23) shows boiler limits in order, 120 Vac positive to neutral. When a limit is “OFF”, all other contacts below (or “downstream”) that limit will also show as “OFF”. When troubleshooting, **the first Limit in the string of “OFF” Limits is the contact to inspect.**

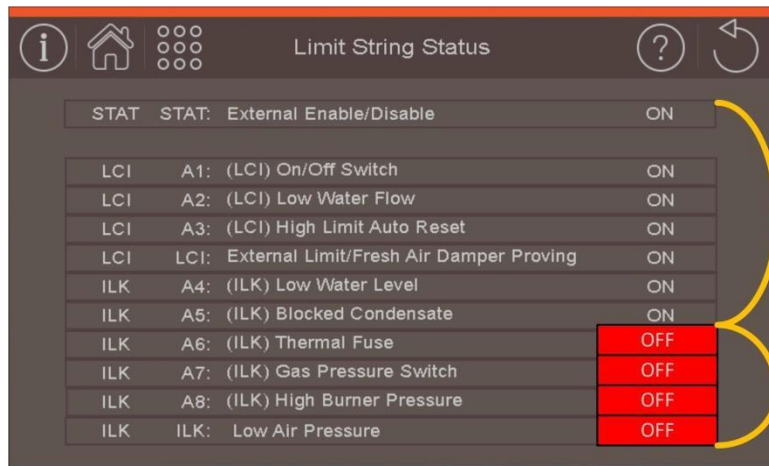

“ON” limits indicating the limits are closed.

“OFF” limits indicating the limits are open. In this case the contact at A6 (ILK) Thermal Fuse Limit is open. The status of limits downstream is unknown.

Figure 23: Limit String Status

NOTE: Some Limits cycle normally based on the function of the boiler. For example, the Low Air Pressure limit will cycle to “OFF” after the boiler post purge is complete. The “Help” icon only indicates a fault (flashes) when the limit string is not behaving normally.

Trouble- Shooting

Soft Lockouts (Holds)

Display Faults

When a soft lockout occurs, the boiler will shut down and the “Help” button will “blink”. Select the “blinking” “Help” button to determine the cause of the soft lockout. The boiler will automatically restart once the condition that caused the lockout is corrected.

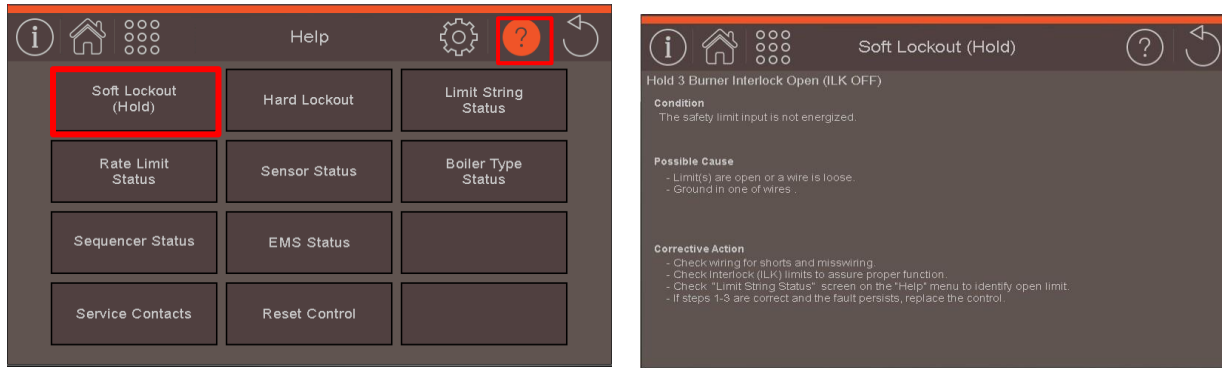


Figure 24: Soft Lockout Example

The Soft Lockout screen will display the Hold number, name of the Hold, the condition that caused the Hold, possible causes, and a basic description of corrective actions that may be taken to fix the problem.

Below is an in-depth guide to all possible lockouts.

Lockout Number	Condition	Possible Cause
1 Anti-Short Cycle	Minimum time between starts has not been reached. Normal delay used to avoid excessive cycles.	- Faulty contact provided by the EMS system.
2 Boiler Recycling Limits Open (LCI OFF)	The LCI input is not energized.	- Limit Control Input (LCI) is not 'ON'. Refer to limit string screen for list of limits. - A wire is loose.
3 Boiler Safety Limit Open	Boiler Safety Limit Interlock (ILK) is OFF.	- Lockout input (ILK) is not 'ON'. Refer to limit string screen for list of limits. - Loose wiring to limit device. - Jumper not installed.
7 Return sensor fault	Shorted or open return temperature sensor.	- Shorted or miswired return sensor wiring. - Defective return sensor.
8 Supply sensor fault	Shorted or open supply temperature sensor.	- Shorted or miswired supply sensor wiring. - Defective supply sensor.
9 DHW sensor fault	Shorted or open Domestic Hot Water (DHW) temperature sensor.	- Shorted or miswired DHW sensor wiring. - Defective DHW sensor.
10 Stack sensor fault	Shorted or open flue gas (stack) temperature sensor.	- Shorted or miswired flue temperature sensor wiring. - Defective flue temperature sensor.

Trouble- Shooting

Soft Lockouts (Holds) Continued

Lockout Number	Condition	Possible Cause
13 Flame rod shorted to ground	Flame rod shorted to ground	<ul style="list-style-type: none"> - Shorted or miswired flame rod wiring. - Defective flame rod.
14 Delta T inlet/outlet high	Temperature rise between supply and return is too high.	<ul style="list-style-type: none"> - Inadequate boiler water flow. Verify that circulator is operating and that circulator and piping are sized per Installation Instructions Manual, Water Piping and Trim Section.
15 Return temp higher than supply	The Control is reading a return sensor temperature higher than the supply sensor temperature. Condition must be present for at least 75 seconds for this error code to appear.	<ul style="list-style-type: none"> - Flow through boiler reversed. Verify correct piping and circulator orientation. - No boiler water flow. Verify that system is purged of air and that appropriate valves are open. - Sensor wiring reversed. - Supply or return sensor defective.
16 Supply temp has risen too quickly	Supply water temperature has risen too quickly.	<ul style="list-style-type: none"> - See possible causes for "Hard Lockout 4". - Inadequate boiler water flow. - Verify that circulator is operating and that circulator and piping are sized per Installation Instructions Manual, Water Piping and Trim Section.
17 Blower speed not proved	Normal waiting for blower speed to match purge and light-off setpoint.	-
27 Interrupted Airflow Switch On	Interrupted Airflow Switch Failed in closed position	<ul style="list-style-type: none"> - The air proving switch has failed on, check switch is operating properly
27 or 28 Interrupted Airflow Switch Off	Interrupted Airflow Switch Failed to Close	<ul style="list-style-type: none"> - The air proving switch has failed to close; - Check switch, check switch connection and wiring. - Blocked vent, blocked inlet, blocked or disconnected inlet air switch tube, blocked heat exchanger or burner. - Something is blocking air/flue gas flow through boiler

Trouble- Shooting

Hard Lockouts

Display Faults

When a fault is active the “Help” button flashes red. The “Help” button will lead you to the Help menu, which will flash to indicate the issue with the boiler. If “Hard Lockout” is flashing select that button to investigate further.

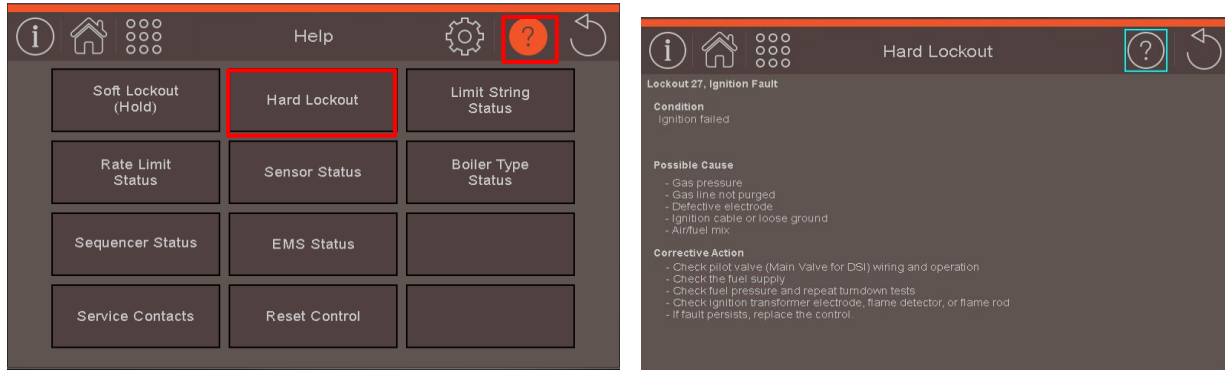


Figure 25: Hard Lockout Example

The Hard Lockout screen will display the Lockout number, name of the lockout, the condition that caused the lockout, possible causes, and a basic description of corrective actions that may be taken to fix the problem.

Below is an in-depth guide to all possible lockouts.

Lockout Number	Condition	Possible Cause
3 Burner Interlock Open (ILK OFF)	The safety limit input is not energized.	<ul style="list-style-type: none"> - Limit(s) are open or a wire is loose. - Ground in one of the wires.
4 Supply high limit	Supply sensor detected temperatures exceeding High Limit.	<ul style="list-style-type: none"> - Heating load at time of error was far below the minimum firing rate of the boiler. - Defective system circulator or no flow in primary loop. - Defective boiler circulator, no flow or insufficient flow in boiler loop. - Control system miswired so that the boiler operation is permitted when no zones are calling.
5 DHW high limit	DHW sensor detected temperatures in excess of Setpoint.	<ul style="list-style-type: none"> - DHW load at time of error was far below the minimum firing rate of the boiler. - Control system miswired so that boiler operation is permitted when no DHW are calling.
6 Stack High limit	Flue gas (Stack) sensor detected temperatures in excess of 204°F (95.6°C).	<ul style="list-style-type: none"> - Heat exchanger needs to be cleaned. - Boiler over-fired. - Air-fuel mixture out of adjustment - consult factory.
12 Flame detected out of sequence	A flame signal was present when there should be no flame.	<ul style="list-style-type: none"> - Defective gas valve - make sure inlet pressure is below maximum on rating plate before replacing valve.

Trouble- Shooting

Hard Lockouts (continued)

Lockout Number	Condition	Possible Cause
14 Delta T Inlet/Outlet High	The difference between the inlet/return and the outlet/supply temperature is too large.	- Inadequate boiler water flow
15 Return Temp Higher Than Supply	The temperature of the return/inlet is higher than the temperature of the supply/outlet	- Water flow reversed - No flow, sensor reversed, sensor bad
16 Supply Temp Risen Too Quickly	The supply/outlet temperature has risen too quickly.	- Water flow reversed - No flow, sensor reversed, sensor bad
18 Light off rate proving failed	Blower is not running at Light-off rate when it should or blower speed signal not being detected	- Heating load far below min - Bad pump or low primary flow - Boiler on with no zones on
19 Purge rate proving failed	Blower is not running at Purge rate when it should or blower speed signal not being detected	- Loose connection in 120 VAC blower wiring. - Loose or miswired blower speed harness. - Defective blower
20 Configuration Fault	Unacceptable Control Safety related parameter detected. (See display for details)	- Safety Parameter verification required. Contact factory.
21 Invalid Modulation Parameter	Unacceptable Control Modulation related parameter detected.	- Reset the control.
22 Safety data verification needed	Safety related parameter change has been detected and verification has not been completed.	- Safety related Control parameter has been changed and verification has not been performed.
23 24VAC voltage low/high	Control 24Vac control power is high or low.	- Loose connection in 24Vac VAC power wiring. - Loose or miswired 24Vac harness. - Miswired wiring harness causing power supply short to ground. - Defective transformer. - Transformer frequency, voltage and VA do not meet specifications.
24 Fuel Valve Error	Power detected at fuel valve output when fuel valve should be off.	- Loose or defective gas valve harness. Check electrical connections. - Defective gas valve (check for 24 Vac at harness during trial for ignition before replacing valve).
25 Hardware Fault	Internal control failure. (See display for details)	- Reset the control. If problem reoccurs, replace the Control.
26 Internal Fault	Internal control failure.	- Reset the control. If problem reoccurs, replace the Control.

Trouble- Shooting


Hard Lockouts (continued)

Lockout Number	Condition	Possible Cause
27 Ignition failure	Flame failure	<ul style="list-style-type: none"> - No gas pressure. - Gas pressure under minimum value shown on rating plate. - Gas line not completely purged of air. - Defective Electrode. - Loose burner ground connection. - Defective Ignition Cable. - Defective gas valve (check for 24 Vac at harness during trial for ignition before replacing valve). - Air-fuel mixture out of adjustment - consult factory.
27 Pre-Ignition Interlock (PII) OFF	Pre-Ignition Interlock Open	<ul style="list-style-type: none"> - Open or loose limit
27 Interrupted Airflow Switch (IAS) OFF	Interrupted Airflow Switch Open	<ul style="list-style-type: none"> - Airflow too low - Defective switch
27 Interrupted Airflow Switch (IAS) ON	Interrupted Airflow Switch Closed	<ul style="list-style-type: none"> - Unexpected airflow - Defective switch - Miswired
27 High Fire Switch Fault	High Fire Switch Closed	<ul style="list-style-type: none"> - Miswired - Defective switch
31 Fan Failed	Fan speed failed	<ul style="list-style-type: none"> - Miswired - VFD failed to check speed
32 ILK ON	This lockout occurs when the interlock string is closed before the blower starts. The airflow switch is the only device in the interlock string that will open when in standby.	<ul style="list-style-type: none"> - Air pressure in the boiler room has become negative. - Excessive downdraft in the stack. - Blower is spinning before being commanded by the hydronic control. Make sure blower is not running in standby. - Airflow switch is stuck closed.
42 AC Phase Fault	AC inputs phase reversed	<ul style="list-style-type: none"> - Check the control and display connection. - Check the control power supply and make sure that both frequency and voltage meet the specs - Ensure 24 Vac is functioning properly
46 Pilot Test Flame	Pilot Test Flame Timeout	<ul style="list-style-type: none"> - Pilot test flame timed out. Reset the control to restart.
47 Flame Lost	Flame lost in MFEP	<ul style="list-style-type: none"> - Pilot Valve (main Valve for DSI) - Fuel Supply - No gas pressure, Gas pressure under minimum value shown on rating plate, Gas line not purged - Defective flame sensor - Loose ground - Air/fuel mix out of adjustment
	Flame Lost early in RUN	
	Flam Lost in RUN	
284 Memory Reset To Default	OEM Memory Lost, Honeywell Default Memory Restored	<ul style="list-style-type: none"> - Controller Failure - Consult Factory - Replace Control

Trouble Shooting

Using Archives

The archives are a fundamental resource for the users interested in commissioning, optimizing and trouble shooting an issue with the boiler. Using the archives a user may review up to 4 months of sensor values, up to 3000 alarms, lockout history or cycle and run history. Data may be simply viewed on screen or exported to a thumb drive for detailed analysis.

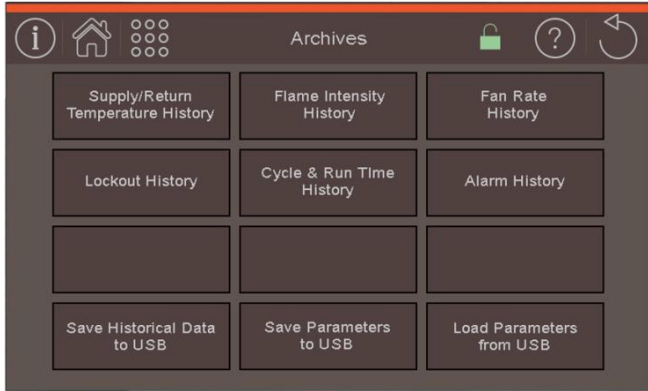

Supply/Return Temperature History / Flame Intensity History / Fan Rate History

Supply, Return, flame and fan data provides an opportunity to investigate issues, learn about system operation or fine tune the boiler. Values are stored on the display for up to 4 months. Historical data values are viewed by scrolling left and right, the further left, the older the data. By touching the trend at any location, the exact data points will display as well as the Date and Time at which they were recorded.



Touch at any point in the graph to show the exact data, and Time and Date it was taken at.

Lockout History

Lockout History is stored in a first-in, first-out basis. Each lockout file is stored with boiler run hour of when the lockout occurred, status at the time of the lockout, and the Annunciator in the limit string that caused the lockout (Only if applicable to that lockout). Up to 15 lockouts may be stored in the Lockout History, 1 being the newest. Touching the lockout shows more information about the lockout that occurred.

No.	Lockout	Description	1st Annunciator Out	Run Hour	Status During
3		Boiler Safety Limit Open		51	Standby
27		Lockout 27: Touch Valve for Assets		61	Standby
4		Blocked Supply High Limit		50	Running
32		Flk On		50	Standby
3		Boiler Safety Limit Open	AS Blocked Condensate	50	Running

Touch any Lockout to see more information about it.

Cycle & Run Time History

Cycle and Run time data is provided for control, boiler and pumps. Additionally, a load profile is collected. Graphs are provided that show amount of time the boiler operated at each load point. Data may be reset.

Parameter	Value	Parameter	Value
Controller Cycle Count	361	Controller Run Time	83 Hrs
Burner Cycle Count	275	DHW Pump Cycle Count	62
Burner Run Time	53 Hrs	Boiler Pump Cycle Count	112
System Pump Cycle Count	150	DHW Load Graph Samples	0
		CH Load Graph Samples	21

Touch the parameter to clear the current count.


Trouble Shooting

Using Archives

Alarm History

The alarm history is a powerful tool that will record up to 3000 alarms. These alarms include **Lockouts, Holds, Sensor Faults, EMS Communication Error or Loss, Boiler-to-Boiler Network Communication Loss, 4-20mA Errors, and Limit String Cycling.**

The alarms are recorded in a list with the most recent appearing at the bottom. The alarm list can be scrolled through to investigate past alarms and most current alarms. The alarms are given a date and time stamp which allows for better troubleshooting capability. The alarm list may be downloaded to a USB in the form of a spreadsheet by using the **Save to Historical Data** function in the **Archives Menu.**

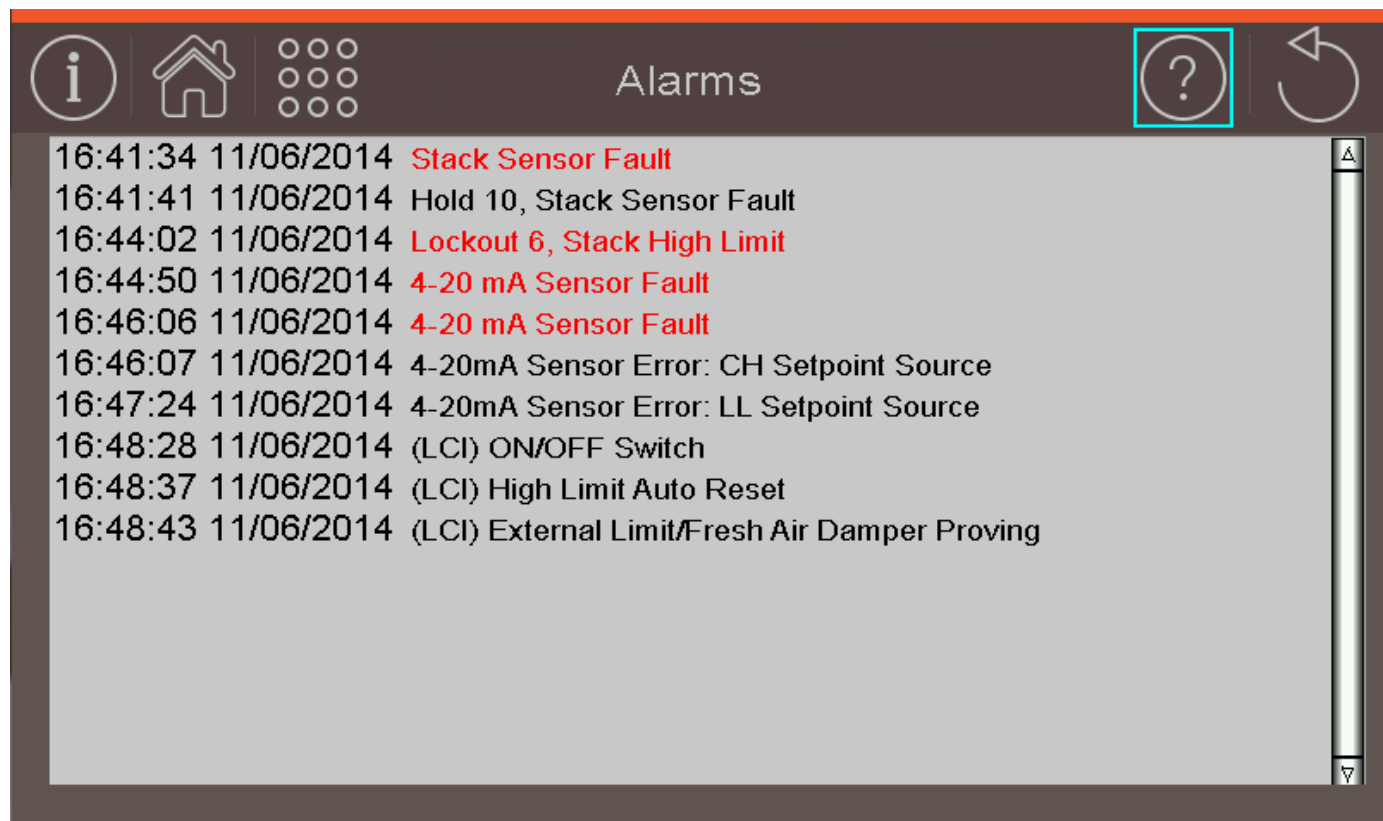

Trouble Shooting

Using Archives

USB Thumb Drive Requirements


The Thumb Drive **must** be formatted as a FAT32 for use with the display. In order to check the format of a USB Thumb Drive, follow these instructions:

- Plug the USB Drive into a computer
- Ensure that the USB Drive does not have anything currently saved on it.
- Go to My Computer (Select Start > Computer)
- Right click on the “Removable Disk” and select Properties
- Under the “General” tab confirm “File system: FAT32”
- If it does not say FAT32, close window, return to My Computer
- Right Click on the “Removable Disk” and select Format
- Select File system = FAT32
- Select Start and then select OK to format the USB Thumb Drive.
- The USB Thumb Drive is now FAT32 format

Save Historical Data

“Save Historical Data” will save historical parameter data and the current alarm list as spreadsheets to the USB Drive that is plugged into the Boiler Display. The files will have a date code in the file name, year/month/date, of when they were saved from the boiler. That CSV files will be saved to the USB thumb drive under the following path:

My Computer > Removable Disk (USB Drive) > HMI > HMI000 > @HMI0001 > CSV

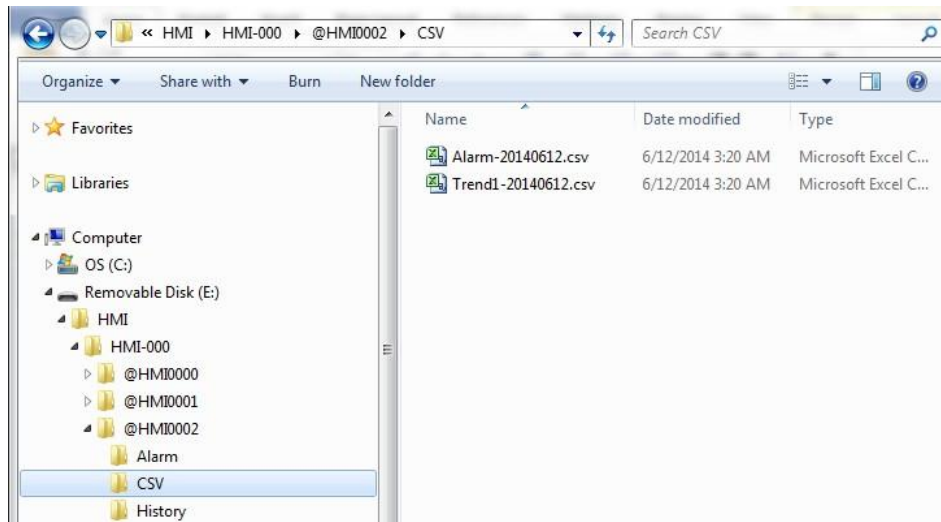

NOTE: @HMI0001 is newer than @HMI0000. If another set of historical data is saved from the display, the new file will be saved as @HMI0002. The highest number is the newest data.

NOTE: Trend1-20140612.csv & Alarm20140612 are the names of the files that saved from the boiler in the example above. The 20140612 is the date code of whenever the data was retrieved from the boiler. In the example shown it was the year 2014, the 6th month of the year, 12th day of that month.

Trouble Shooting

Using Archives

An example of the **Trend1-20141022.csv** file follows:

Supply, Return, Header, & Stack are all sensor data.

Setpoint is the active setpoint of the boiler at time data was taken.

Fan speed and Fan Demand show the modulation of the boiler.

Flame Signal is in shown mA/V and should have the form 00.00. (eg. At time 20:19:55 above it is 12.39)

CH Demand & DHW Demand show what demands were active at what time. 1 = Demand 0 = No demand.

Boiler State is the current status of the boiler the list of boiler states can be found in Table 12

Outdoor Temp is sensor data. (-32256 value indicates no sensor data)

		SUPPLY	RETURN	HEADER	STACK	SETPOINT	FAN SPEED	FAN DEMAND	FLAME SIGNAL	CH DEMAND	DHW DEMAND	BOILER STATE	OUTDOOR TEMP
20:13:38	10/15/2014	120	100	117	78	179	5650	5650	0	1	0	12	-32256
20:14:39	10/15/2014	125	101	117	78	179	5650	5650	0	1	0	12	-32256
20:15:40	10/15/2014	130	101	117	78	179	5650	5650	0	1	0	12	-32256
20:18:54	10/15/2014	133	101	117	78	179	5650	5650	1238	1	0	12	-32256
20:19:55	10/15/2014	136	101	117	78	179	5650	5651	1239	1	0	12	-32256
20:20:55	10/15/2014	140	101	117	78	179	5650	5651	1239	1	0	12	-32256
20:21:56	10/15/2014	145	101	117	78	179	5650	5651	1235	1	0	12	-32256

Table 12, Boiler State

Boiler State	#
Initiate	0
Standby delay	1
Standby	2
Safe Startup	3
Drive Purge	4
Prepurge	5
Drive Lightoff	6
Preignition Test	7
Preignition	8
PFEP	9
MFEP	10
Direct Ignition	11
Running	12
Postpurge	13
Lockout	14

Trouble Shooting

Using Archives

An example of the **Alarm-20141022.csv** file follows:

Date and Time of alarm occurrence

10/16/2014	23:48:49	O	(LCI) ON/OFF Switch
10/16/2014	23:48:52	X	(LCI) ON/OFF Switch
10/21/2014	21:18:59	O	Hold 14, Delta T Inlet/Outlet High
10/21/2014	21:19:08	O	(LCI) ON/OFF Switch
10/21/2014	21:19:11	X	(LCI) ON/OFF Switch
10/21/2014	21:19:25	X	Hold 14, Delta T Inlet/Outlet High
10/21/2014	21:19:45	O	Lockout 4, Outlet/Supply High Limit
10/21/2014	21:20:18	X	Lockout 4, Outlet/Supply High Limit
10/21/2014	21:23:49	O	Lockout 4, Outlet/Supply High Limit
10/21/2014	21:24:13	X	Lockout 4, Outlet/Supply High Limit
10/21/2014	21:24:29	O	Lockout 4, Outlet/Supply High Limit
10/21/2014	21:24:33	X	Lockout 4, Outlet/Supply High Limit
10/21/2014	21:24:45	O	Lockout 4, Outlet/Supply High Limit

O means the alarm was tripped.
X means the alarm was cleared.

The alarm list is organized so that the newest alarms are at the bottom.

Save Parameters to USB

“Save Parameters” saves the current parameter settings of the boiler, including the contact information of the contractor, Service Company, and sales representative, to a USB Drive. This allows for easy transfer of boiler parameters from one boiler to another. Refer to parameter summary for list of parameters.

Instructions for Save Parameters:

1. Plug USB thumb drive into USB Port on Boiler
2. Select Main Menu > Archives > Save Parameters to USB
3. Confirm or Cancel Save Parameters.

Once procedure is complete the display saves two files in a directory as follows:

My Computer > Removable Disk (USB Drive) > HMI > HMI000 >
 - Parameter File: Recipe.csv
 - Contact Information Recipe32.csv:

Load Parameters from USB

“Load Parameters” loads the current saved parameter settings off a USB Drive. This allows for easy transfer of boiler parameters and contact information from one boiler to another. Refer to parameter summary for list of parameters.

Parameter files must be stored and named as follows:

My Computer > Removable Disk (USB Drive) > HMI > HMI000 >
 - Parameter File: Recipe.csv
 - Contact Information Recipe32.csv:

Instructions for Load Parameters:

1. Plug USB thumb drive into USB Port on Boiler
2. Select Main Menu > Archives > Load Parameters to USB
3. Confirm or Cancel Load of Parameters.
4. Confirm or Cancel Load of Contact Information.

Specifications

General

Control

Dimensions: 9 21/64" x 6 21/64"

Electrical Ratings:

- Operating voltage:
24Vac (20 to 30 Vac, 60 Hz \pm 5%)
- Pump Relay Outputs:
120 Vac: 44.4 ALR, 7.4 Amps run
- Alarm Relay Output:
120 Vac: 6.3 ALR, 0.63 Amps run

Operating Temperature:

-4°F to 150°F (-20°C to 66°C)

Storage Temperature:

-40°F to 150°F (-40°C to 66°C).

Humidity: Up to 95% Relative Humidity, noncondensing at 104°F for 14 days. Condensing moisture may cause safety shutdown.

Vibration: to 0.5g Continuous (V2 level)

Sensors: All temperature sensors 10k NTC

NTC Sensors (temperature versus resistance).

Temp °C (°F)	10K NTC (kOhm) Beta of 3950
30 (-22)	176.08
20 (-4)	96.81
10 (14)	55.25
0 (32)	32.64
10 (50)	19.9
20 (68)	12.49
25 (77)	10
30 (86)	8.06
40 (104)	5.32
50 (122)	3.6
60 (140)	2.49
70 (158)	1.75
80 (176)	1.26
90 (194)	0.92
100 (212)	0.68
110 (230)	0.51
120 (248)	0.39

Display

Dimensions:

- Bezel: 8.46" x 6.33" x 1.96"
- Panel Cutout: 7.75" x 5.62"

Electrical Ratings:

- Operating voltage: DC +24V (-10% ~+15%)
(please use isolated power supply)
- **Power Consumption:** 5W

- **Backup Battery**

3V Lithium Battery CR2032, about 3 years operating life with power removed. Battery used to maintain time and date clock, not display memory.

Operating Temperature:

32°F ~ 140°F (0°C ~ 60°C)

Storage/Shipping Temperature:

-4°F ~ 140°F (-20°C ~ 60°C)

Humidity:

- 10% ~ 90% RH [0 ~ 40°C], 10% ~ 55% RH [41 ~ 50°C]

Vibration:

- IEC 61131-2 Compliant
- 5Hz \leq f < 9Hz = Continuous: 1.75mm / Occasional: 3.5mm
- 9Hz \leq f \leq 150Hz = Continuous: 0.5g / Occasional: 1.0g
- X, Y, Z directions for 10 times

Enclosure: NEMA 4/IP65.

Specifications

General

Replacement Parts

Listed in Table 1 are the replacement parts available for the Arctic Boiler. These include temperature sensors, the control, display, and more. Part numbers are included to simplify the ordering process.

Part Number	Name	Description
105681-01	Control	Commercial Concert Boiler Control, CSD-1 Compliant, Auto Temperature Control, 120 Vac Ignition Control, 8 Limit Monitoring Points, with Pre-purge and Post Purge, Safety Rated Temperature Limit, PWM and 4-20mAdc Firing rate outputs, circulator relay outputs.
105682-01	Display	7 inch LCD Touch Screen Display, 24Vdc Power Supply, USB Connection, two RS485 Modbus ports
105686-01	Supply Sensor or Flue Gas Sensor	10k ohm, dual element, three wire, limit rated, thermistor type, temperature sensor, 6 inch lead wires, female Molex 0039014037 quick connector, 3/8 inch diameter.
105685-01	Return Sensor	10k ohm, single element, two wire thermistor type, temperature sensor, 6 inch lead wires, female Molex 0039013029 quick connector, 3/8 inch diameter.
101935-01	<u>Direct Immersion Type</u> DHW Sensor Header Sensor	10K ohm, single element, two wire thermistor type, Direct Immersion temperature sensor. Insertion is 1/2" NPT.
105685-01	<u>Thermowell Type</u> DHW Sensor Header Sensor	10K ohm, single element, two wire thermistor type, temperature sensor, suitable for insertion into thermowells. Thermowell not included.
105684-01	Thermowell	1/2"NPT Brass Immersion Well.
106035-01	Wireless Outdoor Sensor Kit	Wireless outdoor air reset adapter, includes wireless receiver module and wireless outdoor sensor. The receiver provides a wireless connection to the outdoor mounted sensor. Receiver is wired to the control's EnviraCOM terminals.
801SOL0012	Wired Outdoor Sensor	10k ohm, single element, two wire thermistor type, temperature sensor, outdoor air temperature sensor with weather proof box and protective sleeve.
106432-01	BACnet Universal Gateway Kit (includes gateway & manual)	Energy Management Systems (EMS) Universal Gateway translates Modbus 485 to BACnet MS/TP, BACnet/IP, Metasys N2 Open, or Modbus TCP. Compatible with Concert Boiler Control, Apex Boiler Control (ABC), Thermal Solutions Boiler Control (TSBC), Sage2.1 Control.
106433-01	LonWorks Universal Gateway Kit (includes gateway & manual)	Energy Management Systems (EMS) Universal Gateway translates Modbus 485 to LonWorks. Compatible with Concert Boiler Control, Apex Boiler Control (ABC), Thermal Solutions Boiler Control (TSBC), Sage2.1 Control.
CR2032	Display Battery	3V Lithium Battery. Used to maintain time and date clock.

Specifications

Parameter Summary

USB	Parameter	Range	Security	Page
System Menu				
X	Temperature Units	F / C	Basic	30
X	Outdoor Sensor Source	Not Installed / Modbus / Wired / Wireless	Basic	30
X	Outdoor Sensor Calibration	- 50 to 50 °	Basic	30
X	Antishort Cycle Time	0 - 20 minutes	Basic	30
X	CH Frost Protection	Enable / Disable	Basic	30
X	CH Frost Protection Setpoint	- 50 to 50 °F	Basic	30
X	Installer Password	none	Factory	31
X	Warm Weather Shutdown Enable	Enable / Disable	Basic	31
X	Warm Weather Shutdown Setpoint	20 to 100 °F	Basic	31
	System Date		Basic	31
	System Time		Basic	31
X	Auto Jump To Home Page	Enable / Disable	Basic	31
Modulation Menu				
	Boiler Type	NA	Factory	32
	CH Max Modulation Rate	(Min Mod Rate + 100) to Absolute Max Mod	Factory	32
	DHW Max Modulation Rate	(Min Mod Rate + 100) to Absolute Max Mod	Factory	32
	Minimum Modulation Rate	Absolute Min Mod to (CH Max Mod Rate - 100)	Factory	32
	Lightoff Rate	Min Modulation to Default Lightoff Rate	Factory	32
Operation Menu				
	Auto/Manual	Auto / Manual	Supervisor	28
	Rate	Min Mod Rate to CH Max Mod Rate	Supervisor	28
Pump Menu				
X	System Pump	Never / Any Demand / Central heat, No Priority / Central Heat Optional Priority / Fresh Air Damper	Supervisor	33
X	Boiler Pump	Never / Any Demand / Central Heat, Off DHW	Supervisor	33
X	DHW Pump	Never / Primary loop Piped IWH / Boiler Piped IWH / Fresh Air Damper	Supervisor	34
X	CH pump overrun time	0 to 60 minutes	Supervisor	34
X	DHW pump overrun time	0 to 60 minutes	Supervisor	34
X	Boiler pump overrun time	0 to 60 minutes	Supervisor	34
X	Pump exercise interval	0 to 40 days	Supervisor	34
X	Pump exercise time	0 to 600 seconds	Supervisor	34
Central Heat Menu				
X	CH Setpoint	50 to 190 °F	Basic	36
X	CH TOD Setback Setpoint	50 to 190 °F	Basic	36
X	CH Difference Above	3 to 29 °F	Basic	36
X	CH Difference Below	3 to 29 °F	Basic	36
X	CH Response Speed	1 to 5	Supervisor	36
X	CH Modulation Sensor	Outlet Sensor / Header Sensor	Supervisor	37
X	Central Heat Low Fire Hold Time	0 to 30 minutes	Supervisor	37
X	Central Heat Low Fire Hold Rate	Absolute Min Mod to Lightoff Rate Default	Supervisor	37
Domestic Hot Water Menu				
X	DHW Priority Time	0 to 90 minutes	Basic	37
X	DHW Setpoint	50 to 190 °F	Basic	37
X	DHW TOD Setback Setpoint	50 to 190 °F	Basic	37
X	DHW Difference Below	3 to 29 °F	Basic	37
X	DHW Difference Above	3 to 29 °F	Basic	37
X	DHW Response Speed	1 to 5	Supervisor	38
X	Domestic Low Fire Hold Time	0 to 30 minutes	Supervisor	38
X	Domestic Low Fire Hold Rate	Absolute Min	Supervisor	38
X	DHW Demand/Modulation	DHW Switch & Outlet Sensor / DHW Sensor & DHW Sensor	Basic	38
Outdoor Reset Menu				
X	Outdoor Reset Enable/Disable	Enable / Disable	Basic	39
X	Minimum Outdoor Temperature	- 50 to 32 °F	Basic	39
X	Maximum Outdoor Temperature	35 to 100 °F	Basic	39
X	Low Water Temperature	70 to 180 °F	Basic	39
X	Minimum Boiler Water Temperature	50 to 185 °F	Basic	39

Specifications

Parameter Summary

USB	Parameter	Range	Security	Page
X	Boost Time	0 to 30 minutes	Basic	39
X	Central Heat ODR Max Off Point	50 to 190 °F	Basic	39
X	Lead Lag CH ODR Max Off Point	50 to 190 °F	Basic	39
Sequence Master Menu				
	Master Enable/Disable	Disable / Enabled	Supervisor	40
	Base Load Common Rate	25 to 100 %	Supervisor	40
	Indirect Water Heater	Boiler Piped / Primary Piped	Supervisor	40
	Boiler Start Delay	0.5 to 20 minutes	Supervisor	40
	DHW Two Boiler Start	Enable / Disable	Supervisor	40
	Stop All Boilers	50 to 195 °F	Basic	40
	Boiler Stop Delay	0.5 to 5 minutes	Supervisor	40
	Lead Rotation Time	8 to 48 hours	Basic	40
	LL Response Speed	0 to 5	Supervisor	40
Slave Sequencer Menu				
	Slave Selection Order	First / Normal / Last	Supervisor	41
	Boiler Address	1 to 8	Supervisor	41
Limits Menu				
X	Stepped Modulation Start Offset	(Stepped Modulation Recycle Offset + 6) - 30	Factory	41
X	Stepped Modulation Recycle Offset	10 - (Stepped Modulation Start Offset - 6)	Factory	41
X	Preferred Stack Limit Setpoint	150 °F to Stack Default Limit	Factory	41
X	Preferred Outlet Limit Setpoint	60 °F to Outlet Default Limit	Factory	41
EMS Remote Demand Menu				
	Modulation Source	Local / 4 - 20mAdc / Modbus	Supervisor	20
	CH Demand Switch	Local / Modbus	Supervisor	20
	LL Demand Switch	Local / Modbus	Supervisor	20
	4mA Water Temp	50 to 185 °F	Supervisor	20
	Lead Lag Setpoint Source	Local / 4 - 20mAdc / Modbus	Supervisor	20
	Central Heat Setpoint Source	Local / 4 - 20mAdc / Modbus	Supervisor	20
	20mA Water Temp	50 to 185 °F	Supervisor	20
	Analog Input Hysteresis	0 to 10	Supervisor	20
	Analog output hysteresis	0 to 40	Supervisor	20
	Analog Rate Tracking	Disable / PWM to 4 - 20mA / PWM to 0 - 10V / LL Rate to 4 - 20mA / LL Rate to 0 - 10V	Supervisor	20
Fan Tune Menu				
X	Fan speed - up ramp	0 to 12000	Supervisor	44
X	Fan slow - down ramp	0 to 12000	Supervisor	44
X	Fan gain up	1 to 100	Factory	44
X	Fan gain down	1 to 100	Factory	44
X	CH slow start enable/disable	Enable - Disable	Supervisor	44
X	DHW slow start enable/disable	Enable - Disable	Supervisor	44
X	Slow start ramp	0 to 1000 rpm	Supervisor	44
X	Slow start degrees	0 °F to 180	Supervisor	44

NOTES

“Load Parameters” loads the current saved parameter settings off a USB Drive. This allows for easy transfer of boiler parameters and contact information from one boiler to another.

Notes



P.O. Box 3244
Lancaster PA 17604-3244
Telephone 717-239-7642
Fax 877-501-5212
www.ThermalSolutions.com