Universal Gateway

Part Number: 106417-01

Instruction Manual

May 8th, 2023 Revision 18







Contents

1. Introduction	5
2. Setup	6
3. Wiring	13
4. Commissioning	27
5. Field Validating	37
6. Troubleshooting	39
7. ProtoNode Information	46
Appendix	
A. TSBC Control Points	48
B. Apex with Panasonic (4109) Points	51
C. Concert Control Apex, Amp, Bfit, Citadel, Arctic, FreeFlex (4716) Points	55
D. Conductor Points	61
D. Address DIP Switch Settings	66

Application

The Universal Gateway (ProtoNode) provides monitoring, remote setpoint, firing rate and burner on/off control to the Energy Management Systems/ Building Automation System/ Building Management System (EMS). It supports the following controllers:

- Thermal Solutions Boiler Control (TSBC)
- Apex with Control & Panasonic Display (4109 software)
- Apex with Control & Panasonic Display (4716 software)
- Apex or AMP/BFIT/CTD 400-1000L with Concert Control & Display (4716 software)
- Arctic/FreeFlex, AMP/BFIT 1000-4000 & CTD 1250-1500 with Concert Control & Display (4716 software)
- Conductor Sequencing Panel

There are two ProtoNode Options:

BACnet ProtoNode: Provides BACnet MS/TP, BACnet/IP, N2, Modbus TCP communications.

LonWorks ProtoNode: Provides Lonworks communication.

Intent

This document provides the necessary information to facilitate Gateway installation. This Instruction Manual includes practical, installation and setup detailed information. The intended users are contractors and factory support personnel.





FPC-N35-0817 Lonworks-ProtoNodes

Legend

Application	Appearance
Thermal Solutions Boiler Control (TSBC) TSBC Software.	POWER ALARM BOILER RUNNING WENU THE BUTTON TO THE POWER STATE OF THE
Apex with Control & Panasonic Display (Apex with Panasonic) May be 4109 or 4716 Software. To check software, hit the "i" button on home screen.	i Status Boiler 1 Detail 160 F 0 kbtu hr Help Standby Adjust
Apex or Amp/Bfit/Citadel 400-1000L with Concert Control & Display (Concert 4-inch) 4716 Software.	SUPPLY MODULATION BOILER 1 50 170 5000 5000 Return 33 Stack 188 Flame Signal 0.01 sectual setpoint Setpoint Priority: Standby 0 % Standby
Arctic, FreeFlex, Amp/Bfit 1000-4000, or Citadel 1250-1500 with Concert Control & Display (Concert 7-inch) 4716 Software.	SUPPLY MODULATION BOILER 1 Builtry 168 Freigntton O kBTU/hr 23 % Preigntton
Conductor Sequencing Panel	Coutiet: 139 161 Inlet: 116 143 Status: Running Available Available Available Lead Boiler Fining: 36 % 0 % 0 % 0 % Status Start Lead Boiler Arctic. EVS Hardwired Hardwired Piant Load 8000 kSTU/hr

Page 2 of 69 Part Number 106417-01

TABLE OF CONTENTS

1	Introduction	5
	BTL Mark – BACnet Testing Laboratory	
1.2	LonMark Certification	
2	Setup	6
2.1		
	1.1 Settings for Apex Boilers with Panasonic Display	
	1.1 Settings for Apex, Arctic, FreeFlex, Amp, Bfit, & Citadel Boilers/Water Heaters with Concert Displ	
	1.2 Settings for Apex, Arctic, FreeFiex, Amp, Bju, & Cuddet Botters water Freder's with Concert Bispi 1.3 Setting the Boiler Address of EVS and EVCA boilers with TSBC	
	1.4 Settings for Conductor Sequencing Panel	
	ProtoNode Setup	
	2.1 Select EMS Protocol	
2.	2.2 Enable Auto-Discovery	
	2.3 BACnet MS/TP Single Node and Multiple Node: Set MAC Address	
	2.4 BACnet MS/TP Single Node and Multiple Node: Set Serial Baud Rate	
2.	2.5 BACnet IP and BACnet MS/TP Multiple Node: Setting the Device Instance	11
2	2.6 BACnet MS/TP Single Node: Setting the Device Instance	12
2	2.7 Metasys N2 & Modbus TCP/IP Setup	
	2.8 Commission the ProtoNode for Lonworks	
2	2.9 BACnet IP & Modbus TCP: Set IP Address	12
3	Wiring	13
3 .1		
3.1		
3.3	· ·	
3.4	· · · · · · · · · · · · · · · · · · ·	
3.5	Q	
3.6		
3.7	·	
3.8		
3.9		
	0 Arctic/FreeFlex, AMP/BFIT 1000 – 4000, & Citadel 1250-1500 with Concert: Network Wiring	
	1 Conductor: Network Wiring	
	2 ProtoNode BACnet Wiring	
3.1	3 ProtoNode LonWorks Wiring	26
3.1	4 ProtoNobe IP Wiring	26
4	Commissioning	27
	Use the ProtoNode Web Configurator to setup the Gateway	
	1.1 Changing the Subnet of the Connected PC	
4. 1	1.1 Changing the Subhet of the Connected I C	27 28
4.2		
4.3	· · · · · · · · · · · · · · · · · · ·	
4.4		
4.5		
4.6		
4.7		
	Commissioning Lonworks ProtoNode	
	8.1 Instructions to Upload XIF File From the ProtoNode LER Using FS GUI Web Server	
_	•	
5 5.1	8	
$\mathcal{I}.1$	Downloading Chipkin Addonation's CA5 Explorer and Requesting an Activation Rey	31

5.2 CAS BACnet Setup	38
5.2.1 CAS BACnet MS/TP Setup	38
5.2.2 CAS BACnet IP Setup	38
6 Troubleshooting	39
6.1 LED Diagnostics	39
6.2 "No Communication" Troubleshooting Trees	40
6.2.1 General Troubleshooting	40
6.2.2 BACnet IP Troubleshooting	
6.2.3 BACnet MS/TP Troubleshooting	
6.2.4 Metasys N2 Troubleshooting	
6.2.5 Lonworks troubleshooting	
6.3 Take Diagnostic Capture with FieldServer Utilities	41
7 ProtoNode Information	46
7.1 Specifications and Ordering Information	46
7.2 ProtoNode Detailed View	
Appendix A. TSBC Points list	48
Appendix B. Apex with Panasonic (4109) Points List	51
Appendix C. Concert Control or Apex with Panasonic (4716) Points List	
•	
Appendix D. Conductor Sequencing Panel Points List	61
Annendiy F. "A" Rank DIP Switch Settings	66

1 INTRODUCTION

Universal Gateway (ProtoNode) is an external, high performance Energy Management System (EMS) multi-protocol gateway that uses the **FieldServer ProtoNode Technology**. The ProtoNode can support multiple boilers/water heaters. It has been pre-programmed to Auto-Discover any Apex with Panasonic (4109 software), Apex, Arctic, FreeFlex, Amp, Bfit, or Citadel with Concert (4716 software), Thermal Solutions Boiler Control (TSBC) equipped boilers, and Conductor Sequencing Panels connected to the ProtoNode and automatically configures them for BACnet®¹MS/TP, BACnet/IP, Metasys®² N2 by JCI, Modbus TCP <u>or</u> LonWorks®³. It is not necessary to download any configuration files to support the required applications.

1.1 BTL Mark - BACnet Testing Laboratory



The BTL Mark on the Gateway is a symbol that indicates to a consumer that a product has passed a series of rigorous tests conducted by an independent laboratory which verifies that the product correctly implements the BACnet features claimed in the listing. The mark is a symbol of a high-quality BACnet product. Go to http://www.bacnetinternational.net/btl/ for more information about the BACnet Testing Laboratory.

1.2 LonMark Certification



LonMark International is the recognized authority for certification, education, and promotion of interoperability standards for the benefit of manufacturers, integrators and end users. LonMark International has developed extensive product certification standards and tests to provide the integrator and user with confidence that products from multiple manufacturers utilizing LonMark devices work together.

¹ BACnet is a registered trademark of ASHRAE

Page 5 of 69 Part Number 106417-01

² Metasys is a registered trademark of Johnson Controls Inc.

³LonWorks is a registered trademark of Echelon Corporation

2 SETUP

Each ProtoNode has a unique part number located on the underside of the unit. This number should be recorded, as it may be required for technical support. The numbers are as follows:

Model	Part Number
ProtoNode RER - BACnet	FPC-N34-0816
ProtoNode LER - Lonworks	FPC-N35-0817

2.1 Boiler Setup

2.1.1 Settings for Apex Boilers with Panasonic Display

On Apex Boilers with **Panasonic GT02 display**, using the boiler mounted display, set a unique "Boiler Address" for each boiler that will be connected to the network.

- To change "Boiler Address" on Boiler Mounted Display; go to "Adjust" menu.
- In "Adjust" menu, enter "Sequencer Slave" menu to edit "Boiler Address"

NOTE: For Apex Boilers with a Panasonic GT02 display; All boilers must have Sequencer Master Disabled.

2.1.2 Settings for Apex, Arctic, FreeFlex, Amp, Bfit, & Citadel Boilers/Water Heaters with Concert Display

On Apex, Arctic, FreeFlex, Amp, Bfit, or Citadel boilers/water heaters with Concert Displays, assign a unique Comm HMI Station ID for each boiler connected directly to the ProtoNode.

- To change "Comm HMI Station ID" select "Menu" on Concert Display
- On the "Main Menu" select "EMS Interface" and select "Modbus Setup"
- Select "EMS Modbus Parameter" and follow on screen instructions to edit "Comm HMI Station ID"

2.1.3 Setting the Boiler Address of EVS and EVCA boilers with TSBC

On EVS and EVCA Boilers with TSBC, from the Communication Menu set the following:

Parameter	Selection		
Protocol	Modbus		
Modbus Address	Between 1 and 20		
Baud Rate	38.4 kbps		
Parity	None		

- To edit Communication Parameters hold the "Menu" button down until the screen changes to the Main Menu of the TSBC
- Scroll through the main menu and select "COMMUNICATIONS" by pressing "Enter".
- Edit Communication Parameters as needed.

Refer to the Boiler's instruction manual for password and menu navigation instructions.

Page 6 of 69 Part Number 106417-01

2.1.4 Settings for Conductor Sequencing Panel

On Conductor, from the Modbus/BACnet Setup menu set the following:

Parameter	Selection
EMS Communication	Modbus
Conductor RS485-1 Address	Between 1 and 20
EMS Baud Rate	38400
EMS Parity	None

- To edit Communication Parameters select "Menu" from the home screen.
- On the "Main Menu" select "EMS Interface" and select "Modbus/BACnet Setup".
- Enter the password by pressing the lock icon.
- Press the line for each parameter and enter the new selection.
- Once all parameters have been set to the correct selection, cycle power to the panel to enact the changes.

Page 7 of 69 Part Number 106417-01

2.2 ProtoNode Setup

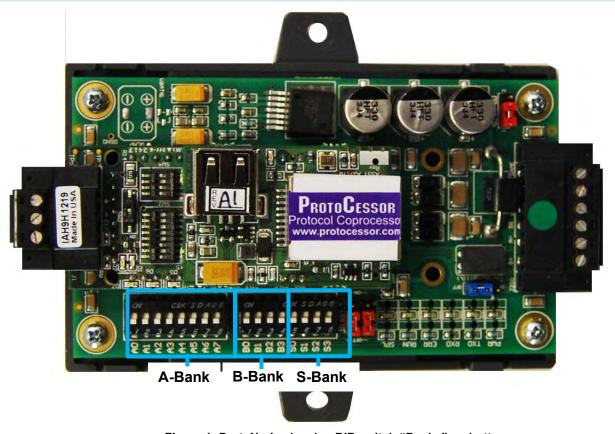



Figure 1: ProtoNode showing DIP switch "Banks" on bottom

2.2.1 Select EMS Protocol

Set Dipswitches to match Protocol of EMS. Remove ProtoNode cover and check protocol dip switch settings:

- The "S0 S2" bank of DIP switches on the ProtoNode RER BACnet are used to select the various field protocols (BACnet MS/TP). See the chart below for the DIP switch settings.
- The "S0 S2" bank of DIP switches on the ProtoNode LER LonWorks are disabled.
- "BACnet MS/TP (Multiple Node) is designed for MS/TP systems that are compatible with virtual nodes. The "Single Node" option is for MS/TP systems without this compatibility.

ProtoNode BACnet S Bank DIP Switc		itches	
Profile	S0	S1	S2
BACnet IP	Off	Off	Off
BACnet MS/TP (Multiple Node)	On	Off	Off
Metasys N2	Off	On	Off
Modbus TCP/IP	On	On	Off
BACnet MS/TP (Single Node)	Off	Off	On

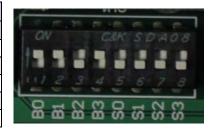


Page 8 of 69 Part Number 106417-01

2.2.2 Enable Auto-Discovery

The following table describes "S3" DIP Switch setting for the Enabling Auto-Discovering of known devices attached to the ProtoNode RER or LER.

- Power down ProtoNode.
- Ensure all boilers are powered and connected to the ProtoNode.
- Set "S3" DIP switch to "On" position and power the ProtoNode to Auto-Discover Boilers. It will take 3 minutes to discover all Modbus RTU devices attached to the ProtoNode.
- Once the ProtoNode has discovered all of the Modbus RTU devices, set the S3 DIP switch to the OFF position to save the recently built configuration.

ProtoNode BACnet & Lonworks		
S3 DIP Switch Auto-Discovery Mode S3		
Auto-Discovery ON – Build New Configuration	On	
Auto-Discover OFF – Load Current Configuration	Off	

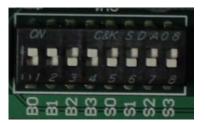


NOTE: Initial Auto Discovery Cycle

All boilers **MUST** be **POWERED** and **CONNECTED** to the ProtoNode before cycling power to the ProtoNode. The ProtoNode will auto discover only connected boilers. If a boiler is connected after the ProtoNode has completed auto discovery it will not "find" the new boiler.

Page 9 of 69 Part Number 106417-01

2.2.3 BACnet MS/TP Single Node and Multiple Node: Set MAC Address

- Only 1 MAC address is set for ProtoNode regardless of how many devices are connected to ProtoNode.
- Set ProtoNode MAC Address. (Must be between 1 and 127)

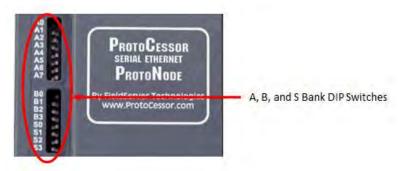

- Set DIP Switch (A0 A7) for a MAC address between 1 and 127 which are Master addresses. (Appendix G shows settings)
- Note: Never set a BACnet MS/TP MAC Address from 128 to 255. Addresses between 128 and 255 are Slave address. BACnet Master Addresses pass tokens on the BACnet MS/TP network and can be Auto-Discovered by Energy Management System (EMS) front end systems that support Auto-Discovery. BACnet Slave Addresses cannot pass Tokens and will never be Auto-Discovered by EMS front end systems that support Auto-Discovery.

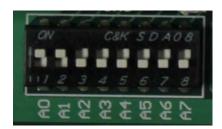


Figure 2: A0 - A7 DIP Switches (MAC address "3" is show)

• Please refer to Appendix D for the full range of addresses to set Node-ID/Device Instance.

NOTE: When setting A Bank DIP Switches, please ensure that power to the board is OFF.

Page 10 of 69 Part Number 106417-01

2.2.4 BACnet MS/TP Single Node and Multiple Node: Set Serial Baud Rate

DIP Switches B0 – B3 are used to set the serial baud rate to match the baud rate provided by the Energy Management System.

Baud	В0	B1	B2	В3
9600	On	On	On	Off
19200	Off	Off	Off	On
38400	On	On	Off	On
57600	Off	Off	On	On
76800	On	Off	On	On

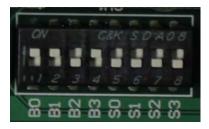


Figure 3: B0 – B3 DIP Switches (38400 Baud shown)

2.2.5 BACnet IP and BACnet MS/TP Multiple Node: Setting the Device Instance

The BACnet device instances will be set by the "Node Offset" + "Boiler Address" (Modbus RTU device).

The BACnet Device Instance can range from 1 to 4,194,303.

To assign specific Device Instance values, change the Node Offset value.

- The Node Offset value is currently set to 50000 in the configuration file
- Modbus address 1 would be assigned a device instance of 50001.
- Modbus address 2 would be assigned a device instance of 50002.
- Modbus address 3 would be assigned a device instance of 50003.

The device instance is calculated by: Device Instance = Node Offset + Modbus Address

• The Node_Offset can be changed from 50000 to any number between 1 and 4,194,302 via the Web Configurator. (To use web configurator see section 4.3)

Page 11 of 69 Part Number 106417-01

2.2.6 BACnet MS/TP Single Node: Setting the Device Instance

The BACnet single node instance will be set by the "Node Offset" + "MAC Address". All registers from the devices connected to the ProtoNode will be listed under this single node instance. The registers are organized each devices "Modbus Address."

To assign a specific single node instance value, change the Node Offset or MAC address value.

- The Node Offset value is currently set to 50000 in the configuration file
- MAC address 1 would be assigned a node instance of 50001.
- MAC address 2 would be assigned a node instance of 50002.

The Node_Offset can be changed from 50000 to any number between 1 and 4,194,302 via the Web Configurator. (To use web configurator see section 4.3)

Under this single node, the registers will be listed by their Modbus Address.

- Modbus address 1 will be listed sequentially as 1001, 1002, 1003...etc.
- Modbus address 2 will be listed sequentially as 2001, 2002, 2003...etc.

2.2.7 Metasys N2 & Modbus TCP/IP Setup

Metasys N2 & Modbus TCP/IP Device Address Setting

• The device addresses will be the same as the discovered Boilers' Boiler Address (Modbus RTU devices) (1 through 8).

2.2.8 Commission the ProtoNode for Lonworks

This needs to be done by the LonWorks administrator use a LonWorks Commissioning tool. (See Section 4.7)


2.2.9 BACnet IP & Modbus TCP: Set IP Address

Run the ProtoNode web GUI utility program to change the IP address to match network. No changes to the configuration file are necessary. (See Section 4 for details on the Web Configurator)

Page 12 of 69 Part Number 106417-01

3 WIRING

3.1 ProtoNode Overview

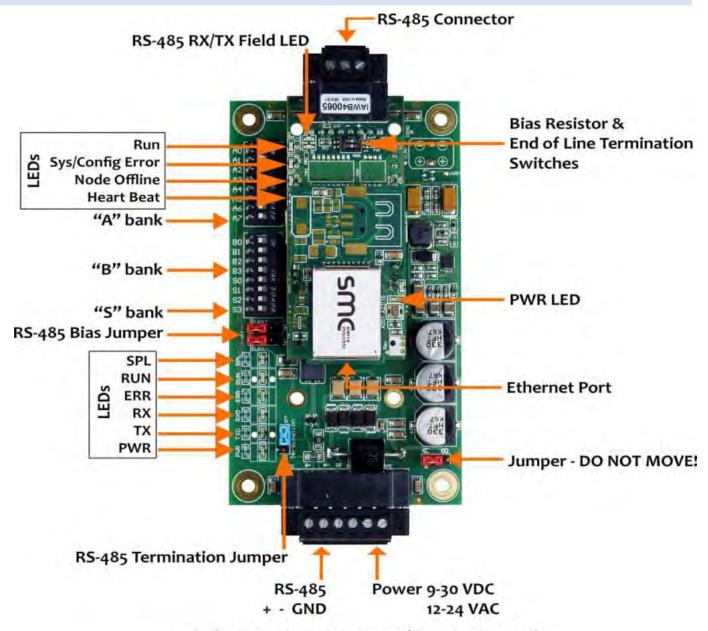

6 pin Connector - RS-485 and Power Connection

Figure 4: ProtoNode BACnet

Page 13 of 69 Part Number 106417-01

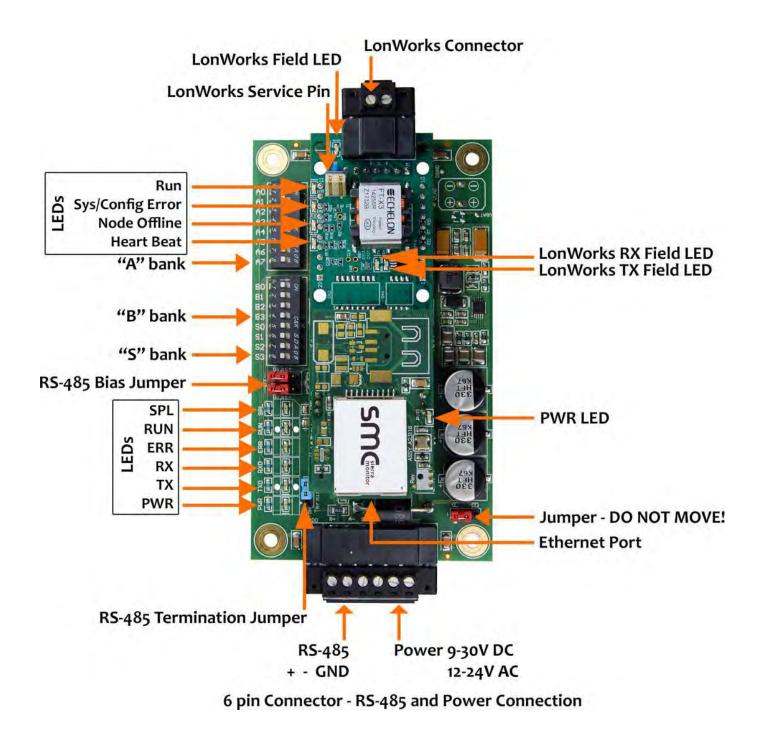


Figure 5: ProtoNode Lonworks

Page 14 of 69 Part Number 106417-01

3.2 Wiring to the ProtoNode 6 Pin Connector

- The 6 pin connector is the same for ProtoNode BACnet and Lonwork
- Pins 1 through 3 are for Modbus RS-485 devices. The RS-485 GND (Pin 3) is not typically connected.
- Pins 4 through 6 are for power.


Device Pins	ProtoNode Pin #	Pin assignment	
Pin RS-485 +	Pin 1	RS-485 +	→
Pin RS-485 -	Pin 2	RS-485 -	
Pin GND	Pin 3	RS-485 GND	→
Power In (+)	Pin 4	24 VAC +	
Power In (-)	Pin 5	24 VAC -	→
Frame Ground	Pin 6	FRAME GND	→
oly power to ProtoNod nplies with the specific		Ensure that the power suppection 7.	ly used

ProtoNode accepts either 9-30VDC or 12-24 VAC on pins 4 and 5.

Power Requirement for ProtoNode at 9V through 24 VAC				
Current Draw Type				
ProtoNode Family	24VAC			
FPC – N34 – 0816 BACnet ProtoNode	140mA			
FPC – N35 – 0817 Lonworks ProtoNode	130mA			

Page 15 of 69 Part Number 106417-01

3.3 TSBC: Boiler to ProtoNode Wiring

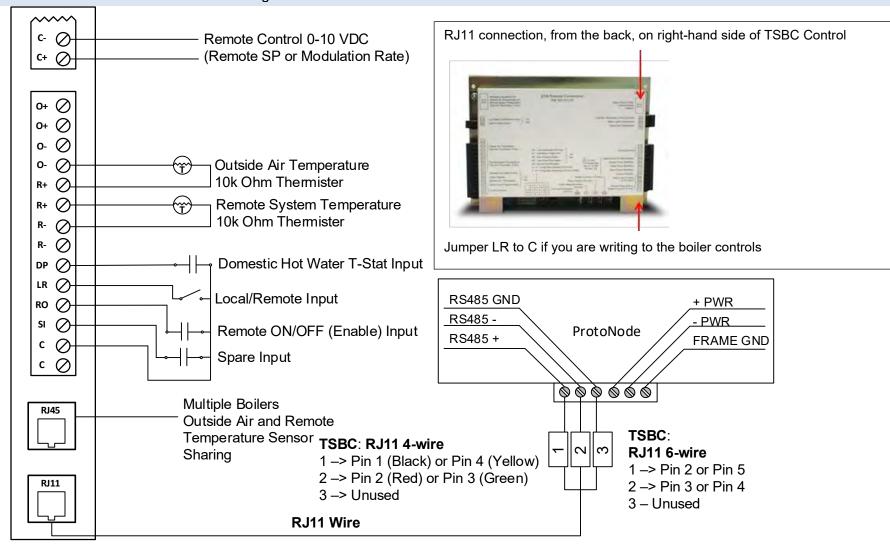


Wiring TSBC Modbus Communication to an Energy Management System (EMS)

The Modbus communication connects to the same RJ11 port that is used by the boiler to boiler communication. Connect one end of the RJ11 cable to the TSBC and cut off the other end of the cable to access the individual wires of the RJ11 cable. Wire the RJ11 cable as shown above.

Page 16 of 69 Part Number 106417-01


3.4 TSBC: Network Wiring

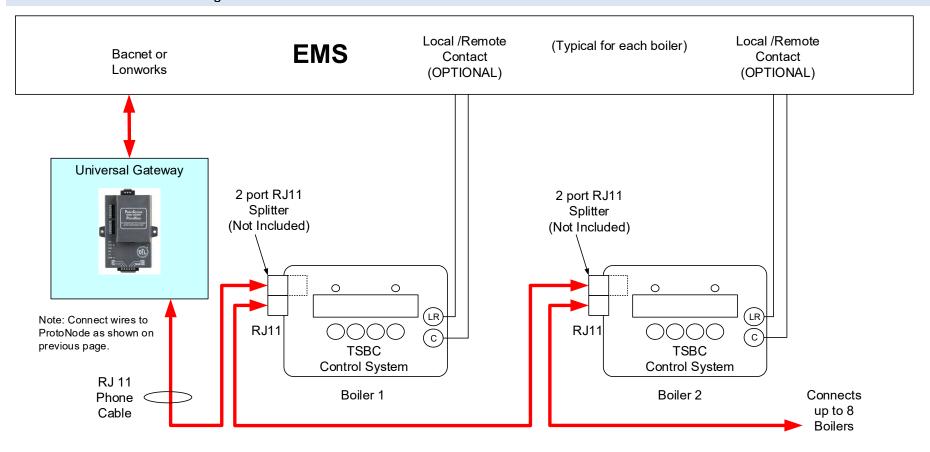

IMPORTANT NOTES for TSBC Connections:

- 1. When controlling Setpoint with the EMS, the user does not have access to Enable/Disable, and Lead Lag. User must do a contact closer to RO & C on each boiler. When controlling Modulation, user does have access to Enable/Disable, and Lead Lag.
- 2. When the EMS is connected, boiler sequencing (Multiple Boiler Lead/Lag) must be done external to the Boiler Control by other means.
- 3. Boiler Enable/Disable and Firing Rate are sent over the ProtoNode, or may be directly wired.

Page 17 of 69 Part Number 106417-01

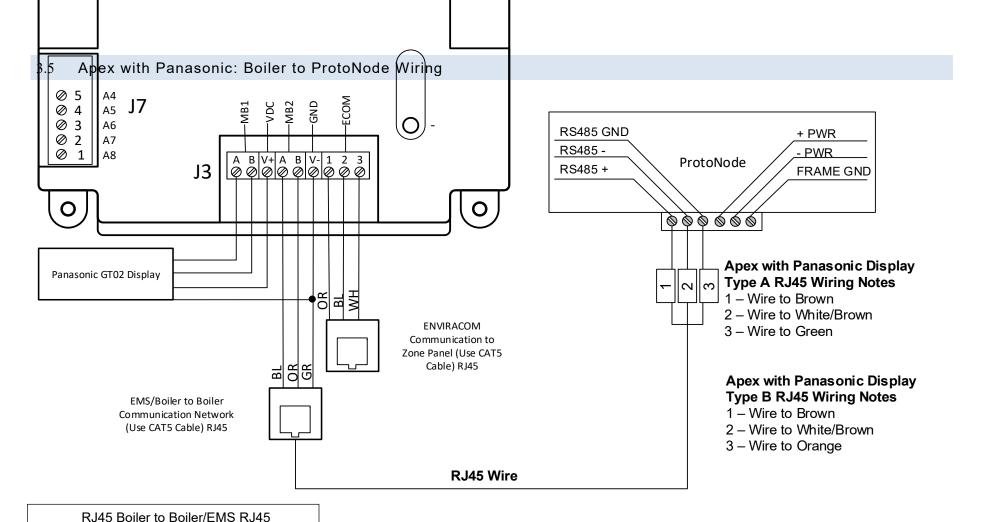




Wiring Apex with Panasonic Modbus Communication to an Energy Management System (EMS)

The Modbus communication connects to the same RJ45 port that is used by the boiler to boiler communication. Connect one end of the RJ45 cable to the boiler and cut off the other end of the cable to access the individual wires of the RJ45 cable. Wire the RJ45 cable as shown above.

Page 18 of 69 Part Number 106417-01

3.6 Apex with Panasonic: Network Wiring

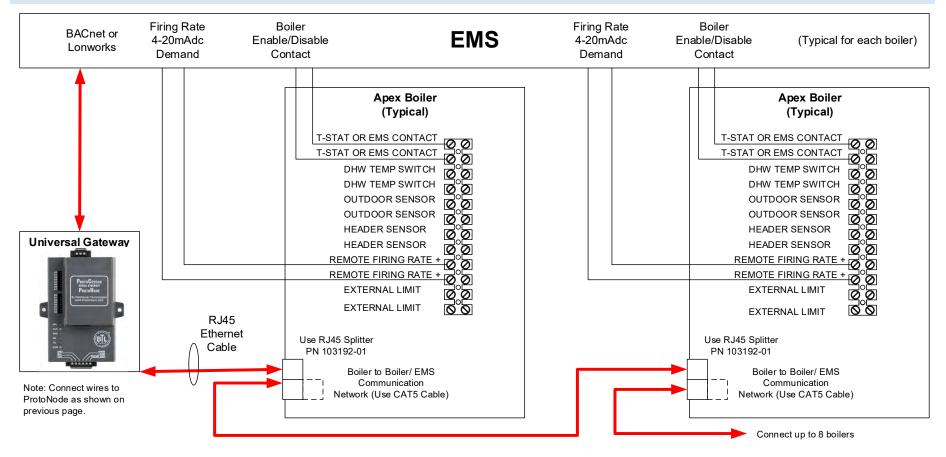


IMPORTANT NOTES for Apex with Panasonic display Connections:

- 1. When the Energy Management system is connected, boiler sequencing (multiple boiler lead/lag) must be done external to the boiler controls, by other means.
- 2. Both Enable/Disable and Remote Firing Rate must be wired to the boilers to provide boiler sequencing (multiple boiler lead/lag).
- 3. If only the burner on/off Modbus signal is used instead of the Enable / Disable contact input the boiler will be turned off but the system pump may remain running.
- 4. The Sequencer must be disabled while communicating with EMS (i.e. no Master Boilers).

Page 19 of 69 Part Number 106417-01

3.7 Apex & AMP/BFIT/CTD 400-1000L with Concert Display: Boiler to ProtoNode Wiring

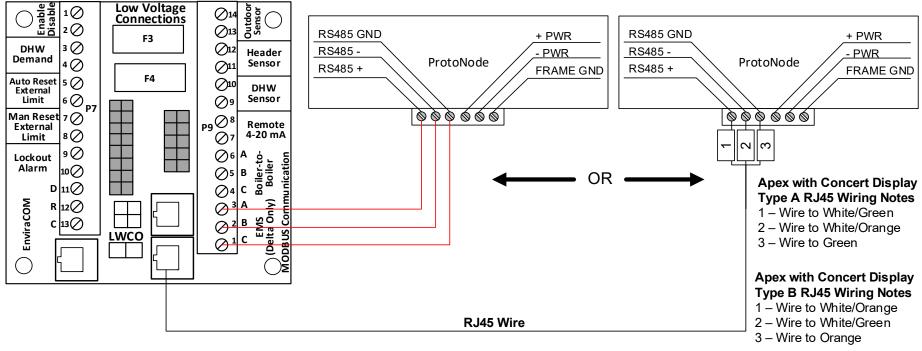


Wiring Apex and AMP/BFIT/CTD 400-1000L with Concert Modbus Communication to an Energy Management System (EMS)

There are two options for wiring the ProtoNode to an Apex or AMP/BFIT/CTD 400-1000L with Concert Display.

- 1. Connect one end of an RJ45 cable to the boiler PCB and cut off the other end of the cable to access the individual wires of the RJ45 cable. Wire the RJ45 cable as shown above.
- 2. Wire the ProtoNode to the PCB using the EMS (Delta Only) terminals.


Page 20 of 69 Part Number 106417-01

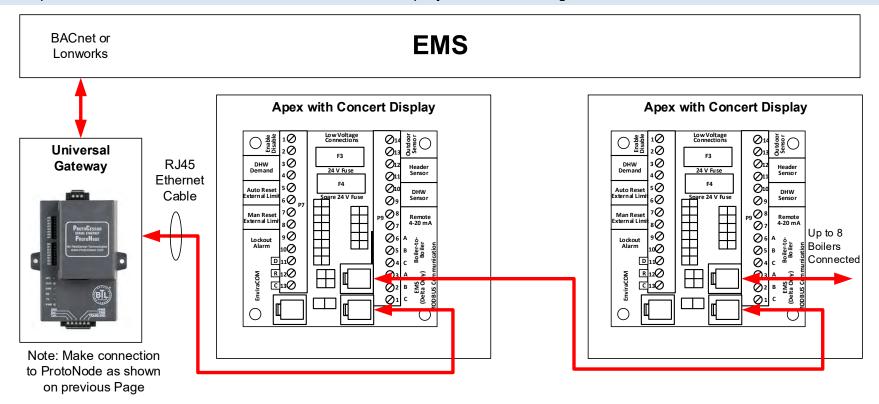

IMPORTANT NOTES for Apex and AMP/BFIT/CTD 400-1000L with Concert Display Connections:

- 1. All Apex and AMP/BFIT/CTD 400-1000L with Concert Display are equipped with a PCB to easily establish communication with an EMS.
- 2. These models are able to do both Lead Lag (Sequencer) and EMS communication at the same time.

Page 21 of 69 Part Number 106417-01

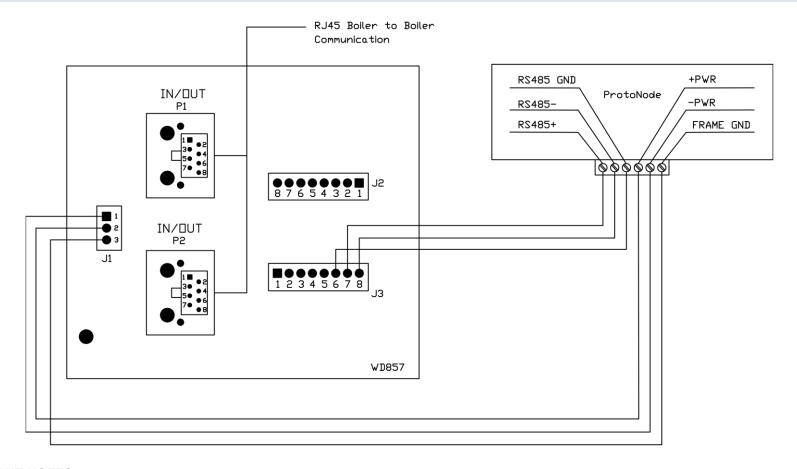


IMPORTANT NOTES:

- 1. Arctic/FreeFlex with Concert Display is able to do both Lead Lag (Sequencer) and EMS communication at the same time.
- 2. For Arctic/FreeFlex Boilers not equipped with PCBs refer to an earlier revision of this manual.
- 3. Older $Arctic/FreeFlex\ 1500-3000$ boilers equipped with this PCB may use this wiring.

Page 22 of 69 Part Number 106417-01

3.10 Arctic/FreeFlex 1500 - 6000, AMP/BFIT 1000 - 4000, & Citadel 1250-1500 with Concert: Network Wiring

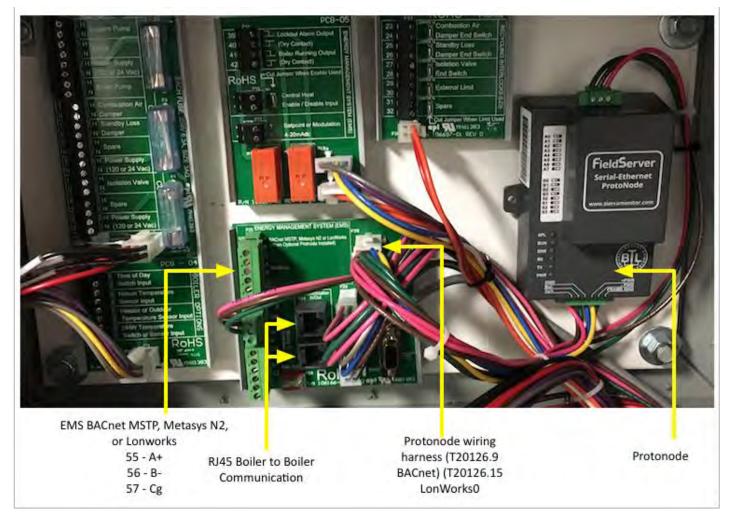


IMPORTANT NOTES:

- 1. Arctic/FreeFlex, AMP/BFIT 1000-4000, & Citadel 1250-1500 with Concert Displays are able to do both Lead Lag (Sequencer) and EMS communication at the same time.
- 2. For Arctic/FreeFlex Boilers not equipped with PCBs refer to an earlier revision of this manual.

Page 23 of 69 Part Number 106417-01

3.11 Conductor: Network Wiring

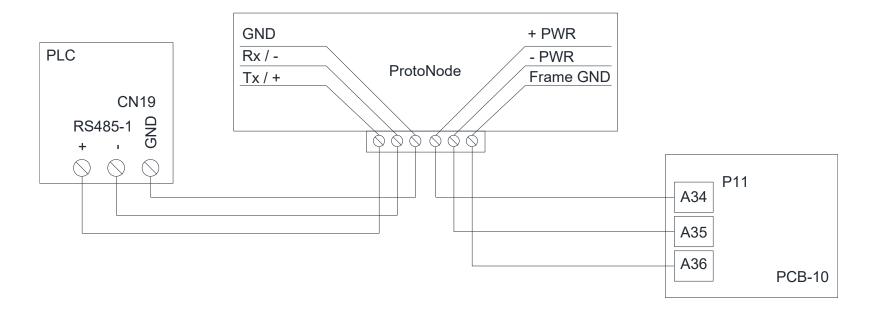

IMPORTANT NOTE:

Conductor-to-Protonode wiring is a separate Modbus network from Conductor-to-Boiler wiring. The protonode should only be wired to Conductor and EMS.

Page 24 of 69 Part Number 106417-01

3.12 ProtoNode BACnet Wiring

Wiring the BACnet ProtoNode to the Network (RS-485 Field Protocol)

- Connection from ProtoNode RER to BACnet MS/TP, and Metasys N2 network.
- See Section 4.2 for information on connecting the BACnet ProtoNode to a BACnet IP network.
- The Field Protocol can be connected to the 3-pin connector on ProtoNode RER as shown.

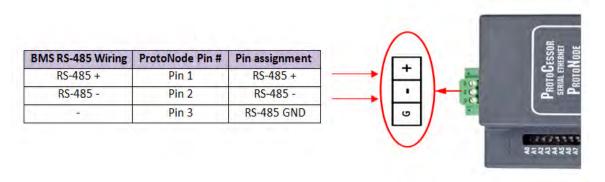


Figure 6: Connection from ProtoNode to RS-485 Field Protocol –BACnet MS/TP or Metasys N2.

• If the ProtoNode is the last device on the RS-485 trunk, then enable the End-of-line termination needs to be enabled. The default is off (switch position = right side).



Figure 7: End-of-line termination on from ProtoNode to RS-485 Field Protocol -BACnet MS/TP or Metasys N2.

Page 25 of 69 Part Number 106417-01

3.13 ProtoNode LonWorks Wiring

• Connect the ProtoNode to the field network with the LonWorks terminal using a twisted pair non-shielded cable. LonWorks has no polarity.



3.14 ProtoNobe IP Wiring

Connect the ProtoNobe to the field IP Network at the Ethernet Port using a standard CAT5
 Ethernet Cable.



Figure 9: Ethernet port location on the ProtoNode

Page 26 of 69 Part Number 106417-01

4 COMMISSIONING

4.1 Use the ProtoNode Web Configurator to setup the Gateway


First, connect a standard CAT5 Ethernet cable (straight through or cross-over) between the local PC and ProtoNode.

There are two methods to access the ProtoNode via Ethernet connection, either by changing the subnet of the connected PC (Section 4.1.1) or using the FieldServer Toolbox to change the IP Address of the ProtoNode (Section 4.1.2).


4.1.1 Changing the Subnet of the Connected PC

The default IP Address of the ProtoNode is **192.168.1.24**, subnet mask is **255.255.255.0**. If the PC and the ProtoNode are on different IP Networks, assign a static IP Address to the PC on the 192.168.1.xxx network.

For Windows 10:

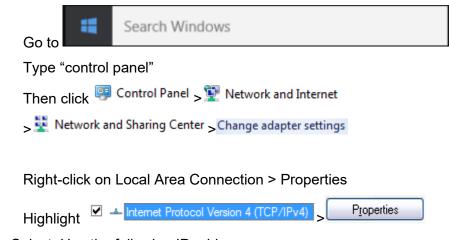

· Select: Use the following IP address

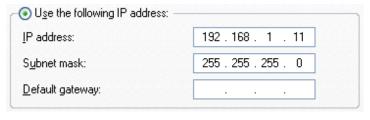

- Click twice
 - For Windows 7:



Right-click on Local Area Connection > Properties

Page 27 of 69 Part Number 106417-01




Select: Use the following IP address


─⊙ Use the following IP address: —	
<u>I</u> P address:	192 . 168 . 1 . 11
S <u>u</u> bnet mask:	255 . 255 . 255 . 0
<u>D</u> efault gateway:	

Click twice

- 4.1.2 Changing the IP Address of the ProtoNode with FieldServer Toolbox
 - Ensure that FieldServer Toolbox is loaded onto the local PC. Otherwise, download the
 - FieldServer-Toolbox.zip via the Sierra Monitor website's <u>Software Downloads</u>.
 - Extract the executable file and complete the installation.
 - Double click on the FS Toolbox Utility and click Discover Now on the splash page.
 - Find the desired gateway and click the Configure Device button (gear icon) to the right of the gateway information.

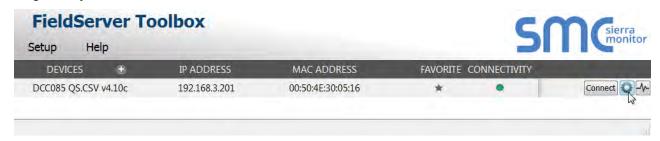


Select Network Settings in the Configure Device window.

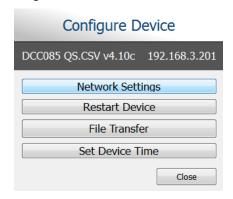

- Modify the IP Address (N1 IP Address field) of the gateway Ethernet port.
 - The following fields may also be changed as needed: Netmask (N1 Netmask field), DHCP Client State (N1 DHCP Client State field), IP Gateway (Default Gateway field) and DNS 1 & 2 (Domain Name Server fields)

Page 28 of 69 Part Number 106417-01

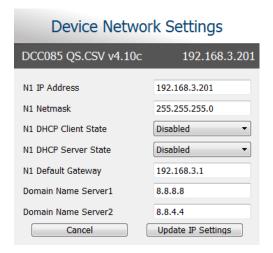

NOTE: If the gateway is connected to a router, the Default Gateway field of the gateway should be set to the IP Address of the connected router.

NOTE: Do not change the DHCP Server State (N1 DHCP Server State field).

NOTE: If DNS settings are unknown, set DNS1 to "8.8.8.8" and DNS2 to "8.8.4.4".

 Click Update IP Settings, then click on the Change and Restart to restart the Gateway and activate the new IP Address.

4.2 Connecting to the ProtoNode Web Configurator

After setting a local PC on the same subnet as the ProtoNode (Section 4.1), open a PC web browser, and enter the IP address of the ProtoNode (default: 192.168.1.24)

NOTE: If the IP Address of the ProtoNode was changed, the assigned IP Address can be discovered using the FS Toolbox utility.

- User Name: admin
- Password is printed on label of ProtoNode should be under the cover by the Ethernet port. You will also be asked about security. Choose HTTP non secure unless you want to add security. Call factory for info setting up security.

Page 29 of 69 Part Number 106417-01

4.3 Configure Auto-Discovery Devices Connected to the Gateway with Discovery Mode

If Auto-Discovery was performed through the S3 DIP switch on power up, skip this step.

Click the Discovery Mode button at the bottom of the screen.

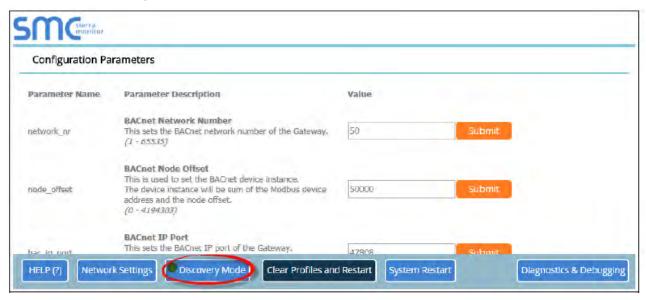


Figure 10: Web Configurator Showing Discovery Mode Button

- Click the OK button in the window that appears to discover devices and restart the device.
- Wait for the ProtoNode to restart and the Discovery in Progress window to disappear.

NOTE: It may take about 3 minutes for all the devices to be discovered and the configuration file to be built.

 If the discovery is successful the desired device profile should appear under the Active profiles title near the bottom of the screen.



Figure 11: Web Configurator Showing Discovered Profiles

NOTE: If using multiple node configuration, set the BACnet virtual server nodes field to "Yes" before starting Auto-Discovery; otherwise leave the field on the default "No" setting.

Page 30 of 69 Part Number 106417-01

4.4 Selecting Profiles for Devices Connected to ProtoNode

NOTE: If Modbus TCP/IP was selected in Section 3.4 for the Field/BMS protocol, skip this section. Device profiles are NOT used for Modbus TCP/IP.

- In the Web Configurator, the Active Profiles are shown below the Configuration Parameters.
- The Active profiles section lists the currently active device profiles, including previous Web Configurator additions and any devices identified by Auto-Discovery configuration methods. This list is empty for new installations, or after clearing all configurations. (**Figure 12**)

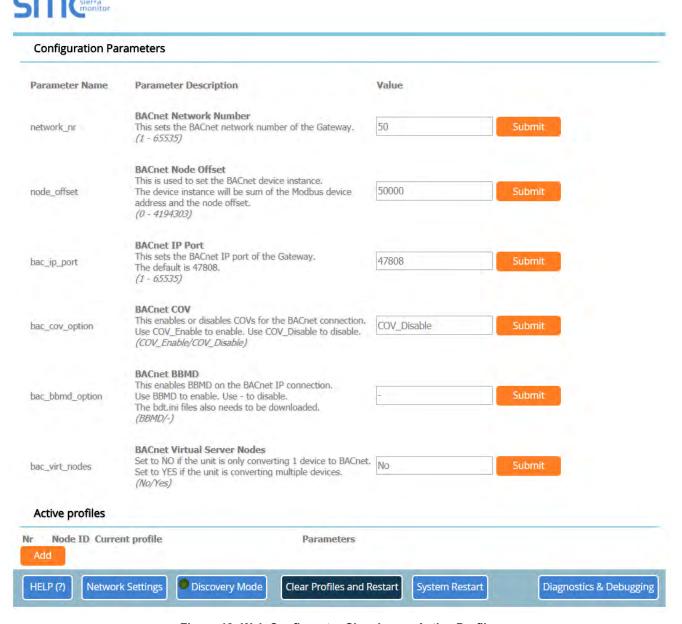


Figure 12: Web Configurator Showing no Active Profiles

- To add an active profile to support a device, click the Add button under the Active Profiles heading. This will present a drop-down box underneath the Current profile column that lists all the available profiles. (Figure 13)
- For every device that is added, assign a unique Node-ID. This specification must match the device's network settings.

Page 31 of 69 Part Number 106417-01

NOTE: If multiple devices are connected to the ProtoNode, set the BACnet Virtual Server Nodes field to "Yes"; otherwise leave the field on the default "No" setting.

• Once the Profile for the device has been selected from the drop-down list, enter the value of the device's Node-ID (Modbus address).



Figure 13: Web Configurator Showing Available Profiles for Selection

- Then press the "Submit" button to add the Profile to the list of devices to be configured.
- Repeat this process until all the devices have been added.
- Completed additions are listed under "Active Profiles" as shown in Figure 14.

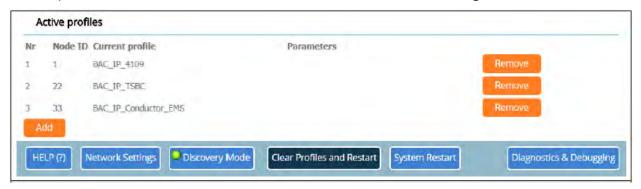


Figure 14: Web Configurator Showing Active Profile Additions

4.5 Set ProtoNode IP Address

When it is necessary to set the BACnet/IP or Modbus TCP ID the following procedure could be followed. Note this is the responsibility of the Energy Management System Administrator.

- Open a PC web browser, enter the default IP address of the ProtoNode 192.168.1.24 and connect to the ProtoNode.
- From the Web GUI's home page, click the "Diagnostic & Debugging" button.



• After the screen changes, from the left hand side of the screen click on "Setup" and then select "Network Settings" to access the IP Address Settings menu. See image below.

Page 32 of 69 Part Number 106417-01





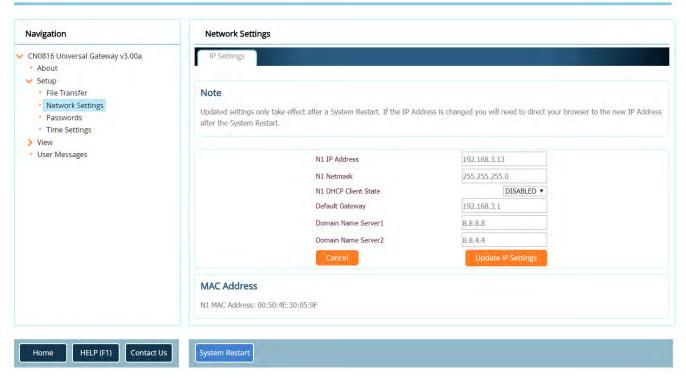


Figure 15: Changing IP Address via FS-GUI

- Modify the IP address (N1 IP address field) of the ProtoNode Ethernet port to match EMS network.
- If necessary, change the Netmask (N1 Netmask field).
- If necessary, change the IP Gateway (Default Gateway field)

NOTE: If the ProtoNode is connected to a managed switch/router, the IP Gateway of the ProtoNode should be set to the IP address of that managed switch/router.

- Click the "System Restart" button at the bottom of the page to apply changes and restart the ProtoNode.
- Record the IP address assigned to the ProtoNode for future reference.
- Unplug Ethernet cable from PC and connect it to the network hub or router.

NOTE: The FieldPoP™ button (see Figure 15) allows users to connect to the SMC Cloud, Sierra Monitor's device cloud solution for IIoT. The SMC Cloud enables secure remote connection to field devices through a FieldServer and its local applications for configuration, management, maintenance. For more information about the SMC Cloud, refer to the SMC Cloud Start-up Guide.

Page 33 of 69 Part Number 106417-01

4.6 BACnet: Setting Node Offset to Assign Specific Device Instances

- After setting a local PC to the same subnet as the ProtoNode (Section 5.1), open a web browser on the PC and enter the IP Address of the ProtoNode.
 - If the IP Address of the ProtoNode has been changed by previous configuration, the assigned IP Address must be gathered from the network administrator
 - The Web Configurator is displayed as the landing page
- Node_Offset field shows the current value (default = 50,000).
 - The values allowed for a BACnet Device Instance can range from 1 to 4,194,303
- To assign a specific Device Instance (or range); change the Node_Offset value as needed using the
 calculation below:

Device Instance (desired) = Node_Offset + Node_ID

For example, if the desired Device Instance for the device 1 is 50,001 and the following is true:

- Device 1 has a Node-ID of 1
- Device 2 has a Node-ID of 22
- Device 3 has a Node-ID of 33

Then plug the device 1's information into the formula to find the desired Node Offset:

```
50,001 = Node Offset + 1
```

> 50,000 = Node Offset

Once the Node_Offset value is input, it will be applied to all devices as shown below:

- Device 1 Instance = 50,000 + Node ID = 50,000 + 1 = 50,001
- Device 2 Instance = 50,000 + Node ID = 50,000 + 22 = 50,022
- Device 3 Instance = 50,000 + Node ID = 50,000 + 33 = 50,033
- Click "Submit" once the desired value is entered.




Figure 16: Web Configurator Node Offset Field

4.7 How to Start the Installation Over: Clearing Profiles

- After setting a local PC to the same subnet as the ProtoNode (Section 5.1), open a web browser on the PC and enter the IP Address of the ProtoNode; the default address is 192.168.1.24.
- If the IP Address of the ProtoNode has been changed by previous configuration, the assigned IP Address must be gathered from the network administrator.
- The Web Configurator is displayed as the landing page.
- At the bottom-left of the page, click the "Clear Profiles and Restart" button.
- Once restart is complete, all past profiles discovered and/or added via Web configurator are deleted.
 The unit can now be reinstalled.

Page 34 of 69 Part Number 106417-01

4.8 Commissioning Lonworks ProtoNode


Commissioning may only be performed by the LonWorks administrator. To commission the ProtoNode LER LonWorks port, insert a small screwdriver in the commissioning hole on the face of the LER's enclosure to access the Service Pin. See the illustration on the ProtoNode LER as to which way to toggle the screw driver during commissioning.




If an XIF file is required, see steps Section 4.1.1 to generate XIF

4.8.1 Instructions to Upload XIF File From the ProtoNode LER Using FS GUI Web Server

- Connect a standard cat5 Ethernet cable between the PC and ProtoNode
- The Default IP Address of the ProtoNode is 192.168.1.24. Subnet Mask is 255.255.255.0. If the PC and the ProtoNode are on different IP Networks, assign a static IP Address to the PC on the 192.168.1.xxx network
- For Windows 10:

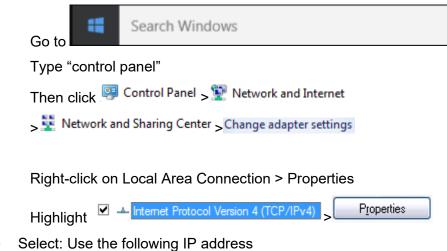


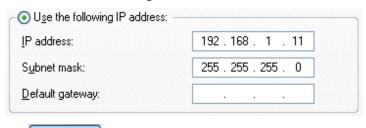

- Click twice
- For Windows 7:



Page 35 of 69 Part Number 106417-01



Select: Use the following IP address



- Click twice
- Open a web browser and go to the following address:
 IP address of ProtoCessor/fserver.xif
- Example: 192.168.1.24/fserver.xif
- Download and save the file onto the PC.

Figure 17: Sample of fserver.xif file being generated

Page 36 of 69 Part Number 106417-01

5 FIELD VALIDATING


Chipkin Automation offers a free complementary 2 week fully functional copy of CAS BACnet Explorer that can be used to validate BACnet MS/TP and/or BACnet/IP communications of the ProtoNode in the field without having to have the EMS Integrator on site. A Serial or USB to RS-485 converter is needed to test BACnet MS/TP.

5.1 Downloading Chipkin Automation's CAS Explorer and Requesting an Activation Key

To request a 2 week complementary BACnet CAS key, go to http://app.chipkin.com/activation/twoweek/ and fill in all the information. Enter Vendor Code "Burnham012". Once completed, the key will be sent to the email address that was submitted. From this email from Chipkin Automation, the long key will need to be copied and pasted into the CAS key activation page.

Request a two week account activation You have two choices 1. Activate your account for two weeks To request a two week account activation, simply complete this form and request a new product key from within the CAS BACnet Explorer. Note: Your contact info will be used by chipkin to contact you. If your contact info is invalid or you are unreachable your account will be revoked. Company: Address: Phone number: Email Address: Vendor code: Product: CAS BACnet Explorer Request a two week account 1. Purchase You can buy the CAS BACnet Explorer to get a full account from If you have one, you can use your discount coupon on the web page, Visit this page Feel free to contact us with any questions you may have

- Go to Chipkin Automation's web site, download, and install the CAS BACnet Explorer to your PC http://www.chipkin.com/technical-resources/cas-bacnet-explorer/.
- In the CAS Activation form, enter the email address and paste the CAS key that was sent from Chipkin Automation. Once completed, select Activation.

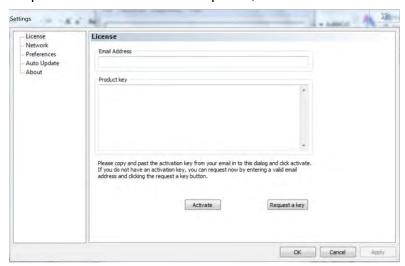

Page 37 of 69 Part Number 106417-01

5.2 CAS BACnet Setup

These are the instructions to set CAS Explorer up for the first time on BACnet MS/ST and BACnet/IP.

5.2.1 CAS BACnet MS/TP Setup

- Using the Serial or USB to RS-485 converter, connect it to your PC and the 3 Pin BACnet MS/TP connector on the ProtoNode RER.
- In CAS Explorer, do the following:
 - Click on settings
 - Check the BACnet MSTP box and uncheck the BACnet IP and BACnet Ethernet boxes.
 - Set the BACnet MSTP MAC address to 0.
 - Set the BACnet MSTP Baud Rate to 38400.
 - o Click Ok.
 - o On the bottom right-hand corner, make sure that the BACnet MSTP box is green.
 - Click on discover.
 - Check all 4 boxes.
 - o Click Send.

5.2.2 CAS BACnet IP Setup

- See Section 5.1 to set the IP address and subnet of the PC that will be running the CAS Explorer.
- Connect a straight through or cross Ethernet cable from the PC to the ProtoNode.
- In CAS Explorer, do the following:
 - o Click on "Settings"
 - Check the BACnet IP box and uncheck the BACnet MSTP and BACnet Ethernet boxes.
 - o In the "Select a Network Device" box, select the network card of the PC by clicking on it.
 - o Click "Ok".
 - o On the bottom right-hand corner, make sure that the BACnet IP box is green.
 - o Click on "Discover".
 - Click a "Check" into all 4 boxes.
 - o Click "Send".


Data is now available to view and edit. Select the "+" signs to open the branches and view data from all connected boilers.

Page 38 of 69 Part Number 106417-01

6 TROUBLESHOOTING

6.1 LED Diagnostics

Please see the diagram below for ProtoNode RER BACnet and LER LonWorks LED Locations.

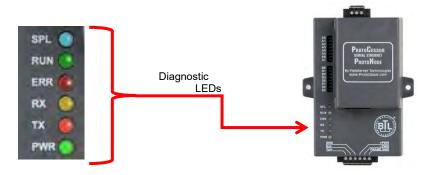

Tag	Description
SPL	The SPL LED will light if the ProtoNode is off line.
RUN	The RUN LED will start flashing 20 seconds after power indicating normal operation.
ERR	The SYS ERR LED will go on solid 15 seconds after power up. It will turn off after 5 seconds. A steady red light will indicate there is a system error on ProtoNode. If this occurs, immediately report the related "system error" shown in the error screen of the GUI interface to FieldServer Technologies for evaluation.
RX	The RX LED will flash when a message is received on the host port.
TX	The TX LED will flash when a message is sent on the host port.
PWR	This is the power light and should show steady green at all times when ProtoNode is powered.

Page 39 of 69 Part Number 106417-01

6.2 "No Communication" Troubleshooting Trees

6.2.1 General Troubleshooting

Whenever a setting is changed (i.e. dipswitches or communication) power should be cycled to the ProtoNode to allow for settings to take effect.

- 1. Is power connected to boilers and ProtoNode?
 - Green PWR LED solid on ProtoNode
 - Green LED solid on control
- 2. Is the ERR LED red? (see Section 6.1)
- 3. Is the wiring from the ProtoNode to the Boilers correct? (See sections 3.2 3.9)
- 4. Does each boiler have a unique address? (see section 2.1)
- 5. For TSBC boilers, are the Parity and Baud rate set correctly? (see section 2.1.3)
- 6. Does the ProtoNode Discover boilers but give zero for values?
 - The ProtoNode has remembered older profiles and must be cleared.
 - Connect a PC using an Ethernet cable.
 - Go to 192.168.1.24 ProtoNode profile internet explorer page
 - Select "Clear Profiles And Restart"

For further "No Communication" Troubleshooting, go to the Network Protocol of the EMS Network and follow the Troubleshooting tree under it.

6.2.2 BACnet IP Troubleshooting

- 1. Are the "S Bank" Dipswitches set to BACnet IP? (See section 2.2.1)
- 2. Is the wiring to the EMS Network Correct? (See section 4.2 4.4)
- 3. Does the Baud Rate of the ProtoNode match the Baud Rate of the network (see section 2.2.4)
- 4. Has an Auto-Discovery been performed? (See section 2.2.2)

6.2.3 BACnet MS/TP Troubleshooting

- Are the "S Bank" Dipswitches set to BACnet MS/TP? (See section 2.2.1)
- 2. Is the wiring to the EMS Network Correct? (See section 3.11)
- 3. Is the MAC address between 1 127 AND unique on the EMS network? (Section 2.2.3)
- 4. Does the Baud Rate of the ProtoNode match the Baud Rate of the network (see section 2.2.4)
- 5. Has an Auto-Discovery been performed? (See section 2.2.2)

Page 40 of 69 Part Number 106417-01

6.2.4 Metasys N2 Troubleshooting

- 1. Are the "S Bank" Dipswitches set to Metasys N2? (See section 2.2.1)
- 2. Is the wiring to the EMS Network Correct? (See section 3.11)

6.2.5 Lonworks troubleshooting

- 1. Is the wiring to the EMS Network Correct? (See section 4.1)
- 2. Has an Auto-Discovery been performed? (See section 2.2.2)

6.3 Take Diagnostic Capture with FieldServer Utilities

- Once the log is complete, email it to support@protocessor.com. The log will allow us to rapidly diagnose the issue.
- Make sure the FieldServer Toolbox is loaded on the PC that the ProtoNode is connected to.
- Toolbox is found at: http://www.sierramonitor.com/customer-care/resource-center > Software Downloads > FieldServer Toolbox

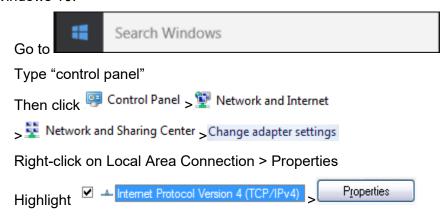


Figure 18: Ethernet port location of the ProtoNode

- After FieldServer Toolbox has been installed, disable any Wireless Network Connection adapters on the PC/Laptop.
- Disable firewall and virus protection software.
- Connect a standard Cat5 Ethernet cable between the PC and the ProtoNode.


Page 41 of 69 Part Number 106417-01

- The Default IP Address of the ProtoNode is 192.168.1.24, Subnet Mask is 255.255.255.0. If the PC and the ProtoNode are on different IP Networks, assign a static IP Address to the PC on the 192.168.1.xxx network.
- For Windows 10:




For Windows 7:

Click

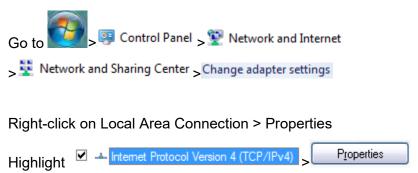


• For Windows 10 and Windows 7, select: Use the following IP address

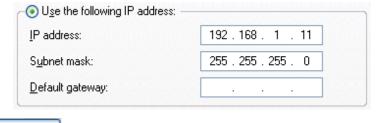


Double click on the FieldServer Toolbox.

twice

Page 42 of 69 Part Number 106417-01

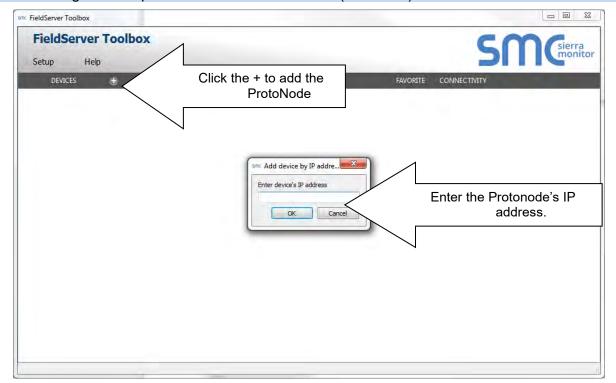


- Step 1: Take a Log
 - Click on the diagnose icon of the desired device.

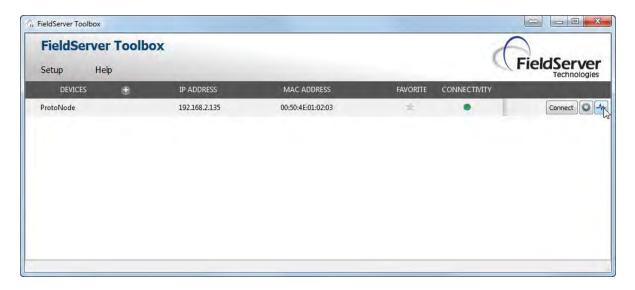

Page 43 of 69 Part Number 106417-01

o Select full Diagnostic

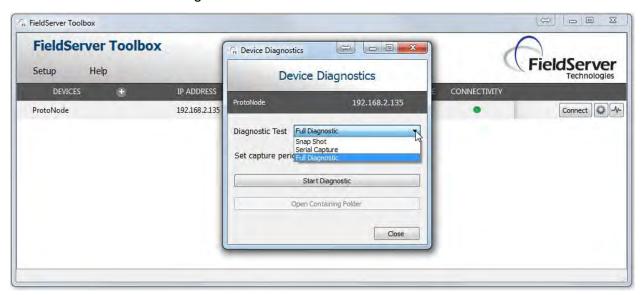

- If desired, the default capture period can be changed.
- Click on Start Diagnostic




- Wait for Capture period to finish. Diagnostic Test Complete window will appear.
- If Diagnostic Test Complete window does not appear after "Set Capture Period" is over, the diagnostic log may be found in the FieldServer directory (likely on the computer's C Drive or under Program Files):
 - C: Drive > FieldServer > FieldServer Toolbox > Config > Diagnostic_XXXX-XX-XX-XX (The X's will be the date and time the log was taken)
- Step 2: Send Log
 - o Once the Diagnostic test is complete, a .zip file will be saved on the PC.

Page 44 of 69 Part Number 106417-01



 Choose open to launch explorer and have it point directly at the correct folder. Send the Diagnostic zip file to support@fieldserver.com



- If Diagnostic Test Complete window does not appear after "Set Capture Period" is over, the diagnostic log may be found in the FieldServer directory (likely on the computer's C Drive or under Program Files):
 - C: Drive > FieldServer > FieldServer Toolbox > Config > Diagnostic_XXXX-XX-XX-XX-XX-XX (The X's will be the date and time the log was taken)
 - Send this folder instead of the .zip file

Page 45 of 69 Part Number 106417-01

7 PROTONODE INFORMATION

7.1 Specifications and Ordering Information

	ProtoNode RER BACnet	ProtoNode LER LonWorks					
Protocol	BACnet MS/TP, BACnet/IP, Metasys N2 Open, or Modbus TCP	LonWorks					
ProtoNode	Part Number: 106416-01	Part Number: 106418-01					
Part Number	FieldServer #: FPC-N34-0816	FieldServer #: FPC-N35-0817					
Electrical Connections	One 6-pin Phoenix connector, one RS-485 +/- ground port, power +/- frame ground port One 3-pin RS-485 Phoenix connector, one RS-485 +/- ground port One Ethernet-10/100 Ethernet port	One 6-pin Phoenix connector, one RS-485 +/- ground port, power +/- frame ground port One Ethernet 10/100 Base T port One FTT-10 LonWorks port					
Approvals	CE Certified; TUV approved to UL 916, EN 60950-1, EN 50491-3 and CSA C22-2 standards; FCC Class A Part 15; DNP3 Conformance Tested; OPC Self-tested for Compliance; RoHS Compliant; CSA 205 Approved BTL Marked LonMark Certified						
Operating Temperature	-40°C to 75°C (-40°F to167°F)						
Humidity							
Power Requirements	Multi-mode power adapter: 9-30VDC or 12 - 24VAC						
Operating Temperature:	-40°C to 75°C (-40°F to167°F)						
Physical Dimensions	11.5 cm L x 8.3 cm W x 4.1 cm H (4	.5 x 3.2 x 1.6 in.)					
Weight:	0.2 kg (0.4 lbs)						


Boiler Communication Statistics

Protocol	Modbus RTU
Baud Rate	38400
Parity	None
Data Bits	8
Stop Bits	1


Ordering information

oracing information							
	ProtoNode RER BACnet	ProtoNode LER LonWorks					
Universal Gateway (ProtoNode)	PN: 106416-01	PN: 106418-01					
Universal Gateway I&O	PN: 106417-01	PN: 106417-01					
Universal Gateway Kit (Includes ProtoNode and I&O)	PN: 106432-01	PN: 106433-01					

Page 46 of 69 Part Number 106417-01

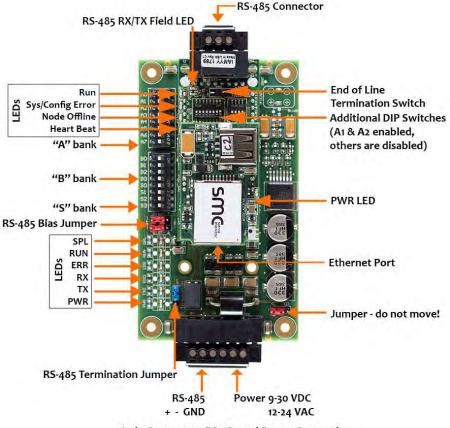

6 pin Connector - RS-485 and Power Connection

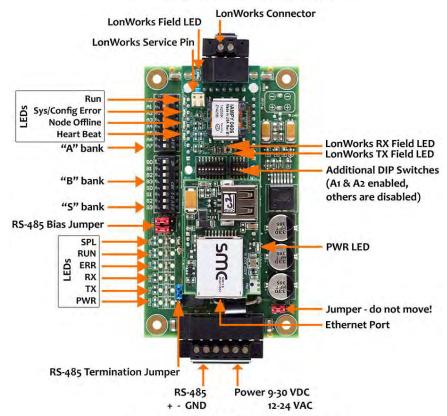

6 pin Connector - RS-485 and Power Connection

Page 47 of 69 Part Number 106417-01

Appendix A. TSBC Points list

BACnet, N2 and LonWorks Points

	Read/ Write	BACne t	N2	LonW orks		Read/ Write	BACnet
Point Name		Data Type	Object Id	Data Type	Pt Addr	Lon Name	Lon SNVT Type
Outdoor Air Reset Enable/Disable		BI	1	DI	1	nvoOAResEnDs_XXX	SNVT_switch
Domestic Hot Water Priority		BI	2	DI	2	nvoDmHtWtPri_XXX	SNVT_switch
Local/Remote		BI	3	DI	3	nvoLoc_Rem_XXX	SNVT_switch
Remote On/Off Modbus Command	R/W	BV	4	DO	4	nvi/nvoRmOnOfCmd_XXX	SNVT_switch
Spare Input (Programmable)		BI	5	DI	5	nvoSprInput_XXX	SNVT_switch
Low Water Cutoff Switch		BI	6	DI	6	nvoLoWtCtOff_XXX	SNVT_switch
Burner On/Off Switch		BI	7	DI	7	nvoBrnOnOfSw_XXX	SNVT_switch
Low Water Flow		BI	8	DI	8	nvoLoWtrFLo_XXX	SNVT_switch
High and Low Gas Pressure Switches		BI	9	DI	9	nvoHiLoGsPrs_XXX	SNVT_switch
Operating or High Limit		BI	10	DI	10	nvoOpOrHiLim_XXX	SNVT_switch
Low Combustion Air Flow		BI	11	DI	11	nvoLoCmbArFI_XXX	SNVT_switch
Fuel Valve Energized		BI	12	DI	12	nvoFlVlvEnrg_XXX	SNVT_switch
Flame Safeguard Alarm		BI	13	DI	13	nvoFlmSfgdAl_XXX	SNVT_switch
Call For Heat (CFH)		BI	14	DI	14	nvoCallForHt_XXX	SNVT_switch
General Alarm		BI	15	DI	15	nvoGenAlm_XXX	SNVT_switch
Vent Inducer		BI	16	DI	16	nvoVntIndcr_XXX	SNVT_switch
Boiler Pump		BI	17	DI	17	nvoBlrPump_XXX	SNVT_switch
System Pump		BI	18	DI	18	nvoSystPmp_XXX	SNVT_switch
Spare Output (Programmable)		BI	19	DI	19	nvoSprOutput_XXX	SNVT_switch
State Boiler Disabled		BI	20	DI	20	nvoStBlrDis_XXX	SNVT_switch
State Weather Shutdown		BI	21	DI	21	nvoStWthShdn_XXX	SNVT_switch
State Lockout		BI	22	DI	22	nvoStLockout_XXX	SNVT_switch
State Pump Purge		BI	23	DI	23	nvoStPmpPurg_XXX	SNVT_switch
State Limit Hold		BI	24	DI	24	nvoStLimHold_XXX	SNVT_switch
State Purge/Pilot Ign		BI	25	DI	25	nvoStPrgPllg_XXX	SNVT_switch
State Low Fire/Ignition		BI	26	DI	26	nvoStLoFirlg_XXX	SNVT_switch
State Main Ignition		BI	27	DI	27	nvoStMainIgn_XXX	SNVT_switch
State Low Fire Hold		BI	28	DI	28	nvoStLoFrHld_XXX	SNVT_switch
State Boiler Running		BI	29	DI	29	nvoStBlrRun_XXX	SNVT_switch
State Fan Post Purge		BI	30	DI	30	nvoStFnPstPg_XXX	SNVT_switch
State Pump Cool Down		BI	31	DI	31	nvoStPmpClDn_XXX	SNVT_switch
State Standby		BI	32	DI	32	nvoStStandby_XXX	SNVT_switch
Annunciator Low Water Level		BI	33	DI	33	nvoAnLoWtLvI_XXX	SNVT_switch
Annunciator Off Switch		BI	34	DI	34	nvoAnnOffSw_XXX	SNVT_switch
Annunciator Low Water Flow		BI	35	DI	35	nvoAnLoWtFlo_XXX	SNVT_switch
Annunciator Fuel Limit		BI	36	DI	36	nvoAnnFlLim_XXX	SNVT_switch
Annunciator High Temp Limit		BI	37	DI	37	nvoAnHiTmpLm_XXX	SNVT_switch
Annunciator Low Air Flow		BI	38	DI	38	nvoAnLoArFlo_XXX	SNVT_switch
Annunciator FSG Lockout		BI	39	DI	39	nvoAnFSGLkot_XXX	SNVT_switch
Annunciator Outlet Temp Fail		BI	40	DI	40	nvoAnOtlTpFI_XXX	SNVT_switch
Annunciator Inlet Temp Fail		BI	41	DI	41	nvoAnInITpFI_XXX	SNVT_switch

Page 48 of 69 Part Number 106417-01

Annunciator OA Temp Fail		BI	42	DI	42	nvoAnOATmpFI_XXX	SNVT_switch
Annunciator Remote Temp Fail		BI	43	DI	43	nvoAnRemTpFI_XXX	SNVT_switch
Annunciator Remote In Fail		BI	44	DI	44	nvoAnRemInFI_XXX	SNVT_switch
Annunciator Comm Fail		BI	45	DI	45	nvoAnComFI_XXX	SNVT_switch
Annunciator Low Inlet Temp		BI	46	DI	46	nvoAnLoInITp_XXX	SNVT_switch
Annunciator Memory Failure		BI	47	DI	47	nvoAnnMemFI_XXX	SNVT_switch
Boiler Outlet Water Temp		Al	48	Al	48	nvoBlOtlWtTp_XXX	SNVT_temp_p
Boiler Inlet Water Temp		Al	49	Al	49	nvoBIInlWtTp_XXX	SNVT_temp_p
Outside Air Temp		Al	50	Al	50	nvoOATmp_XXX	SNVT_temp_p
Boiler Actual SP		Al	51	Al	51	nvoBlrActSP_XXX	SNVT_temp_p
Remote System Temp		Al	52	Al	52	nvoRemSysTmp_XXX	SNVT_temp_p
Remote Firing Rate or Remote SP	R/W	AV	53	AO	53	nvi/nvoRmFrRatSP_XXX	SNVT_count_f
PCB Temp Sensor		Al	54	Al	54	nvoPCBTmpSen_XXX	SNVT_temp_p
Firing Rate Output to Mod Motor		Al	55	Al	55	nvoFrRtOtMod_XXX	SNVT_lev_percent
Minimum Return Temp SP		Al	56	Al	56	nvoMnRetTpSP_XXX	SNVT_temp_p
Mixing Valve Output		Al	57	Al	57	nvoMixVIvOut_XXX	SNVT_lev_percent
Control Mode		Al	58	Al	58	nvoCtrlMode_XXX	SNVT_count_f

Modbus Points

Modbus Register Address	Description	Read/ Write	Engineerin g Units for Register = 0	Engineerin g Units for Register = 100	Units	Not es
40001	Boiler Outlet Water Temperature		-50	300	F	
40002	Boiler Inlet Water Temperature		-50	300	F	
40003	Outside Air Temperature		-50	300	F	
40004	Boiler Actual Setpoint		60	230	F	
40005	Remote System Temperature		-50	300	F	
40006	Remote Firing Rate or Remote Setpoint	Υ	0	100 or 300	% or F	1
40007	PCB Temperature Sensor		-50	300	F	
40008	Firing Rate Output to Mod Motor		0	100	%	
40009	Minimum Return Temperature Setpoint		110	180	F	
40010	Mixing Valve Output		0	100	%	
40011	Control Mode		1	7		

Coil Address

Coil Address	Description	Read/Write	coil = 0	coil = 1	Notes
00001	Outdoor Air Reset Enable/Disable		Disable	Enable	
00002	Domestic Hot Water Priority (DHWP)		Disable	Enable	
00003	Local / Remote		Local	Remote	
00004	Remote On / Off Modbus Command	Υ	Off	On	1
00005	Spare Input (Programmable)		Off	On	
00006	Low Water Cutoff Switch		Off	On	2
00007	Burner On / Off Switch		Off	On	2
80000	Low Water Flow		Off	On	2

Page 49 of 69 Part Number 106417-01

Coil Address	Description	Read/Write	coil = 0	coil = 1	Notes
00009	High and Low Gas Pressure		Off	On	2
	Switches				
00010	Operating or High Limit		Off	On	2
00011	Low Combustion Air Flow		Off	On	2
00012	Fuel Valve Energized		Off	On	
00013	Flame Safeguard Alarm		Off	On	
00014	Call For Heat (CFH)		Off	On	
00015	General Alarm		Off	On	4
00016	Vent Inducer		Off	On	
00017	Boiler Pump		Off	On	
00018	System Pump		Off	On	
00019	Spare Output (Programmable)		Off	On	
00020	State Boiler Disabled		Off	On	3
00021	State Weather Shutdown		Off	On	3
00022	State Lockout		Off	On	3
00023	State Pump Purge		Off	On	3
00024	State Limit Hold		Off	On	3
00025	State Purge/Pilot Ign		Off	On	3
00026	State Low Fire/Ignition		Off	On	3
00027	State Main Ignition		Off	On	3
00028	State Low Fire Hold		Off	On	3
00029	State Boiler Running		Off	On	3
00030	State Fan Post Purge		Off	On	3
00031	State Pump Cool Down		Off	On	3
00032	State Standby		Off	On	3
00033	Annunciator Low Water Level		Off	On	4
00034	Annunciator Off Switch		Off	On	4
00035	Annunciator Low Water Flow		Off	On	4
00036	Annunciator Fuel Limit		Off	On	4
00037	Annunciator High Temp Limit		Off	On	4
00038	Annunciator Low Air Flow		Off	On	4
00039	Annunciator FSG Lockout		Off	On	4
00040	Annunciator Outlet Temp Fail		Off	On	4
00041	Annunciator Inlet Temp Fail		Off	On	4
00042	Annunciator OA Temp Fail		Off	On	4
00043	Annunciator Remote Temp Fail		Off	On	4
00044	Annunciator Remote In Fail		Off	On	4
00045	Annunciator Comm Fail		Off	On	4
00046	Annunciator Low Inlet Temp		Off	On	4
00047	Annunciator Memory Failure		Off	On	4

Page 50 of 69 Part Number 106417-01

Appendix B. Apex with Panasonic (4109) Points List

WARNING: All parameters are stored in EEPROM. Only perform writes when it is **absolutely necessary** to change the value of a register. Care must be taken to avoid excessive writing to parameters stored in EEPROM memory.

BACnet, N2 and LonWorks Points

	Read/ Write	BAC	Cnet	N	12	LonWork	s
Point Name		Data	Data	Data	Pnt	Lon Name	Lon SNVT
		Type	ID	Type	Addr		
Burner On Off (See Note 1)	R/W	BV	1	DO	1	nvi/nvoBrnrOnOff_XXX	SNVT_switch
Demand Source		ΑI	2	Al	2	nvoDem_Src_XXX	SNVT_count_f
CH Setpoint (See Note 2)	R/W	AV	3	AO	3	nvi/nvoCH_SP_XXX	SNVT_temp_p
DHW Setpoint	R/W	AV	4	AO	4	nvi/nvoDHW_SP_XXX	SNVT_temp_p
Lead Lag Setpoint	R/W	AV	5	AO	5	nvi/nvoLL_SP_XXX	SNVT_temp_p
CH TOD Setpoint	R/W	ΑV	6	AO	6	nvi/nvoCH_TOD_SP_XXX	SNVT_temp_p
CH Setpoint Source		ΑI	7	Al	7	nvoCH_SP_Src_XXX	SNVT_count_f
Active CH Setpoint		Al	8	Al	8	nvoAct_CH_SP_XXX	SNVT_temp_p
DHW Setpoint Source		Al	9	Al	9	nvoDHW_SPSrc_XXX	SNVT_count_f
Active DHW Setpoint		Al	10	Al	10	nvoActDHW_SP_XXX	SNVT_temp_p
LL Master Setpoint Source		Al	11	Al	11	nvoLLMstSPSr_XXX	SNVT_count_f
Active LL Setpoint		Al	12	Al	12	nvoAct_LL_SP_XXX	SNVT_temp_p
Supply Sensor		Al	13	Al	13	nvoSupSensor_XXX	SNVT_temp_p
Return Sensor		Al	14	Al	14	nvoRetSensor_XXX	SNVT_temp_p
Header Sensor		Al	15	Al	15	nvoHdrSensor_XXX	SNVT_temp_p
Stack Sensor		Al	16	Al	16	nvoStkSensor_XXX	SNVT_temp_p
Outdoor Sensor		Al	17	Al	17	nvoOtdrSensr_XXX	SNVT_temp_p
4-20 mA Rem Control Input		Al	18	Al	18	nvoRemCtrlIn_XXX	SNVT_count_f
Fan Speed		Al	19	Al	19	nvoFan_Speed_XXX	SNVT_count_f
Flame Signal		Al	20	Al	20	nvoFlmSig_XXX	SNVT_count_f
Burner Control State		Al	21	Al	21	nvoBrnCtrlSt_XXX	SNVT_count_f
Lockout Code		Al	22	Al	22	nvoLockotCod_XXX	SNVT_count_f
Hold Code		Al	23	Al	23	nvoHoldCode_XXX	SNVT_count_f
Burner Cycle Count	R/W	AV	24	AO	24	nvi/nvoBrnCycCnt_XXX	SNVT_count_f
Burner Run Time	R/W	AV	25	AO	25	nvi/nvoBrnRunTim_XXX	SNVT_time_hour
System Pum Cycle Count	R/W	AV	26	AO	26	nvi/nvoSysPmCyCt_XXX	SNVT_count_f
DHW Pump Cycle Count	R/W	AV	27	AO	27	nvi/nvoDHWPmCyCt_XXX	SNVT_count_f
Boiler Pump Cycle Count	R/W	AV	28	AO	28	nvi/nvoBlrPmCyCt_XXX	SNVT_count_f

Note 1, If only the burner on/off Modbus signal is used instead of the Enable / Disable contact input the boiler will be turned off but the system pump may remain running.

Note 2, when writing CH Setpoint the Energy Management System is responsible for the boiler's setpoint for central heating. Disable the boiler's Outdoor Air Reset function. **WARNING:** All parameters are stored in EEPROM. Only perform writes when it is **absolutely necessary** to change the value of a register. Care must be taken to avoid excessive writing to parameters stored in EEPROM memory.

Page 51 of 69 Part Number 106417-01

Modbus Points

Modbus Register	Protocol Name	Description	Read/ Write
Enable / Dis			
		Enable / disable burner.	
400,203	Burner on/off	1 = on	R/W
,	·	0 = off	
		0 = Unknown	
		1 = No source demand	
		2 = Central heat	
		3 = Domestic hot water	
		4 = Lead Lag slave	
400,006	Demand source	5 = Lead Lag master	R
		6 = Central heat frost protection	
		7 = Domestic hot water frost protection	
		8 = No demand due to burner switch turned off	
		9 = Domestic hot water storage	
		11 = Warm weather shutdown	
Setpoints			
410,211	CH setpoint	Use this register to change the boiler setpoint.	R/W
110,211	Or reciponit	valid range 79 F (26.1 C) to 191 F (88.3 C)	1000
		Use this register to change the domestic hot water	
410,453	DHW setpoint	setpoint.	R/W
		valid range 79 F (26.1 C) to 191 F (88.3 C)	
410,546	Lead Lag setpoint	Use this register to change the lead lag setpoint.	R/W
110,010	Load Lag corponit	valid range 79 F (26.1 C) to 191 F (88.3 C)	
		Use this register to change the central heat 'time of	
410,212	CH TOD setpoint	day' setpoint	R/W
		valid range 79 F (26.1 C) to 191 F (88.3 C)	
		0=Unknown,	
		1=Normal setpoint,	
410,065	CH setpoint source	2=TOD setpoint,	R
•	·	3=Outdoor reset,	
		4=Remote control (4-20mA),	
		7=Outdoor reset time of day	
440.046	Active CH cotroint	-40 F (-40°C) to 266 F (130°C)	D
410,016	Active CH setpoint	Setpoint determined by CH setpoint source (register 65).	R
		0=Unknown,	
		1=Normal setpoint,	
410,081	DHW setpoint	2=TOD setpoint,	R
	source	5=DHW tap setpoint,	1 \
		6=DHW preheat setpoint	
		-40 F (-40°C) to 266 F (130°C) Setpoint determined by	
410,017	Active DHW	DHW setpoint source (register 81).	R
,	setpoint		- •
		0=Unknown,	
		1=CH setpoint,	
		2=CH TOD setpoint,	
		3=Outdoor reset,	
410,162		4=Remote control (4-20mA),	
	Lead Lag master	5=DHW setpoint,	R
	setpoint source	6=DHW TOD setpoint,	
		7=Outdoor reset time of day,	
		8=Mix setpoint	
1			

Page 52 of 69 Part Number 106417-01

Modbus Register	Protocol Name	Description	Read/ Write
410,018	Active LL setpoint	-40 F (-40°C) to 266 F (130°C) Setpoint determined by LL setpoint source (register 162).	R
Temperatu	re Sensors		
410,007	Supply sensor	-40 F (-40°C) to 266 F (130°C)	R
410,011	Return sensor	-40 F (-40°C) to 266 F (130°C)	R
410,013	Header sensor	-40 F (-40°C) to 266 F (130°C)	R
410,014	Stack sensor	-40 F (-40°C) to 266 F (130°C)	R
410,170	Outdoor sensor	-40 F (-40°C) to 266 F (130°C)	R
	4 - 20 mA remote	mA value for S2 (J8-6) parameter selectable as	
400,015	control input	(remote set point) & (remote modulation)	R
Burner			
400,009	Fan speed	Speed of the combustion air blower in rpm	R
400,010	Flame signal	0.01V or 0.01µA precision (0.00-50.00V)	R
400,033 Trouble Sh	Burner control state	0 Initiate 1 Standby Delay 2 Standby 3 Safe Startup 4 Prepurge - Drive to Purge Rate 5 Prepurge - Measured Purge Time 6 Prepurge - Drive to Lightoff Rate 7 Preignition Test 8 Preignition Time 9 Pilot Flame Establishing Period 10 Main Flame Establishing Period 11 Direct Burner Ignition 12 Run 13 Postpurge 14 Lockout	R
410,034	Lockout code	0 No lockout, 4 Supply high limit 5 DHW high limit 6 Stack High limit 12 Flame detected out of sequence 18 Lightoff rate proving failed 19 Purge rate proving failed 20 Invalid Safety Parameters 21 Invalid Modulation Parameter 22 Safety data verification needed 23 24VAC voltage low/high 24 Fuel Valve Error 25 Hardware Fault 26 Internal Fault 27 Ignition Failure	R

Page 53 of 69 Part Number 106417-01

Modbus Register	Protocol Name	Description	Read/ Write
410,040	Hold code	Reason for burner hold None Anti short cycle Boiler Safety Limit Open Boiler Safety Limit Open, (ILK Off) Return sensor fault Supply sensor fault DHW sensor fault In gnition failure Return temp higher than supply Supply temp has risen too quickly Fan speed not proved 24VAC voltage low/high Hardware Fault Ignition Failure	R
Statistics	1		
400,128- 400,129	Burner cycle count	0-999,999 (U32)	R/W
400,130- 400,131	Burner run time	Hours (U32)	R/W
400,132- 400,133	System pump cycle count	0-999,999 (U32)	R/W
400,134- 400,135	DHW pump cycle count	0-999,999 (U32)	R/W
400,138- 400,139	Boiler pump cycle count	0-999,999 (U32)	R/W

Page 54 of 69 Part Number 106417-01

Appendix C. Concert Control or Apex with Panasonic (4716) Points List

BACnet, N2 and LonWorks Points

		BAG	Cnet	N2		LonWorks		
	Read/	Data	Data	Data	Pt			
Point Name	Write	Type	Id	Type		Lon Name	Lon SNVT Type	
Burner On Off	R	BV	1	DO	1	nvi/nvoBrnrOnOff_XXX	SNVT_switch	
Demand Source	R	ΑI	2	Al	2	nvoDem_Src_XXX	SNVT_count_f	
CH Setpoint	R	AV	3	AO	3	nvi/nvoCH_SP_XXX	SNVT_temp_p	
DHW Setpoint	R	AV	4	AO	4	nvi/nvoDHW_SP_XXX	SNVT_temp_p	
Lead Lag Setpoint	R	AV	5	AO	5	nvi/nvoLL_SP_XXX	SNVT_temp_p	
CH TOD Setpoint	R	AV	6	AO	6	nvi/nvoCH_TOD_SP_XXX	SNVT_temp_p	
CH Setpoint Source	R	Al	7	Al	7	nvoCH_SP_Src_XXX	SNVT_count_f	
Active CH Setpoint	R	Αl	8	Al	8	nvoAct_CH_SP_XXX	SNVT_temp_p	
DHW Setpoint Source	R	ΑI	9	Al	9	nvoDHW_SPSrc_XXX	SNVT_count_f	
Active DHW Setpoint	R	ΑI	10	Al	10	nvoActDHW_SP_XXX	SNVT_temp_p	
LL Master Setpoint Source	R	ΑI	11	Al	11	nvoLLMstSPSr_XXX	SNVT_count_f	
Active LL Setpoint	R	ΑI	12	Al	12	nvoAct_LL_SP_XXX	SNVT_temp_p	
Supply Sensor	R	ΑI	13	Al	13	nvoSupSensor_XXX	SNVT_temp_p	
Return Sensor	R	ΑI	14	Al	14	nvoRetSensor_XXX	SNVT_temp_p	
Header Sensor	R	Al	15	Al	15	nvoHdrSensor_XXX	SNVT_temp_p	
Stack Sensor	R	ΑI	16	ΑI	16	nvoStkSensor_XXX	SNVT_temp_p	
Outdoor Sensor	R	ΑI	17	Al	17	nvoOtdrSensr XXX	SNVT_temp_p	
4-20 mA Rem Control Input	R	Al	18	Al	18	nvoRemCtrlIn XXX	SNVT count f	
Fan Speed	R	ΑI	19	Al	19	nvoFan Speed XXX	SNVT_count_f	
Flame Signal	R	Al	20	Al	20	nvoFlmSig_XXX	SNVT_count_f	
Burner Control State	R	Al	21	Al	21	nvoBrnCtrlSt XXX	SNVT count f	
Lockout Code	R	Al	22	Al	22	nvoLockotCod XXX	SNVT_count_f	
Hold Code	R	Al	23	Al	23	nvoHoldCode XXX	SNVT count f	
Burner Cycle Count	R/W	AV	24	AO	24	nvi/nvoBrnCycCnt XXX	SNVT count f	
Burner Run Time	R/W	AV	25	AO	25	nvi/nvoBrnRunTim_XXX	SNVT_time_hour	
System Pum Cycle Count	R/W	AV	26	AO	26	nvi/nvoSysPmCyCt_XXX	SNVT_count_f	
DHW Pump Cycle Count	R/W	AV	27	AO	27	nvi/nvoDHWPmCyCt XXX	SNVT count f	
Boiler Pump Cycle Count	R/W	AV	28	AO	28	nvi/nvoBlrPmCyCt_XXX	SNVT_count_f	
CH Modbus Stat	W	BV	29	DO	29	nvi/nvoCHModStat XXX	SNVT_switch	
LLCH Modbus Stat	W	BV	30	DO	30	nvi/nvoLLCHModSt XXX	SNVT switch	
CH Modbus SP	W	AV	31	AO	31	nvi/nvoCHModSP XXX	SNVT_temp_p	
CH Sequencer Modbus SP	W	AV	32	AO	32	nvi/nvoCHSeqMdSP_XXX	SNVT_temp_p	
Outdoor Temperature	W	AV	33	AO	33	nvi/nvoOutTemp XXX	SNVT_temp_p	
CH Modbus Rate	W	AV	34	С	34	nvi/nvoCHModRate XXX	SNVT lev percent	
Fan Speed Measured	R	ΑI	35	Al	35	nvoFanSpdMes_XXX	SNVT_count_f	
Modbus command timeout	R/W	AV	36	AO	36	nvoModCmdTim XXX	SNVT count f	
CH pump status	R	ΑI	37	Al	37	nvoCHPmpStat XXX	SNVT_count_f	
DHW pump status	R	Al	38	Al	38	nvoDHWPmpSt_XXX	SNVT_count_f	
Boiler pump status	R	Al	39	Al	39	nvoBlrPmpSt XXX	SNVT_count_f	
Low Temp SP	R	Al	40	Al	40	nvoLoTmpSP XXX	SNVT_temp_p	
Low TempSP source	R	Al	41	Al	41	nvoLoTmpSPSr XXX	SNVT count f	
Active Low Temp SP	R	Al	42	Al	42	nvoActLoTpSP_XXX	SNVT_temp_p	
CH heat demand	W	BI	43	DI	43	nvoCH_HtDem_XXX	SNVT_switch	
DHW heat demand	R	ВІ	44	DI	44	nvoDHW_HtDem_XXX	SNVT_switch	
Low Temp Loop demand	R	BI	45	DI	45	nvoLoTpLHtDm_XXX	SNVT_switch	

Page 55 of 69 Part Number 106417-01

Modbus Points

Modbus	Protocol Read/						
Register	Name		Write				
Enable / D	isable	I I					
400,577	CH Modbus Stat	CH Modbus STAT 0 = no demand 1 = demand When this register is not written every "Modbus Command Time Out" parameter seconds (default 30 seconds), CH Modbus Stat is reverted to 0, no demand.	W				
400,563	LLCH Modbus Stat	LL CH Modbus STAT 0 = no demand 1 = demand When this register is not written every "Modbus Command Time Out" parameter seconds (default 30 seconds), CH Modbus Stat is reverted to 0, no demand.	W				
400,203	Burner on/off	Enable / disable burner. 1 = on 0 = off	R				
400,006	Demand source	0 = Unknown 1 = No source demand 2 = Central heat 3 = Domestic hot water 4 = Lead Lag slave 5 = Lead Lag master 6 = Central heat frost protection 7 = Domestic hot water frost protection 8 = No demand due to burner switch turned off 9 = Domestic hot water storage 11 = Warm weather shutdown	R				
400,066	CH heat demand	0=Off, 1=On	R				
400,083	DHW heat demand	0=Off, 1=On	R				
400,123	Low Temperature Loop heat demand	0=Off, 1=On	R				
Setpoints							
410,579	CH Modbus Setpoint	W					
410,562	CH Sequencer Modbus Setpoint	valid range 60 F to 190 F Use this register to change the multiple boiler Sequencer setpoint. When this register is not written every "Modbus Command Time Out" parameter seconds (default 30 seconds), setpoint reverts to local setpoint valid range 60 F to 190 F	W				
410,211	CH setpoint	Status of local setpoint	R				
410,453	DHW setpoint	Status of local setpoint	R				
410,546	Lead Lag setpoint	Status of local setpoint	R				
410,212	CH TOD setpoint	Status of local setpoint	R				

Page 56 of 69 Part Number 106417-01

Modbus Register	Protocol Name	Description	Read/ Write
410,065	CH setpoint source	0=Unknown, 1=Normal setpoint, 2=TOD setpoint, 3=Outdoor reset, 4=Remote control (4-20mA), 7=Outdoor reset time of day	R
410,016	Active CH setpoint	-40 F (-40°C) to 266 F (130°C) Setpoint determined by CH setpoint source (register 65).	R
410,081	DHW setpoint source	0=Unknown, 1=Normal setpoint, 2=TOD setpoint, 5=DHW tap setpoint, 6=DHW preheat setpoint	R
410,017	Active DHW setpoint	-40 F (-40°C) to 266 F (130°C) Setpoint determined by DHW setpoint source (register 81).	R
410,162	Lead Lag master setpoint source	0=Unknown, 1=CH setpoint, 2=CH TOD setpoint, 3=Outdoor reset, 4=Remote control (4-20mA), 5=DHW setpoint, 6=DHW TOD setpoint, 7=Outdoor reset time of day, 8=Mix setpoint	R
410,018	Active LL setpoint	-40 F (-40°C) to 266 F (130°C) Setpoint determined by LL setpoint source (register 162).	R
410,643	Low Temperature setpoint	Setpoint entered on the local user interface. valid range 79 F (26.1 C) to 191 F (88.3 C)	R
410,121	Low Temperature setpoint source	0=Unknown, 1=Normal setpoint, 2=TOD setpoint, 3=Outdoor reset, 4=Remote control, 7=Outdoor reset time of day, 9=Outdoor boost	R
410,024	Active Low Temperature setpoint	-40 F (-40°C) to 266 F (130°C) Setpoint determined by Low Temp setpoint source (register 121).	R
	re Sensors		
410,007	Supply sensor	-40 F (-40°C) to 266 F (130°C)	R
410,011	Return sensor	-40 F (-40°C) to 266 F (130°C)	R
410,013	Header sensor	-40 F (-40°C) to 266 F (130°C)	R
410,014	Stack sensor	-40 F (-40°C) to 266 F (130°C)	R
410,170	Outdoor sensor 4 - 20 mA remote	-40 F (-40°C) to 266 F (130°C) mA value for S2 (J8-6) parameter selectable as	R
400,015	control input	(remote set point) & (remote modulation)	R

Page 57 of 69 Part Number 106417-01

Modbus Register	Protocol Name	Description	Read/ Write					
410,817	Outdoor Temperature	Building Automation may send the controller the outdoor air temperature. Use this register to change the outdoor temperature. When this register is not written every "Modbus Command Time Out" parameter seconds (default 30 seconds), temperature is set to bad data quality and outdoor air reset is set back to local setpoint.	utdoor air temperature. Use this register to hange the outdoor temperature. When this egister is not written every "Modbus Command ime Out" parameter seconds (default 30 Weconds), temperature is set to bad data quality					
_		valid range -40 F to 302 F						
Burner	Ī	I le a this manistant a duive in dividual hailan fising						
400,581	CH Modbus Rate	Time Out" parameter seconds (default 30 seconds),						
400.000	Fan Speed	Range is 0 to 200 % provides 0-100% firing rate.						
400,008	Measured	Speed of the combustion air blower in rpm	R					
400,009	Fan Speed Commanded	Speed of the combustion air blower in rpm	R					
400,010	Flame signal	0.01V or 0.01µA precision (0.00-50.00V)	R					
400,033	Burner control state	0 Initiate 1 Standby Delay 2 Standby 3 Safe Startup 4 Prepurge - Drive to Purge Rate 5 Prepurge - Measured Purge Time 6 Prepurge - Drive to Lightoff Rate 7 Preignition Test 8 Preignition Time 9 Pilot Flame Establishing Period 10 Main Flame Establishing Period 11 Direct Burner Ignition 12 Run 13 Postpurge 14 Lockout	R					
Trouble O		Reasons for burner lockout						
410,034	Lockout code	0 No lockout 3 Burner Interlock Open (ILK OFF) 4 Supply high limit 5 DHW high limit 6 Stack High limit 12 Flame detected out of sequence 14 Delta T Inlet/Outlet High 15 Return Temp Higher Than Supply 16 Supply Temp Rose Too Quickly 18 Lightoff rate proving failed 19 Purge rate proving failed	3 24VAC voltage low/high 4 Fuel Valve Error 5 Hardware Fault 6 Internal Fault 7 Ignition Failure 1 Fan Failed R 2 ILK ON 2 AC Phase Fault 6 Pilot Test Flame 7 Flame Lost 84 Memory Reset					

Page 58 of 69 Part Number 106417-01

Modbus Register	Protocol Name	Description	Read/ Write
410,040	Hold code	Reason for burner hold None Anti short cycle Boiler Safety Limit Open Boiler Safety Limit Open, (ILK Off) Return sensor fault Supply sensor fault DHW sensor fault In guition failure Return temp higher than supply Supply temp has risen too quickly Return speed not proved Authorized to ground Return temp higher than supply Return temp higher than supply Return temp has risen too quickly Return temp higher than supply Return temp has risen too quickly Return temp higher than supply Return temp higher than supply	R
Statistics	T		
400,763	Modbus command timeout	This parameter sets the amount of time the control will wait for input from the Energy Management System (EMS). If the EMS does not write to the following register within the "Modbus Command timeout" seconds the following inputs are considered invalid: CH Modbus Stat, CH Modbus Setpoint, CH Sequencer Modbus Setpoint CH Modbus Rate range 30 – 120, Default 30 seconds Other R/W registers should only be written when a value is needed to be changed. Only the above listed registers are stored in non-volatile registers.	R/W
Pump Stat	us		
400,096	CH pump status	See table 1	R
400,100	DHW pump status	See table 1	R
400,108	Boiler pump status	See table 1	R
400,128- 400,129	Burner cycle count	0-999,999 (U32)	R/W
400,130- 400,131	Burner run time	Hours (U32)	R/W
400,132- 400,133	System pump cycle count	0-999,999 (U32)	R/W
400,134- 400,135	DHW pump cycle count	0-999,999 (U32)	R/W
400,138- 400,139	Boiler pump cycle count	0-999,999 (U32)	R/W

Page 59 of 69 Part Number 106417-01

Status	Description	Note
92	Forced On from manual pump control	
93	Forced On due to Outlet high limit is active	
94	Forced On from burner demand	
95	Forced On due to Lead Lag slave has demand	
96	Forced Off from local DHW priority service	
97	Forced Off from Lead Lag DHW priority service	
98	Forced Off from Central Heat anti-condensation	
99	Forced Off from DHW anti-condensation	
100	Forced Off due to DHW high limit is active	
101	Forced Off from EnviraCOM DHW priority service	
102	On due to local CH frost protection is active	
103	On due to Lead Lag CH frost protection is active	
104	On due to local DHW frost protection is active	
105	On due to Lead Lag DHW frost protection is active	
106	On from local Central Heat demand	
107	On from Lead Lag Central Heat demand	
108	On from local DHW demand	
109	On from Lead Lag DHW demand	
110	On from local Mix demand	
111	On from Lead Lag Mix demand	
112	On from local Central Heat service	
113	On from Lead Lag Central Heat service	
114	On from local DHW service	
115	On from Lead Lag DHW service	
116	On from local Mix service	
117	On from Lead Lag Mix service	
118	On from Lead Lag auxiliary pump X	
119	On from Lead Lag auxiliary pump Y	
120	On from Lead Lag auxiliary pump Z	
121	On, but inhibited by pump start delay	
122	On from pump overrun	
123	Off, not needed	
124	On from burner demand	
125	On from exercise	
126	On from local Lead Lag service	
127	On from local Lead Lag pump demand	

Pump Status Codes

Page 60 of 69 Part Number 106417-01

Appendix D. Conductor Sequencing Panel Points List

		BAG	Cnet	N2		LonW	LonWorks		
	Read/	Data	Data	Data	Pt				
Point Name	Write	Туре	ld	Туре	-	Lon Name	Lon SNVT Type		
Plant load	R	Al	1	Al	1	nvoPlant Ld XXX	SNVT count f		
EMS Enable	W	BV	2	DO	2	nvi/nvoEMS Enbl XXX			
EMS Setpoint	W	AV	3	AO	3	nvi/nvoEMS_EHBI_XXX	SNVT_temp_p		
Firing Rate	R	Al	4	Al	4	nvoFir Rate XXX	SNVT_lev_percent		
Active Setpoint	R	Al	5	Al	5	nvoAct SP XXX	SNVT_temp_p		
Master SP Source	R	Al	6	Αl	6	nvoMstrSPSrc XXX	SNVT count f		
Status	R	Al	7	Al	7	nvoStatus XXX	SNVT_count_f		
Priority	R	Al	8	Al	8	nvoPriority XXX	SNVT count f		
Lead	R	Al	9	Al	9	nvoLead_XXX	SNVT_count_f		
SYSTEM_SUPPLY	R	Al	10	Al	10	nvoSys_Sup_XXX	SNVT_temp_p		
SYSTEM_RETURN	R	ΑI	11	Al	11	nvoSys_Ret_XXX	SNVT_temp_p		
OUTDOOR_AIR	R	ΑI	12	Al	12	nvoOtdr_Air_XXX	SNVT_temp_p		
UAI5_EMS_SETPOINT	R	Al	13	Al	13	nvoAl5EMS_SP_XXX	SNVT_temp_p		
UAI7_PUMP_FEEDBACK	R	Al	14	Al	14	nvoPmp_Fdbk_XXX	SNVT_lev_percent		
STEAM_PRESSURE	R	Al	15	Al	15	nvoStm_Prs_XXX	SNVT_count_f		
BLR_A_SHELL	R	Al	16	Al	16	nvoBlrAShl_XXX	SNVT_temp_p		
BLR_B_SHELL	R	Al	17	Al	17	nvoBlrBShl_XXX	SNVT_temp_p		
BLR_C_SHELL	R	Al	18	Al	18	nvoBlrCShl_XXX	SNVT_temp_p		
BLR_D_SHELL	R	Al	19	Al	19	nvoBlrDShl_XXX	SNVT_temp_p		
UDO1_CONFIGURABLE	R	Al	20	Al	20	nvoUDO1_Cnfg_XXX	SNVT_count_f		
UDO2_ALARM	R	Al	21	Al	21	nvoUDO2_Alm_XXX	SNVT_count_f		
UDO7_BLR_D_ISOLATION_VALVE	R	BI	22	DI	22	voBIDIsoVIv_XXX	SNVT_switch		
UDO8_PUMP_A	R	BI	23	DI	23	nvoPmp_A_XXX	SNVT_switch		
UDO9_BLR_A_ISOLATION_VALVE	R R	BI	24	DI	24	nvoBIAlsoVlv_XXX	SNVT_switch		
UDO10_BLR_B_ISOLATION_VALVE UDO11_BLR_C_ISOLATION_VALVE	R	BI BI	25 26	DI DI	25 26	nvoBlBlsoVlv_XXX	SNVT_switch SNVT switch		
UDO12 PUMP B	R	BI	27	DI	27	nvoBlClsoVlv_XXX nvoPmp B XXX	SNVT switch		
ALR Press High	R	BI	28	DI	28	nvoALR PrsHi XXX	SNVT_switch		
ALR Press Low	R	BI	29	DI	29	nvoALR_PrsLo_XXX	SNVT switch		
ALR_Temp_High	R	BI	30	DI	30	nvoALR_TheLo_XXX	SNVT switch		
ALR Temp Low	R	BI	31	DI	31	nvoALR TmpLo XXX	SNVT switch		
ALR Return Temp Low	R	BI	32	DI	32	nvoALRRtTpLo_XXX	SNVT switch		
ALR Pump A Fault	R	BI	33	DI	33	nvoALRPmAFIt XXX	SNVT switch		
ALR Pump B Fault	R	BI	34	DI	34	nvoALRPmBFlt XXX	SNVT switch		
ALR_Shell_1_High	R	BI	35	DI	35	nvoALR_Sh1Hi_XXX	SNVT switch		
ALR_Shell_2_High	R	BI	36	DI	36	nvoALR_Sh2Hi_XXX	SNVT_switch		
ALR_Shell_3_High	R	BI	37	DI	37	nvoALR_Sh3Hi_XXX	SNVT_switch		
ALR_Shell_4_High	R	BI	38	DI	38	nvoALR_Sh4Hi_XXX	SNVT_switch		
BLR1_Supply	R	ΑI	39	Al	39	nvoB1_Sup_XXX	SNVT_temp_p		
BLR1_Return	R	ΑI	40	Al	40	nvoB1_Ret_XXX	SNVT_temp_p		
BLR1_Stack	R	Al	41	Al	41	nvoB1_Stk_XXX	SNVT_temp_p		
BLR1_CH_Mod_Rate	R	Al	42	Al	42	nvoB1_CHMdRt_XXX	SNVT_lev_percent		
BLR1_Rate_Commanded	R	Al	43	Al	43	nvoB1_RteCmd_XXX	SNVT_lev_percent		
BLR1_CH_Mod_Stat	R	BI	46	DI	46	nvoB1_CHMdSt_XXX	SNVT_switch		
BLR1_General_Alarm	R	BI	47	DI	47	nvoB1_GenAlm_XXX	SNVT_switch		
BLR1_Boiler_Pump	R	BI	48	DI	48	nvoB1_BlrPmp_XXX	SNVT_switch		
BLR1_System_Pump	R	BI	49	DI	49	nvoB1_SysPmp_XXX	SNVT_switch		
BLR1_Pump_Status	R	BI	50	DI	50	nvoB1_PmpSta_XXX	SNVT_switch		
BLR1_Flame	R	Al	51	Al	51	nvoB1_Flame_XXX	SNVT_count_f		
BLR1_State	R	Al	52	ΑI	52	nvoB1_State_XXX	SNVT_count_f		
BLR1_Ann_Lockout	R R	ΑI	53 54	ΑI	53	nvoB1_AnnLck_XXX	SNVT_count_f SNVT_count_f		
BLR1_Ann_Hold	R	Al	54 55	AI DI	54	nvoB1_AnnHld_XXX			
ALR_BLR1SupplyHigh	Г	BI	ນວ	וט	55	nvoALRB1SpHi_XXX	SNVT_switch		

Page 61 of 69 Part Number 106417-01

		BAC	Cnet	N2		LonWorks		
	Read/	Data	Data	Data	Pt			
Point Name	Write	Туре	ld	Туре	Addr	Lon Name	Lon SNVT Type	
ALR LeadBLR1Fault	R	BI	56	DI	56	nvoALRLdB1FI XXX	SNVT switch	
ALR BLR1StartFault	R	BI	57	DI	57	nvoALRB1StFI XXX	SNVT switch	
ALR BLR1Lockout	R	BI	58	DI	58	nvoALRB1Lkot XXX	SNVT switch	
ALR BLR1lost	R	BI	59	DI	59	nvoALRB1lost XXX	SNVT switch	
ALR BLR1Mod Source	R	BI	60	DI	60	nvoALRB1MdSr XXX	SNVT switch	
ALR BLR1DMD Source	R	BI	61	DI	61	nvoALRB1DmSr XXX	SNVT switch	
ALR S78001Lost	R	BI	223	DI	223	nvoALR1Lost XXX	SNVT switch	
BLR2_Supply	R	Al	62	Al	62	nvoB2 Sup XXX	SNVT temp p	
BLR2 Return	R	Al	63	Al	63	nvoB2_Gdp_XXX	SNVT_temp_p	
BLR2 Stack	R	Al	64	Al	64	nvoB2_Ret_XXX	SNVT_temp_p	
BLR2 CH Mod Rate	R	Al	65	Al	65	nvoB2_CHMdRt XXX	SNVT lev percent	
BLR2 Rate Commanded	R	Al	66	Al	66	nvoB2_CriMdRt_XXX	SNVT lev percent	
BLR2 CH Mod Stat	R	BI	69	DI	69	nvoB2_RteChid_XXX	SNVT_lev_percent	
BLR2 General Alarm	R	BI	70	DI	70		SNVT switch	
	R	BI	71	DI	71	nvoB2_GenAlm_XXX	SNVT_switch	
BLR2_Boiler_Pump	R		72		72	nvoB2_BlrPmp_XXX		
BLR2_System_Pump	R	BI	73	DI	73	nvoB2_SysPmp_XXX nvoB2_PmpSta_XXX	SNVT_switch	
BLR2_Pump_Status		BI		DI			SNVT_switch	
BLR2_Flame	R	BI	74	DI	74	nvoB2_Flame_XXX	SNVT_switch	
BLR2_State	R	Al	75	Al	75	nvoB2_State_XXX	SNVT_count_f	
BLR2_Ann_Lockout	R	Al	76	Al	76	nvoB2_AnnLck_XXX	SNVT_count_f	
BLR2_Ann_Hold	R	Al	77	Al	77	nvoB2_AnnHld_XXX	SNVT_count_f	
ALR_BLR2SupplyHigh	R	BI	78	DI	78	nvoALRB2SpHi_XXX	SNVT_switch	
ALR_LeadBLR2Fault	R	BI	79	DI	79	nvoALRLdB2FI_XXX	SNVT_switch	
ALR_BLR2StartFault	R	BI	80	DI	80	nvoALRB2StFI_XXX	SNVT_switch	
ALR_BLR2Lockout	R	BI	81	DI	81	nvoALRB2Lkot_XXX	SNVT_switch	
ALR_BLR2lost	R	BI	82	DI	82	nvoALRB2lost_XXX	SNVT_switch	
ALR_BLR2Mod_Source	R	BI	83	DI	83	nvoALRB2MdSr_XXX	SNVT_switch	
ALR_BLR2DMD_Source	R	BI	84	DI	84	nvoALRB2DmSr_XXX	SNVT_switch	
ALR_S78002Lost	R	BI	224	DI	224	nvoALR2Lost_XXX	SNVT_switch	
BLR3_Supply	R	Al	85	Al	85	nvoB3_Sup_XXX	SNVT_temp_p	
BLR3_Return	R	Al	86	Al	86	nvoB3_Ret_XXX	SNVT_temp_p	
BLR3_Stack	R	Al	87	Al	87	nvoB3_Stk_XXX	SNVT_temp_p	
BLR3_CH_Mod_Rate	R	Al	88	Al	88	nvoB3_CHMdRt_XXX	SNVT_lev_percent	
BLR3_Rate_Commanded	R	Al	89	Al	89	nvoB3_RteCmd_XXX	SNVT_lev_percent	
BLR3_CH_Mod_Stat	R	BI	92	DI	92	nvoB3_CHMdSt_XXX	SNVT_switch	
BLR3_General_Alarm	R	BI	93	DI	93	nvoB3_GenAlm_XXX	SNVT_switch	
BLR3_Boiler_Pump	R	BI	94	DI	94	nvoB3_BlrPmp_XXX	SNVT_switch	
BLR3_System_Pump	R	BI	95	DI	95	nvoB3_SysPmp_XXX	SNVT_switch	
BLR3_Pump_Status	R	BI	96	DI	96	nvoB3_PmpSta_XXX	SNVT_switch	
BLR3_Flame	R	BI	97	DI	97	nvoB3_Flame_XXX	SNVT_switch	
BLR3_State	R	Al	98	Al	98	nvoB3_State_XXX	SNVT_count_f	
BLR3_Ann_Lockout	R	Al	99	Al	99	nvoB3_AnnLck_XXX	SNVT_count_f	
BLR3_Ann_Hold	R	Al	100	Al	100	nvoB3_AnnHld_XXX	SNVT_count_f	
ALR_BLR3SupplyHigh	R	BI	101	DI	101	nvoALRB3SpHi XXX	SNVT switch	
ALR LeadBLR3Fault	R	BI	102	DI	102	nvoALRLdB3FI XXX	SNVT switch	
ALR BLR3StartFault	R	BI	103	DI	103	nvoALRB3StFI XXX	SNVT switch	
ALR BLR3Lockout	R	BI	104	DI	104	nvoALRB3Lkot XXX	SNVT switch	
ALR BLR3lost	R	BI	105	DI	105	nvoALRB3lost XXX	SNVT switch	
ALR BLR3Mod Source	R	BI	106	DI	106	nvoALRB3MdSr XXX	SNVT switch	
ALR BLR3DMD Source	R	BI	107	DI	107	nvoALRB3DmSr XXX	SNVT_switch	
ALR_S78003Lost	R	BI	225	DI	225	nvoALR3Lost XXX	SNVT switch	
BLR4 Supply	R	Al	108	Al	108	nvoB4 Sup XXX	SNVT_temp_p	
BLR4 Return	R	Al	100	Al	109	nvoB4_Sup_XXX	SNVT_temp_p	
BLR4 Stack	R	Al	110	Al	110	nvoB4_Ret_XXX	SNVT_temp_p	
BLR4_Stack BLR4 CH Mod Rate	R	Al	111	Al	111	nvoB4_Stk_XXX	SNVT_lev_percent	
DEIX4_CIT_MOU_Rate	_ TN	Δı	1111	ΔI	[111	LINOD#_CLINIUKI_XXX	Ouvilev_percent	

Page 62 of 69 Part Number 106417-01

		BAC	Cnet	N	2	LonWo	orks
	Read/	Data	Data	Data	Pt		
Point Name	Write	Туре	Id	Type		Lon Name	Lon SNVT Type
BLR4 Rate Commanded	R	Al	112	Al	112	nvoB4 RteCmd XXX	SNVT lev percent
	R	BI	115	DI	115		
BLR4_CH_Mod_Stat	R					nvoB4_CHMdSt_XXX	SNVT_switch
BLR4_General_Alarm		BI	116	DI	116	nvoB4_GenAlm_XXX	SNVT_switch
BLR4_Boiler_Pump	R	BI	117	DI	117	nvoB4_BlrPmp_XXX	SNVT_switch
BLR4_System_Pump	R	BI	118	DI	118	nvoB4_SysPmp_XXX	SNVT_switch
BLR4_Pump_Status	R	BI	119	DI	119	nvoB4_PmpSta_XXX	SNVT_switch
BLR4_Flame	R	BI	120	DI	120	nvoB4_Flame_XXX	SNVT_switch
BLR4_State	R	Al	121	Al	121	nvoB4_State_XXX	SNVT_count_f
BLR4_Ann_Lockout	R	Al	122	Al	122	nvoB4_AnnLck_XXX	SNVT_count_f
BLR4_Ann_Hold	R	Al	123	Al	123	nvoB4_AnnHld_XXX	SNVT_count_f
ALR_BLR4SupplyHigh	R	BI	124	DI	124	nvoALRB4SpHi_XXX	SNVT_switch
ALR_LeadBLR4Fault	R	BI	125	DI	125	nvoALRLdB4FI_XXX	SNVT_switch
ALR_BLR4StartFault	R	BI	126	DI	126	nvoALRB4StFI_XXX	SNVT_switch
ALR_BLR4Lockout	R	BI	127	DI	127	nvoALRB4Lkot_XXX	SNVT_switch
ALR_BLR4lost	R	BI	128	DI	128	nvoALRB4lost_XXX	SNVT_switch
ALR_BLR4Mod_Source	R	BI	129	DI	129	nvoALRB4MdSr_XXX	SNVT_switch
ALR_BLR4DMD_Source	R	BI	130	DI	130	nvoALRB4DmSr_XXX	SNVT_switch
ALR_S78004Lost	R	BI	226	DI	226	nvoALR4Lost_XXX	SNVT_switch
BLR5_Supply	R	ΑI	131	Al	131	nvoB5_Sup_XXX	SNVT_temp_p
BLR5_Return	R	ΑI	132	ΑI	132	nvoB5_Ret_XXX	SNVT_temp_p
BLR5_Stack	R	ΑI	133	ΑI	133	nvoB5_Stk_XXX	SNVT_temp_p
BLR5 CH Mod Rate	R	ΑI	134	ΑI	134	nvoB5 CHMdRt XXX	SNVT lev percent
BLR5 Rate Commanded	R	ΑI	135	ΑI	135	nvoB5 RteCmd XXX	SNVT_lev_percent
BLR5 CH Mod Stat	R	BI	138	DI	138	nvoB5 CHMdSt XXX	SNVT switch
BLR5 General Alarm	R	BI	139	DI	139	nvoB5 GenAlm XXX	SNVT switch
BLR5 Boiler Pump	R	BI	140	DI	140	nvoB5 BlrPmp XXX	SNVT switch
BLR5 System Pump	R	BI	141	DI	141	nvoB5_SysPmp_XXX	SNVT switch
BLR5 Pump Status	R	BI	142	DI	142	nvoB5 PmpSta XXX	SNVT switch
BLR5 Flame	R	BI	143	DI	143	nvoB5 Flame XXX	SNVT switch
BLR5 State	R	ΑI	144	ΑI	144	nvoB5 State XXX	SNVT count f
BLR5 Ann Lockout	R	ΑI	145	ΑI	145	nvoB5 AnnLck XXX	SNVT count f
BLR5 Ann Hold	R	Al	146	ΑI	146	nvoB5_AnnHld_XXX	SNVT count f
ALR_BLR5SupplyHigh	R	BI	147	DI	147	nvoALRB5SpHi XXX	SNVT switch
ALR LeadBLR5Fault	R	ВІ	148	DI	148	nvoALRLdB5FI XXX	SNVT switch
ALR_BLR5StartFault	R	BI	149	DI	149	nvoALRB5StFI_XXX	SNVT_switch
ALR BLR5Lockout	R	BI	150	DI	150	nvoALRB5Lkot XXX	SNVT switch
ALR BLR5lost	R	BI	151	DI	151	nvoALRB5lost XXX	SNVT switch
ALR BLR5Mod Source	R	BI	152	DI	152	nvoALRB5MdSr XXX	SNVT switch
ALR BLR5DMD Source	R	BI	153	DI	153	nvoALRB5DmSr XXX	SNVT switch
ALR S78005Lost	R	BI	227	DI	227	nvoALR5Lost XXX	SNVT_switch
BLR6 Supply	R	Al	154	Al	154	nvoB6 Sup XXX	SNVT_temp_p
BLR6 Return	R	Al	155	Al	155	nvoB6 Ret XXX	SNVT_temp_p
BLR6 Stack	R	Al	156	Al	156	nvoB6 Stk XXX	SNVT_temp_p
BLR6 CH Mod Rate	R	Al	157	Al	157	nvoB6 CHMdRt XXX	SNVT lev percent
BLR6 Rate Commanded	R	Al	158	Al	158	nvoB6 RteCmd XXX	SNVT lev percent
BLR6 CH Mod Stat	R	BI	161	DI	161	nvoB6 CHMdSt XXX	SNVT switch
BLR6 General Alarm	R	BI	162	DI	162	nvoB6_GenAlm_XXX	SNVT_switch
BLR6 Boiler Pump	R	BI	163	DI	163	nvoB6_BlrPmp_XXX	SNVT_switch
BLR6 System Pump	R	BI	164	DI	164	nvoB6_SysPmp_XXX	SNVT switch
BLR6 Pump Status	R	BI	165	DI	165	nvoB6 PmpSta XXX	SNVT_switch
BLR6 Flame	R	BI	166	DI	166	nvoB6 Flame XXX	SNVT_switch
BLR6 State	R	Al	167	Al	167	nvoB6 State XXX	SNVT count f
BLR6 Ann Lockout	R	Al	168	Al	168	nvoB6 AnnLck XXX	SNVT_count_f
BLR6 Ann Hold	R	Al	169	Al	169	nvoB6 AnnHld XXX	SNVT count f
ALR BLR6SupplyHigh	R	BI	170	DI	170	nvoALRB6SpHi XXX	SNVT_count_1
/ LET _ DET (OCUPPI) I light	1.	וט	170	וטו	170	I 1140/ (ELEDOOPI II AAA	CIAN I SWITCH

Page 63 of 69 Part Number 106417-01

		BAC	Cnet	N	12	LonWo	orks
	Read/	Data	Data	Data	Pt		
Point Name	Write	Туре	ld	Туре	Addr	Lon Name	Lon SNVT Type
ALR_LeadBLR6Fault		BI	171	DI	171	nvoALRLdB6FI_XXX	SNVT_switch
ALR_BLR6StartFault		ВІ	172	DI	172	nvoALRB6StFI_XXX	SNVT_switch
ALR_BLR6Lockout		BI	173	DI	173	nvoALRB6Lkot_XXX	SNVT_switch
ALR_BLR6lost		ВІ	174	DI	174	nvoALRB6lost_XXX	SNVT_switch
ALR_BLR6Mod_Source		ВІ	175	DI	175	nvoALRB6MdSr_XXX	SNVT_switch
ALR_BLR6DMD_Source		ВІ	176	DI	176	nvoALRB6DmSr_XXX	SNVT_switch
ALR_S78006Lost		ВІ	228	DI	228	nvoALR6Lost_XXX	SNVT_switch
BLR7_Supply		ΑI	177	Al	177	nvoB7_Sup_XXX	SNVT_temp_p
BLR7_Return		ΑI	178	Al	178	nvoB7_Ret_XXX	SNVT_temp_p
BLR7_Stack		ΑI	179	Al	179	nvoB7_Stk_XXX	SNVT_temp_p
BLR7_CH_Mod_Rate		ΑI	180	Al	180	nvoB7_CHMdRt_XXX	SNVT_lev_percent
BLR7_Rate_Commanded		ΑI	181	Al	181	nvoB7_RteCmd_XXX	SNVT_lev_percent
BLR7_CH_Mod_Stat		ВІ	184	DI	184	nvoB7_CHMdSt_XXX	SNVT_switch
BLR7_General_Alarm		ВІ	185	DI	185	nvoB7_GenAlm_XXX	SNVT_switch
BLR7_Boiler_Pump		ВІ	186	DI	186	nvoB7_BlrPmp_XXX	SNVT_switch
BLR7_System_Pump		BI	187	DI	187	nvoB7_SysPmp_XXX	SNVT_switch
BLR7_Pump_Status		BI	188	DI	188	nvoB7_PmpSta_XXX	SNVT_switch
BLR7_Flame		BI	189	DI	189	nvoB7_Flame_XXX	SNVT_switch
BLR7_State		ΑI	190	Al	190	nvoB7_State_XXX	SNVT_count_f
BLR7_Ann_Lockout		Al	191	Al	191	nvoB7_AnnLck_XXX	SNVT_count_f
BLR7_Ann_Hold		ΑI	192	Al	192	nvoB7_AnnHld_XXX	SNVT_count_f
ALR_BLR7SupplyHigh		BI	193	DI	193	nvoALRB7SpHi_XXX	SNVT_switch
ALR_LeadBLR7Fault		BI	194	DI	194	nvoALRLdB7FI_XXX	SNVT_switch
ALR_BLR7StartFault		BI	195	DI	195	nvoALRB7StFI_XXX	SNVT_switch
ALR_BLR7Lockout		BI	196	DI	196	nvoALRB7Lkot_XXX	SNVT_switch
ALR_BLR7lost		BI	197	DI	197	nvoALRB7lost_XXX	SNVT_switch
ALR_BLR7Mod_Source		BI	198	DI	198	nvoALRB7MdSr_XXX	SNVT_switch
ALR_BLR7DMD_Source		BI	199	DI	199	nvoALRB7DmSr_XXX	SNVT_switch
ALR_S78007Lost		BI	229	DI	229	nvoALR7Lost_XXX	SNVT_switch
BLR8_Supply		Al	200	Al	200	nvoB8_Sup_XXX	SNVT_temp_p
BLR8_Return		ΑI	201	Al	201	nvoB8_Ret_XXX	SNVT_temp_p
BLR8_Stack		ΑI	202	Al	202	nvoB8_Stk_XXX	SNVT_temp_p
BLR8_CH_Mod_Rate		ΑI	203	Al	203	nvoB8_CHMdRt_XXX	SNVT_lev_percent
BLR8_Rate_Commanded		Al	204	Al	204	nvoB8_RteCmd_XXX	SNVT_lev_percent
BLR8_CH_Mod_Stat		ВІ	207	DI	207	nvoB8_CHMdSt_XXX	SNVT_switch
BLR8_General_Alarm		ВІ	208	DI	208	nvoB8_GenAlm_XXX	SNVT_switch
BLR8_Boiler_Pump		ВІ	209	DI	209	nvoB8_BlrPmp_XXX	SNVT_switch
BLR8_System_Pump		ВІ	210	DI	210	nvoB8_SysPmp_XXX	SNVT_switch
BLR8_Pump_Status		ВІ	211	DI	211	nvoB8_PmpSta_XXX	SNVT_switch
BLR8_Flame		ВІ	212	DI	212	nvoB8_Flame_XXX	SNVT_switch
BLR8_State		Al	213	Al	213	nvoB8_State_XXX	SNVT_count_f
BLR8_Ann_Lockout		Al	214	Al	214	nvoB8_AnnLck_XXX	SNVT_count_f
BLR8_Ann_Hold		ΑI	215	Al	215	nvoB8_AnnHld_XXX	SNVT_count_f

Page 64 of 69 Part Number 106417-01

		BAG	Cnet	N	2	LonWorks	BACnet
Point Name	Read/ Write	Data Type	Data Id	Data Type	Pt Addr	Lon Name	Lon SNVT Type
ALR_BLR8SupplyHigh		ВІ	216	DI	216	nvoALRB8SpHi_XXX	SNVT_switch
ALR_LeadBLR8Fault		ВІ	217	DI	217	nvoALRLdB8FI_XXX	SNVT_switch
ALR_BLR8StartFault		ВІ	218	DI	218	nvoALRB8StFI_XXX	SNVT_switch
ALR_BLR8Lockout		ВІ	219	DI	219	nvoALRB8Lkot_XXX	SNVT_switch
ALR_BLR8lost		ВІ	220	DI	220	nvoALRB8lost_XXX	SNVT_switch
ALR_BLR8Mod_Source		ВІ	221	DI	221	nvoALRB8MdSr_XXX	SNVT_switch
ALR_BLR8DMD_Source		ВІ	222	DI	222	nvoALRB8DmSr_XXX	SNVT_switch
ALR_S78008Lost		ВІ	230	DI	230	nvoALR8Lost_XXX	SNVT_switch

Page 65 of 69 Part Number 106417-01

Appendix E. "A" Bank DIP Switch Settings

Address	A0	A1	A2	A3	A4	A5	A6	A7
1	On	Off	Off	Off	Off	Off	Off	Off
2	Off	On	Off	Off	Off	Off	Off	Off
3	On	On	Off	Off	Off	Off	Off	Off
4	Off	Off	On	Off	Off	Off	Off	Off
5		Off	_	Off	Off	Off	Off	Off
6	On Off		On	Off	Off	Off	Off	Off
7	On	On On	On On	Off	Off	Off	Off	Off
8	Off	Off	Off	On	Off	Off	Off	Off
9	On	Off	Off	On	Off	Off	Off	Off
10	Off	On	Off	On	Off	Off	Off	Off
11	On	On	Off	On	Off	Off	Off	Off
12	Off	Off	On	On	Off	Off	Off	Off
13	On	Off	On	On	Off	Off	Off	Off
14	Off	_		_		Off	Off	Off
15	On	On On	On On	On On	Off	Off	Off	Off
16	Off	Off	Off	Off	On	Off	Off	Off
17	On	Off	Off	Off	On	Off	Off	Off
18	Off	On	Off	Off	On	Off	Off	Off
19	On	On	Off	Off	On	Off	Off	Off
20	Off	Off	On	Off	On	Off	Off	Off
21	On	Off	On	Off	On	Off	Off	Off
22	Off	On	On	Off	On	Off	Off	Off
23	On	On	On	Off	On	Off	Off	Off
24	Off	Off	Off	On	On	Off	Off	Off
25	On	Off	Off	On	On	Off	Off	Off
26	Off	On	Off	On	On	Off	Off	Off
27	On	On	Off	On	On	Off	Off	Off
28	Off	Off	On	On	On	Off	Off	Off
29	On	Off	On	On	On	Off	Off	Off
30	Off	On	On	On	On	Off	Off	Off
31	On	On	On	On	On	Off	Off	Off
32	Off	Off	Off	Off	Off	On	Off	Off
33	On	Off	Off	Off	Off	On	Off	Off
34	Off	On	Off	Off	Off	On	Off	Off
35	On	On	Off	Off	Off	On	Off	Off
36	Off	Off	On	Off	Off	On	Off	Off
37	On	Off	On	Off	Off	On	Off	Off
38	Off	On	On	Off	Off	On	Off	Off
39	On	On	On	Off	Off	On	Off	Off
40	Off	Off	Off	On	Off	On	Off	Off
41	On	Off	Off	On	Off	On	Off	Off
42	Off	On	Off	On	Off	On	Off	Off
43	On	On	Off	On	Off	On	Off	Off
44	Off	Off	On	On	Off	On	Off	Off
45	On	Off	On	On	Off	On	Off	Off
46	Off	On	On	On	Off	On	Off	Off
47	On	On	On	On	Off	On	Off	Off
48	Off	Off	Off	Off	On	On	Off	Off

Address	A0	A1	A2	A3	A4	A5	A6	A7
49	On	Off	Off	Off	On	On	Off	Off
50	Off	On	Off	Off	On	On	Off	Off
51	On	On	Off	Off	On	On	Off	Off
52	Off	Off	On	Off	On	On	Off	Off
53	On	Off	On	Off	On	On	Off	Off
54	Off	On	On	Off	On	On	Off	Off
55	On	On	On	Off	On	On	Off	Off
56	Off	Off	Off	On	On	On	Off	Off
57	On	Off	Off	On	On	On	Off	Off
58	Off	On	Off	On	On	On	Off	Off
59	On	On	Off	On	On	On	Off	Off
60	Off	Off	On	On	On	On	Off	Off
61	On	Off	On	On	On	On	Off	Off
62	Off	On	On	On	On	On	Off	Off
63	On	On	On	On	On	On	Off	Off
64	Off	Off	Off	Off	Off	Off	On	Off
65	On	Off	Off	Off	Off	Off	On	Off
66	Off	On	Off	Off	Off	Off	On	Off
67	On	On	Off	Off	Off	Off	On	Off
68	Off	Off	On	Off	Off	Off	On	Off
69	On	Off	On	Off	Off	Off	On	Off
70	Off	On	On	Off	Off	Off	On	Off
71	On	On	On	Off	Off	Off	On	Off
72	Off	Off	Off	On	Off	Off	On	Off
73	On	Off	Off	On	Off	Off	On	Off
74	Off	On	Off	On	Off	Off	On	Off
75	On	On	Off	On	Off	Off	On	Off
76	Off	Off	On	On	Off	Off	On	Off
77	On	Off	On	On	Off	Off	On	Off
78	Off	On	On	On	Off	Off	On	Off
79	On	On	On	On	Off	Off	On	Off
80	Off	Off	Off	Off	On	Off	On	Off
81	On	Off	Off	Off	On	Off	On	Off
82	Off	On	Off	Off	On	Off	On	Off
83	On	On	Off	Off	On	Off	On	Off
84	Off	Off	On	Off	On	Off	On	Off
85	On	Off	On	Off	On	Off	On	Off
86	Off	On	On	Off	On	Off	On	Off
87	On	On	On	Off	On	Off	On	Off
88	Off	Off	Off	On	On	Off	On	Off
89	On	Off	Off	On	On	Off	On	Off
90	Off	On	Off	On	On	Off	On	Off
91	On	On	Off	On	On	Off	On	Off
92	Off	Off	On	On	On	Off	On	Off
93	On	Off	On	On	On	Off	On	Off
94	Off	On	On	On	On	Off	On	Off
95	On	On	On	On	On	Off	On	Off
96	Off	Off	Off	Off	Off	On	On	Off

Page 66 of 69 Part Number 106417-01

97 On Off Off Off Off On On On Off 98 Off On Off Off Off Off On On Off Off O	Address	A0	A1	A2	A3	A4	A5	A6	A7
98	97	On	Off	Off	Off	Off	On	On	Off
99	98	Off	On	Off	Off	Off	On	On	Off
100		On	_				_	_	
101				_			_	_	
102							_		
103									
104							_	_	
105							_	_	
106					_		_	_	
107									
108				_			_		
109			_					_	
110				_	_		_	_	
111 On On On Off On On Off Off Off On On On Off Off On On On Off Off On On On Off On On On On Off On			_	_			_	_	
112 Off Off Off Off On On On Off 113 On Off Off Off On On On Off 114 Off On Off Off On On On Off 115 On On Off Off On On On Off 116 Off Off On Off On On<			_				_	_	_
113 On Off Off Off On On On Off 114 Off On Off Off On On On Off 115 On On On Off On On On Off 116 Off Off On On On On On Off 116 Off Off On				_					
114 Off On Off Off On On On Off 115 On On On Off On On On On Off 116 Off Off On				_			_	_	
115 On On Off Off On On On Off 116 Off Off On Off On On On On Off 117 On Off On Off On On On Off 118 Off On On Off On On On On 119 On On On Off On						_	_	_	
116 Off Off On Off On On On Off 117 On Off On Off On On On Off 118 Off On On Off On On On Off 119 On On On On On On On On 120 Off Off Off On On On On On 120 Off Off Off On On On On On On 122 Off On Off On On </td <td></td> <td></td> <td>_</td> <td></td> <td></td> <td>_</td> <td>_</td> <td>_</td> <td></td>			_			_	_	_	
117 On Off On Off On On Off 118 Off On On Off On On On Off 119 On							_	_	
118 Off On On Off On On Off 119 On On On Off On On On Off 120 Off Off Off On									
119 On On On Off On On On Off 120 Off Off Off On <				_				_	
120 Off Off Off On On On On Off 121 On Off Off On On On On On Off 122 Off On Off On On On On Off 123 On On Off On On On On On On On On Off 124 Off Off On On On On On On On On On Off On		_	_	_		_	_	_	
121 On Off Off On On On On Off On On On Off On On On Off On On On On Off On				On	Off	On	On	On	
122 Off On Off On On					On	On	On	On	_
123 On On Off On On On On Off 124 Off Off On On <t< td=""><td></td><td></td><td>Off</td><td>_</td><td>On</td><td></td><td>On</td><td>On</td><td></td></t<>			Off	_	On		On	On	
124 Off Off On On On On On Off On On <td< td=""><td></td><td>Off</td><td>On</td><td>Off</td><td>On</td><td>On</td><td>On</td><td>On</td><td>Off</td></td<>		Off	On	Off	On	On	On	On	Off
125 On Off On On On On On On Off On	123	On	On	Off	On	On	On	On	Off
126 Off On On On On On On Off 127 On On On On On On On On Off 128 Off Off<	124	Off	Off	On	On	On	On	On	Off
127 On On On On On On On On Off Off Off Off Off Off Off Off Off On Off Off On		On	Off	On	On	On	On	On	
128 Off Off <td>126</td> <td>Off</td> <td>On</td> <td>On</td> <td>On</td> <td>On</td> <td>On</td> <td>On</td> <td>Off</td>	126	Off	On	On	On	On	On	On	Off
129 On Off	127	On	Off						
130 Off On Off	128	Off	Off		Off	Off	Off	Off	On
131 On On Off Off Off Off Off Off Off Off Off On Off Off Off Off On Off Off Off Off Off On On </td <td>129</td> <td>On</td> <td>Off</td> <td>Off</td> <td>Off</td> <td>Off</td> <td>Off</td> <td>Off</td> <td>On</td>	129	On	Off	Off	Off	Off	Off	Off	On
132 Off Off On Off Off Off Off Off On 133 On Off On Off	130	Off	On	Off	Off	Off	Off	Off	On
133 On Off On Off	131	On	On	Off	Off	Off	Off	Off	On
134 Off On On Off Off Off Off Off On	132	Off	Off	On	Off	Off	Off	Off	On
135 On On On Off Off Off Off On 136 Off Off Off On Off Off Off On 137 On Off Off On Off Off Off On 138 Off On Off On Off Off Off Off On 139 On On Off On Off Off Off On 140 Off Off On Off Off Off Off On 141 On Off On On Off Off Off On 142 Off On On On Off Off Off On 143 On On On Off Off Off On 144 Off Off Off Off On Off Off On </td <td>133</td> <td>On</td> <td>Off</td> <td>On</td> <td>Off</td> <td>Off</td> <td>Off</td> <td>Off</td> <td>On</td>	133	On	Off	On	Off	Off	Off	Off	On
136 Off Off Off On Off Off Off On 137 On Off Off On Off Off Off Off On 138 Off On Off On Off Off Off Off On 139 On On Off On Off Off Off On 140 Off Off On On Off Off Off Off On 141 On Off On On Off Off Off On 142 Off On On On Off Off Off On 143 On On On Off Off Off On On 144 Off Off Off On Off On Off On On On On On On On On <t< td=""><td>134</td><td>Off</td><td>On</td><td>On</td><td>Off</td><td>Off</td><td>Off</td><td>Off</td><td>On</td></t<>	134	Off	On	On	Off	Off	Off	Off	On
137 On Off Off On Off Off Off On 138 Off On Off On Off Off Off Off On 139 On On Off On Off Off Off On 140 Off Off On On Off Off Off On 141 On Off On On Off Off Off On 142 Off On On On Off Off Off On 143 On On On Off Off Off On On 144 Off Off Off Off On Off On On <td>135</td> <td>On</td> <td>On</td> <td>On</td> <td>Off</td> <td>Off</td> <td>Off</td> <td>Off</td> <td>On</td>	135	On	On	On	Off	Off	Off	Off	On
138 Off On Off On Off Off Off Off Off Off Off Off On 139 On On Off On Off Off Off On Off Off Off On On Off Off Off On On Off Off Off On On On Off Off Off On	136	Off	Off	Off	On	Off	Off	Off	On
139 On On Off On Off Off Off On 140 Off Off On On Off Off Off On 141 On Off On On Off Off Off On 142 Off On On On Off Off Off On 143 On On On On Off Off Off On 144 Off Off Off Off On Off Off On	137	On	Off	Off	On	Off	Off	Off	On
140 Off Off On On Off Off Off On 141 On Off On On Off Off Off On 142 Off On On On Off Off Off On 143 On On On Off Off Off Off On 144 Off Off Off On Off On Off On	138	Off	On	Off	On	Off	Off	Off	On
141 On Off On On Off Off Off On 142 Off On On On Off Off Off On 143 On On On On Off Off Off On 144 Off Off Off On Off Off Off On	139	On	On	Off	On	Off	Off	Off	On
142 Off On On On Off Off Off On 143 On On On On Off Off Off On 144 Off Off Off Off On Off Off On	140	Off	Off	On	On	Off	Off	Off	On
143 On On On On Off Off Off On 144 Off Off Off Off On Off Off On	141	On	Off	On	On	Off	Off	Off	On
144 Off Off Off Off On Off Off On	142	Off	On	On	On	Off	Off	Off	On
	143	On	On	On	On	Off	Off	Off	On
145 On Off Off Off On Off Off On	144	Off	Off	Off	Off	On	Off	Off	On
	145	On	Off	Off	Off	On	Off	Off	On

Address	A0	A1	A2	A3	A4	A5	A6	A7
146	Off	On	Off	Off	On	Off	Off	On
147	On	On	Off	Off	On	Off	Off	On
148	Off	Off	On	Off	On	Off	Off	On
149	On	Off	On	Off	On	Off	Off	On
150	Off	On	On	Off	On	Off	Off	On
151	On	On	On	Off	On	Off	Off	On
152	Off	Off	Off	On	On	Off	Off	On
153	On	Off	Off	On	On	Off	Off	On
154	Off	On	Off	On	On	Off	Off	On
155	On	On	Off	On	On	Off	Off	On
156	Off	Off	On	On	On	Off	Off	On
157	On	Off	On	On	On	Off	Off	On
158	Off	On	On	On	On	Off	Off	On
159	On	On	On	On	On	Off	Off	On
160	Off	Off	Off	Off	Off	On	Off	On
161	On	Off	Off	Off	Off	On	Off	On
162	Off	On	Off	Off	Off	On	Off	On
163	On	On	Off	Off	Off	On	Off	On
164	Off	Off	On	Off	Off	On	Off	On
165	On	Off	On	Off	Off	On	Off	On
166	Off	On	On	Off	Off	On	Off	On
167	On	On	On	Off	Off	On	Off	On
168	Off	Off	Off	On	Off	On	Off	On
169	On	Off	Off	On	Off	On	Off	On
170	Off	On	Off	On	Off	On	Off	On
171	On	On	Off	On	Off	On	Off	On
172	Off	Off	On	On	Off	On	Off	On
173	On	Off	On	On	Off	On	Off	On
174	Off	On	On	On	Off	On	Off	On
175	On	On	On	On	Off	On	Off	On
176	Off	Off	Off	Off	On	On	Off	On
177	On	Off	Off	Off	On	On	Off	On
178	Off	On	Off	Off	On	On	Off	On
179	On	On	Off	Off	On	On	Off	On
180	Off	Off	On	Off	On	On	Off	On
181	On	Off	On	Off	On	On	Off	On
182	Off	On	On	Off	On	On	Off	On
183	On	On	On	Off	On	On	Off	On
184	Off	Off	Off	On	On	On	Off	On
185	On	Off	Off	On	On	On	Off	On
186	Off	On	Off	On	On	On	Off	On
187	On	On	Off	On	On	On	Off	On
188	Off	Off	On	On	On	On	Off	On
189	On	Off	On	On	On	On	Off	On
190	Off	On	On	On	On	On	Off	On
191	On	On	On	On	On	On	Off	On
192	Off	Off	Off	Off	Off	Off	On	On
193	On	Off	Off	Off	Off	Off	On	On
194	Off	On	Off	Off	Off	Off	On	On

Address	A0	A1	A2	А3	A4	A5	A6	A7
195	On	On	Off	Off	Off	Off	On	On
196	Off	Off	On	Off	Off	Off	On	On
197	On	Off	On	Off	Off	Off	On	On
198	Off	On	On	Off	Off	Off	On	On
199	On	On	On	Off	Off	Off	On	On
200	Off	Off	Off	On	Off	Off	On	On
201	On	Off	Off	On	Off	Off	On	On
202	Off	On	Off	On	Off	Off	On	On
203	On	On	Off	On	Off	Off	On	On
204	Off	Off	On	On	Off	Off	On	On
205	On	Off	On	On	Off	Off	On	On
206	Off	On	On	On	Off	Off	On	On
207	On	On	On	On	Off	Off	On	On
208	Off	Off	Off	Off	On	Off	On	On
209	On	Off	Off	Off	On	Off	On	On
210	Off	On	Off	Off	On	Off	On	On
211	On	On	Off	Off	On	Off	On	On
212	Off	Off	On	Off	On	Off	On	On
213	On	Off	On	Off	On	Off	On	On
214	Off	On	On	Off	On	Off	On	On
215	On	On	On	Off	On	Off	On	On
216	Off	Off	Off	On	On	Off	On	On
217	On	Off	Off	On	On	Off	On	On
218	Off	On	Off	On	On	Off	On	On
219	On	On	Off	On	On	Off	On	On
220	Off	Off	On	On	On	Off	On	On
221	On	Off	On	On	On	Off	On	On
222	Off	On	On	On	On	Off	On	On
223	On	On	On	On	On	Off	On	On
224	Off	Off	Off	Off	Off	On	On	On
225	On	Off	Off	Off	Off	On	On	On
226	Off	On	Off	Off	Off	On	On	On
227	On	On	Off	Off	Off	On	On	On
228	Off	Off	On	Off	Off	On	On	On
229	On	Off	On	Off	Off	On	On	On
230	Off	On	On	Off	Off	On	On	On
231	On	On	On	Off	Off	On	On	On
232	Off	Off	Off	On	Off	On	On	On
233	On	Off	Off	On	Off	On	On	On
234	Off	On	Off	On On	Off	On On	On	On On
236	On Off	On Off	On	On	Off	On	On On	On
237		Off		On	Off	_		On
238	On Off	On	On On	On	Off	On	On	On
239	On	On	On	On	Off	On On	On On	On
240	Off	Off	Off	Off	On	On	On	On
240	On	Off	Off	Off	On	On	On	On
241	Off	On	Off	Off		On		_
242			Off	Off	On		On	On On
243	On	On	Oil	Oil	On	On	On	OII

Address	A0	A1	A2	A3	A4	A5	A6	A7
244	Off	Off	On	Off	On	On	On	On
245	On	Off	On	Off	On	On	On	On
246	Off	On	On	Off	On	On	On	On
247	On	On	On	Off	On	On	On	On
248	Off	Off	Off	On	On	On	On	On
249	On	Off	Off	On	On	On	On	On
250	Off	On	Off	On	On	On	On	On
251	On	On	Off	On	On	On	On	On
252	Off	Off	On	On	On	On	On	On
253	On	Off	On	On	On	On	On	On
254	Off	On	On	On	On	On	On	On
255	On	On	On	On	On	On	On	On

Universal	Gateway	Instruction	Manual
-----------	----------------	-------------	--------

Page 69 of 69 Part Number 106417-01